

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moukey](#) /

› [Moukey MEP-110 88-Key Semi-Weighted Electric Piano Instruction Manual](#)

Moukey MEP-110

Moukey MEP-110 88-Key Semi-Weighted Electric Piano Instruction Manual

Model: MEP-110

1. INTRODUCTION

Thank you for choosing the Moukey MEP-110 88-Key Semi-Weighted Electric Piano. This manual provides essential information for the safe and correct operation of your instrument. Please read it thoroughly before use and retain it for future reference.



EXCELLENT TOUCH RESPONSE

The MEP-110 digital piano have 88 premium full sized semi weighted keys



Adjustable touch
Response



Weighted
Keyboard



Better Playing
Experience

Image 1.1: The Moukey MEP-110 88-Key Semi-Weighted Electric Piano on its stand.

2. PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- 1 x Moukey MEP-110 Digital Piano
- 1 x Power Adapter
- 1 x Sustain Pedal
- 1 x Music Stand (for sheet music/tablet)

- 1 x Instruction Manual



Image 2.1: Included accessories with the Moukey MEP-110.

3. SETUP INSTRUCTIONS

3.1 Assembling the Piano and Stand

Place the Moukey MEP-110 digital piano securely on a compatible X-style keyboard stand. Ensure the stand is stable and the piano is centered to prevent accidental falls.

3.2 Connecting Power

Connect the provided power adapter to the DC 12V 3A power line socket on the rear panel of the piano. Plug the adapter into a standard electrical outlet.

3.3 Connecting the Sustain Pedal

Insert the sustain pedal cable into the 'SUSTAIN' pedal socket on the rear panel. This allows for sustained notes during play.

3.4 Audio Connections

- **Headphones:** For silent practice, connect standard headphones to the 'PHONE' output jack.
- **External Audio:** To connect to an amplifier or external speaker system, use the 'OUTPUT' jacks.

3.5 USB-MIDI Interface

The USB-MIDI interface allows you to connect the piano to a computer for MIDI data transfer, enabling use with music software or as a MIDI controller.

SUPPORT MULTIPLE DEVICES

MEET YOUR VARIOUS NEEDS

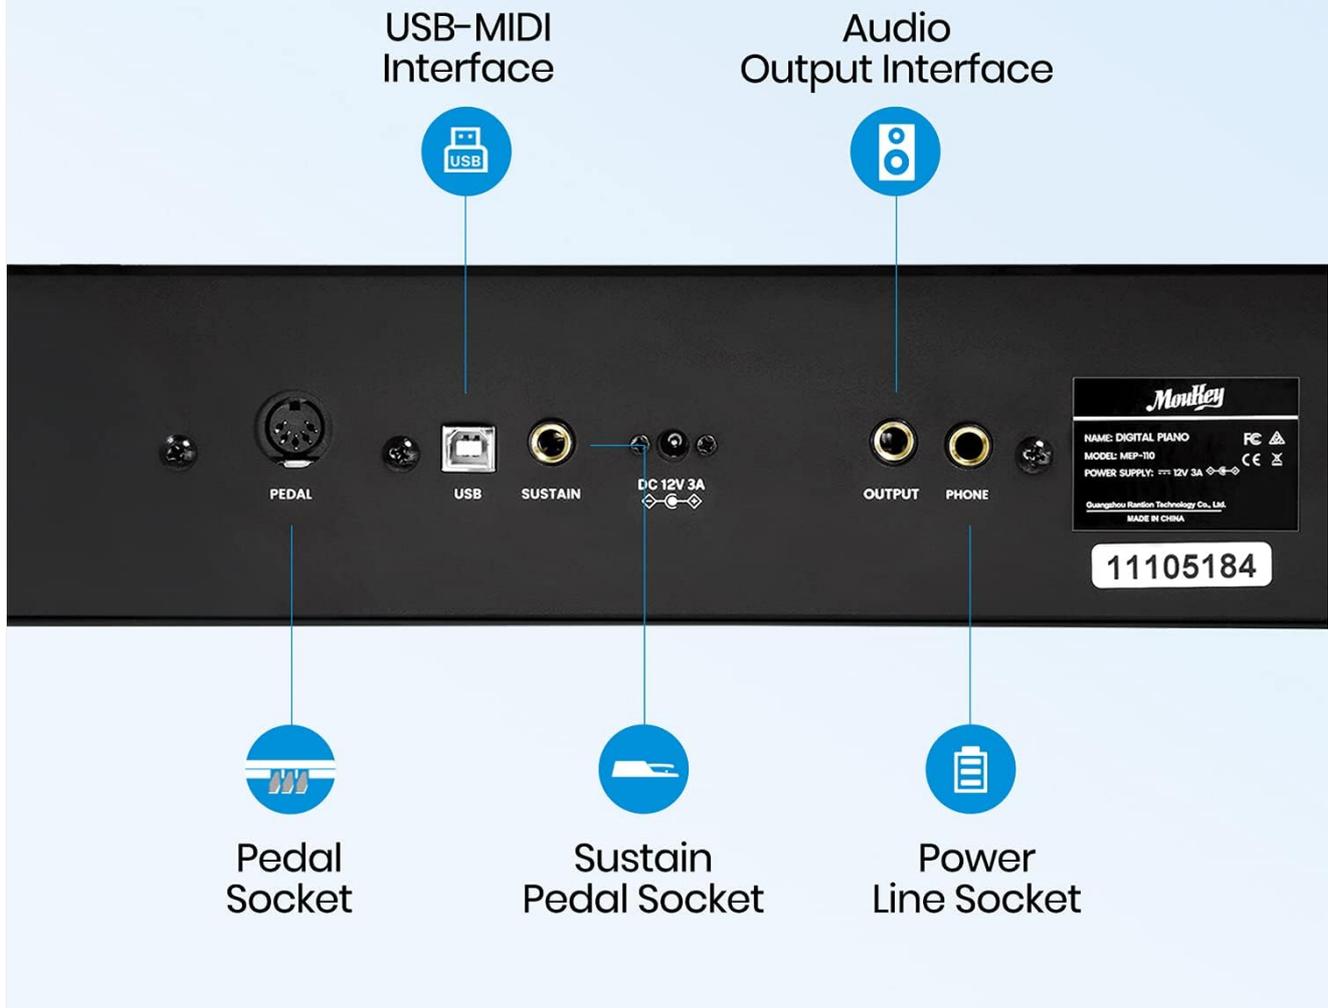


Image 3.1: Rear panel connections for the Moukey MEP-110.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Volume Control

Press the power button to turn the piano on or off. Adjust the master volume using the 'VOLUME' knob on the control panel.

4.2 Key Features and Functions

- **88 Semi-Weighted Keys:** The MEP-110 features 88 full-size semi-weighted keys, providing a realistic piano feel with adjustable touch response.
- **128 Premium Tones & 83 Rhythms:** Select from a wide range of instrument sounds and rhythmic accompaniments to enhance your playing.
- **43 Demonstration Songs:** Utilize the built-in demonstration songs for learning or enjoyment.
- **Teaching Functions:** Includes a demonstration music teaching mode and a dual keyboard mode, suitable for beginners and teaching scenarios.

- **Silent Practice Mode:** Connect headphones for private practice without disturbing others.
- **Metronome Function:** Use the metronome to practice with precise timing.
- **Keyboard Percussion:** Access various percussion sounds directly from the keyboard.
- **Dual Keyboard & Double Tone:** Play two different voices simultaneously or split the keyboard for duet playing.
- **Auto Chord:** Generate chords automatically to accompany your melodies.
- **Recording Function:** Record your performances directly on the piano.



Image 4.1: Excellent Touch Response of the MEP-110.

EXCELLENT & COMPLETE TEACHING FUNCTION

Especially suitable for teaching
activities side by side.



Dual Keyboard
Function



Teaching
Model

Image 4.2: Control panel and keys of the Moukey MEP-110.

RICH SOUND



43
Demo Songs



83
Rhythms



128
Premium
Tones



Image 4.3: Rich sound capabilities of the MEP-110.

SILENT PRACTICE MODE

Enjoy your own music world,
play what as you want.



Muting
Practice



Better Playing
Experience



Image 4.4: Silent practice mode with headphones.

4.3 Video Overview of Features

Watch this video for a visual guide to the Moukey MEP-110's features and functions:

Video 4.1: Overview of the Moukey MEP-110 88-Key Full-Size Semi-Weighted Electric Piano.

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the piano. Do not use abrasive cleaners, waxes, or

solvents.

- **Storage:** Store the piano in a dry, dust-free environment away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping or subjecting the piano to strong impacts.
- **Power:** Disconnect the power adapter when the piano is not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Volume too low; headphones connected; power issue.	Increase volume; disconnect headphones; check power connection.
Keys not responding	Incorrect mode selected; internal malfunction.	Check mode settings; power cycle the piano. If issue persists, contact support.
Sustain pedal not working	Pedal not connected properly; faulty pedal.	Ensure pedal is fully inserted into the 'SUSTAIN' jack. Test with another compatible pedal if available.
Distorted sound	Volume too high; faulty audio cable/speakers.	Lower volume; check audio connections and external equipment.

7. SPECIFICATIONS

Feature	Detail
Model Name	MEP-110
Number of Keys	88
Key Type	Semi-Weighted, Full-Size
Tones	128 Premium Tones
Rhythms	83 Rhythms
Demo Songs	43
Connectivity	USB-MIDI, Auxiliary Output, Headphone Output
Power Source	Corded Electric (DC 12V 3A)
Item Weight	9 Kilograms (19.8 pounds)
Package Dimensions	58.5 x 13.25 x 6 inches
Color	Black
Skill Level	Beginner
Special Feature	Portable

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Moukey website or contact your retailer.

Keep your purchase receipt as proof of purchase.