

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ledwood](#) /

› [LEDWOOD ACCESS100 Portable Bluetooth Speaker User Manual](#)

Ledwood ACCESS100

LEDWOOD ACCESS100 Portable Bluetooth Speaker User Manual

Model: ACCESS100 | Brand: Ledwood

INTRODUCTION

Thank you for purchasing the LEDWOOD ACCESS100 Portable Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The LEDWOOD ACCESS100 portable Bluetooth speaker, showcasing its cylindrical design and integrated carrying strap.

PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- 1 x LEDWOOD ACCESS100 Bluetooth Speaker
- 1 x Charging Cable (USB-A to Micro-USB)
- 1 x Audio Cable (3.5mm AUX)
- 1 x User Manual
- 1 x Carrying Strap



Image: The LEDWOOD ACCESS100 speaker shown within its retail packaging box.

PRODUCT OVERVIEW

Controls and Ports

Familiarize yourself with the speaker's controls and connection ports:



ACCESS100

LEDWGD

Image: A detailed view of the speaker's control panel, showing buttons and input ports.

1. **MicroSD Card Slot:** Insert a MicroSD card for direct music playback.
2. **USB Port:** Insert a USB flash drive for direct music playback.
3. **DC 5V Charging Port:** Connect the charging cable here.
4. **AUX Input:** Connect external audio devices using the 3.5mm audio cable.
5. **Previous Track / Volume Down (V-):** Short press for previous track, long press to decrease volume.
6. **Next Track / Volume Up (V+):** Short press for next track, long press to increase volume.
7. **Power Button:** Long press to power on/off. Short press to play/pause in Bluetooth/USB/MicroSD mode.
8. **Mode (M) Button:** Short press to switch between Bluetooth, AUX, USB, MicroSD, and FM Radio modes.
9. **Play/Pause / TWS Button:** Short press to play/pause. Long press to activate TWS pairing (in Bluetooth mode).

SETUP

Charging the Speaker

Before first use, fully charge the speaker.

- Connect the provided USB charging cable to the DC 5V port on the speaker.
- Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
- The charging indicator light will illuminate during charging and turn off when fully charged.

Powering On/Off

- To power on, long press the **Power Button** until you hear an audible prompt.
- To power off, long press the **Power Button** again until the speaker shuts down.

OPERATING INSTRUCTIONS

Bluetooth Mode

The speaker enters Bluetooth pairing mode automatically when powered on, or when selected via the Mode button.

- Ensure the speaker is powered on and in Bluetooth mode (indicated by an audible prompt).
- Enable Bluetooth on your smartphone, tablet, or other compatible device.
- Search for "LEDWOOD ACCESS100" in your device's Bluetooth settings and select it to pair.
- Once paired, you will hear a confirmation sound. You can now play audio from your device through the speaker.
- **Controls:**
 - Short press **Power Button** to Play/Pause.
 - Short press **V-** for Previous Track.
 - Short press **V+** for Next Track.
 - Long press **V-** to Decrease Volume.
 - Long press **V+** to Increase Volume.



Image: An icon representing wireless connectivity, indicating Bluetooth functionality.

True Wireless Stereo (TWS) Function

The TWS function allows you to pair two LEDWOOD ACCESS100 speakers together for a stereo sound experience.

- Ensure both ACCESS100 speakers are powered on and in Bluetooth mode, but not yet connected to any device.
- On one of the speakers (this will be the primary speaker), long press the **Play/Pause / TWS Button**. You will hear an indication sound.
- The two speakers will automatically search and pair with each other. Once successfully paired, you will hear a confirmation sound.
- Now, connect your smartphone or tablet to the primary speaker via Bluetooth as described in the "Bluetooth Mode" section.
- Audio will now play in stereo through both speakers.



Image: An icon representing True Wireless Stereo (TWS) functionality, showing two interconnected loops.

AUX Mode

Use the AUX mode to connect devices without Bluetooth capability.

- Connect one end of the 3.5mm audio cable to the AUX input port on the speaker.
- Connect the other end to the audio output jack of your external device (e.g., MP3 player, computer).
- Press the **Mode (M) Button** repeatedly until you hear the "AUX mode" prompt.
- Control playback and volume directly from your connected device.

USB / MicroSD Card Mode

Play music directly from a USB flash drive or MicroSD card.

- Insert a USB flash drive into the USB port or a MicroSD card into the MicroSD card slot.
- The speaker will automatically switch to the corresponding mode and begin playing music. If not, press the **Mode (M) Button** to select USB or MicroSD mode.
- **Controls:**
 - Short press **Power Button** to Play/Pause.
 - Short press **V-** for Previous Track.
 - Short press **V+** for Next Track.
 - Long press **V-** to Decrease Volume.
 - Long press **V+** to Increase Volume.

FM Radio Mode

Listen to your favorite FM radio stations.

- Press the **Mode (M) Button** repeatedly until you hear the "FM Radio" prompt.
- To automatically scan and save available stations, long press the **Play/Pause / TWS Button**. The speaker will scan and store stations.
- To switch between saved stations, short press the **V-** or **V+** buttons.
- Long press **V-** to Decrease Volume.
- Long press **V+** to Increase Volume.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** This speaker is **NOT** waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound from speaker.	Volume too low; incorrect mode; device not connected.	Increase volume on speaker and connected device. Ensure correct mode (Bluetooth, AUX, USB, MicroSD, FM). Re-pair Bluetooth device or check cable connection.
Bluetooth pairing fails.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices.
TWS pairing fails.	Speakers not in TWS pairing mode; too far apart.	Ensure both speakers are in Bluetooth mode and not connected to any device. Long press the TWS button on one speaker. Keep speakers close during pairing.
USB/MicroSD playback issues.	Unsupported file format; corrupted media; incorrect mode.	Ensure audio files are in a supported format (e.g., MP3). Try a different USB drive or MicroSD card. Press Mode button to select correct input.
Poor FM radio reception.	Weak signal; environmental interference.	Move the speaker to a different location. Re-scan for stations.

SPECIFICATIONS



Image: The LEDWOOD ACCESS100 speaker with its length, width, and height dimensions indicated.

Feature	Detail
Model Name	ACCESS100
Brand	Ledwood
Connectivity Technology	Bluetooth
Wireless Range	Up to 10 meters (33 feet)
Audio Output Mode	Stereo (2.0 Channel)
Speaker Output Power (RMS)	8.5 Watts
Peak Power Output	100 Watts
Special Features	USB Port, MicroSD Card Slot, AUX Input, FM Radio, TWS Function
Power Source	Battery Powered (rechargeable via USB cable)
Product Dimensions (L x W x H)	24.9 cm x 9 cm x 10.4 cm (9.8 x 3.5 x 4.1 inches)
Weight	820 grams (1.8 lbs)
Color	Black
Waterproof	No
Compatible Devices	Smartphones, Tablets

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the speaker yourself. This will void the warranty.
- Keep the speaker away from children and pets.
- Use only the provided charging cable or a certified equivalent.
- Avoid listening at high volumes for extended periods to prevent hearing damage.
- Dispose of the product and its battery responsibly according to local regulations.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your package or contact Ledwood customer support.

For technical support, troubleshooting assistance, or general inquiries, please visit the official Ledwood website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.



