

## CROWNFUL 32-Quart Air Fryer Toaster Oven

# CROWNFUL 32-Quart Air Fryer Toaster Oven Instruction Manual

Model: 32-Quart Air Fryer Toaster Oven (ASIN: B092S3FHZC)

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe operation and prevent damage. Keep this manual for future reference.

- Always place the appliance on a stable, level, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Supervise children closely when the appliance is in use.
- Do not operate the appliance with a damaged cord or plug. Contact customer support for assistance.
- Avoid touching hot surfaces. Use oven mitts or handles.
- Do not block any ventilation openings.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not use accessories or attachments not recommended by the manufacturer.
- Do not place the appliance near flammable materials or heat sources.
- Exercise extreme caution when removing hot oil or other hot liquids.

## 2. PRODUCT OVERVIEW

The CROWNFUL 32-Quart Air Fryer Toaster Oven is a versatile kitchen appliance designed for various cooking methods, including air frying, baking, rotisserie, and dehydrating. It features a spacious interior and an intuitive control panel.



Image 2.1: The CROWNFUL Air Fryer Toaster Oven in operation, showcasing a rotisserie chicken.

## 2.1 Components and Accessories

The appliance comes with several accessories to enhance your cooking experience:



Image 2.2: Overview of the included accessories and their primary uses.

- **Wire Rack:** For grilling, toasting, or general baking.
- **Food Tray:** Collects drips, suitable for roasting meats and vegetables.
- **Rotisserie Fetch Tool:** Safely removes the rotisserie fork assembly.
- **Air Fryer Basket:** Designed for air frying foods like fries and snacks.
- **Rotisserie Fork:** Used for rotisserie cooking of whole chickens or roasts.
- **Crumb Tray:** Catches crumbs and food particles for easy cleaning.
- **Tray Handle:** For safely inserting and removing trays and racks.

### 3. SETUP

#### 3.1 Unpacking and Initial Placement

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior with a damp cloth. Clean the interior and all accessories with warm, soapy water, then rinse and dry thoroughly.
3. Place the air fryer toaster oven on a stable, heat-resistant, and level surface, ensuring adequate clearance (at least 4 inches) from walls or other appliances for proper ventilation.

### 3.2 First Use

Before cooking food, perform a burn-in cycle to eliminate any manufacturing odors:

1. Insert the crumb tray at the bottom of the oven.
2. Plug the appliance into a grounded electrical outlet.
3. Set the oven to 'Bake' at 400°F (200°C) for 15-20 minutes.
4. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.
5. After the cycle, unplug the oven and allow it to cool completely before use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Control Panel Overview

The appliance features an intuitive LED display and control knobs for easy operation.



Image 4.1: Detailed view of the control panel with digital display and knobs.

- **LED Display:** Shows time, temperature, and selected cooking mode.
- **Function Button:** Cycles through preset cooking modes.
- **Air Fry Button:** Activates the air fry function directly.
- **Light Button:** Turns the interior oven light on/off.
- **Start/Cancel Button:** Initiates or stops the cooking process.
- **Temperature/Time Knobs:** Adjusts cooking temperature and time.





Image 4.2: The 8 cooking presets available on the appliance.

## 4.2 General Operation

1. Place food on the appropriate accessory (e.g., air fry basket, wire rack, rotisserie fork) and insert it into the oven.
2. Close the oven door.
3. Press the 'Function' button repeatedly or use the dedicated 'Air Fry' button to select your desired cooking mode. The selected mode will illuminate on the LED display.
4. Adjust the cooking temperature using the 'Temp/Time' knob.
5. Adjust the cooking time using the 'Temp/Time' knob.
6. Press the 'Start/Cancel' button to begin cooking.
7. To stop cooking at any time, press the 'Start/Cancel' button again.

## 4.3 Specific Cooking Functions

### Air Fry

This function uses 360° hot air circulation to cook food with little to no oil, achieving a crispy texture similar to deep frying.

# EASIER COOKING, HEALTHIER LIFE

Cook crispy and delicious fried foods without worrying about the added fats and calories



Deep Frying



Crownful Air Fryer Oven



Image 4.3: Air frying offers a healthier alternative to traditional deep frying.

- Use the Air Fryer Basket for best results.
- Shake the basket halfway through cooking for even crisping.

## Rotisserie

Ideal for cooking whole chickens or roasts evenly.

- Secure the food onto the Rotisserie Fork.
- Insert the rotisserie assembly into the designated slots inside the oven.
- Select the 'Rotisserie' function.

## Dehydrate

This function allows for making healthy snacks like beef jerky, dried fruits, and vegetables.



Image 4.4: The dehydrate function is perfect for preparing healthy snacks.

- Arrange thinly sliced food on the wire racks.
- Select the 'Dehydrate' function and set the desired time and temperature.

### Other Functions

The oven also includes presets for Toast, Bake, Broil, Pizza, and Convection cooking. Refer to the included recipe book for specific cooking guidelines for various foods.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always unplug the appliance** and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly.
3. **Accessories:** All non-stick accessories (wire rack, food tray, air fry basket, rotisserie fork) can be washed with warm, soapy water. Avoid abrasive cleaners or metal scouring pads.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive sponge. Ensure the interior is completely dry before next use.
5. **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.



6. **Never immerse the main unit** in water or any other liquid.

## 6. TROUBLESHOOTING

If you encounter issues with your CROWNFUL Air Fryer Toaster Oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet malfunction; Appliance fault.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. If the issue persists, contact customer support.
Food is not cooking evenly	Overcrowding the basket/rack; Incorrect temperature/time; Food not flipped/shaken.	Avoid overcrowding; cook in smaller batches. Adjust temperature and time as needed. Flip or shake food halfway through cooking.
White smoke coming from the oven	Grease/oil residue; Fatty foods cooking.	Clean the interior and accessories thoroughly. For fatty foods, ensure the crumb tray is clean and consider using less oil.
Digital display not working	Power interruption; Internal component issue.	Unplug the unit for a few minutes and plug it back in. If the display remains off, contact customer support.

## 7. SPECIFICATIONS

Detailed technical specifications for the CROWNFUL 32-Quart Air Fryer Toaster Oven.





## 32 QUART LARGE CAPACITY

Fits a 12" pizza, 6 slices of toast, or a 5.5 lb chicken



Image 7.1: Product dimensions for placement and capacity reference.

Feature	Detail
Brand	CROWNFUL
Model	32-Quart Air Fryer Toaster Oven
Capacity	32 Quarts (fits 5.5-pound whole chicken, 6 slices of toast, 12-inch pizza)
Color	Silver
Special Feature	Temperature Control
Control Type	Knob
Door Style	Dropdown Door
Included Components	Recipe Book, Wire Rack, Food Tray, Rotisserie Fetch Tool, Air Fryer Basket, Rotisserie Fork, Crumb Tray, Tray Handle
Finish Type	Painted

Feature	Detail
UPC	649661916420
Product Dimensions (L x W x H)	20.08 x 15.16 x 12.16 inches
Item Weight	19.95 pounds
ASIN	B092S3FHZC



## 8. WARRANTY AND SUPPORT





For warranty information, please refer to the documentation provided with your purchase or visit the official CROWNFUL website. For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact CROWNFUL customer service directly.

Please note that this product is listed as 'Renewed'. Information regarding the Amazon Renewed Guarantee can be found on the Amazon product page or by contacting Amazon customer service.

© 2023 CROWNFUL. All rights reserved.

## Related Documents - 32-Quart Air Fryer Toaster Oven

 <p>Model: TXG-KK-DT10L-D Crownful Air Fryer Oven User Guide</p>	<p><a href="#">Crownful Air Fryer Oven TXG-KK-DT10L-D User Guide</a></p> <p>User guide for the Crownful Air Fryer Oven, Model TXG-KK-DT10L-D. Includes safety precautions, package contents, product diagram, control panel explanation, specifications, how-to-use instructions, cooking modes, recommended cooking times and temperatures, and troubleshooting.</p>
 <p>CROWNFUL 8 QUART 2-BASKET AIR FRYER <b>USER MANUAL</b> Model No. AFT08003J-UL</p>	<p><a href="#">CROWNFUL 8 Quart 2-Basket Air Fryer User Manual (Model AFT08003J-UL)</a></p> <p>Comprehensive user manual for the CROWNFUL 8 Quart 2-Basket Air Fryer (Model AFT08003J-UL). Learn about safety precautions, product functions, operating instructions, cooking techniques, and first-time use.</p>

<div><div>CROWNFUL</div><div>USER MANUAL</div><div>FOOD DEHYDRATOR</div><div>MODEL NO. CF-FD01</div><div></div><div>READ THIS MANUAL THOROUGHLY BEFORE USING AND KEEP IT FOR FUTURE REFERENCE.</div></div>	<p><a href="#">CROWNFUL CF-FD01 Food Dehydrator User Manual</a></p> <p>Comprehensive user manual for the CROWNFUL CF-FD01 Food Dehydrator, covering setup, operation, cleaning, maintenance, troubleshooting, and warranty information.</p>
<div><div>CROWNFUL</div><div>USER MANUAL</div><div>FOOD DEHYDRATOR</div><div>MODEL NO. CF-FD01</div><div></div><div>READ THIS MANUAL THOROUGHLY BEFORE USING AND KEEP IT FOR FUTURE REFERENCE.</div></div>	<p><a href="#">CROWNFUL Food Dehydrator Machine CF-FD01 - User Manual &amp; Product Guide</a></p> <p>Discover the CROWNFUL Food Dehydrator Machine CF-FD01, a versatile appliance with 7 stainless steel trays, 600W power, and adjustable timer and temperature controls. Ideal for drying jerky, fruits, meats, herbs, and making yogurt. Includes 30+ free online recipes.</p>
<div><div>CROWNFUL</div><div>CROWNFUL AIR FRYER</div><div>USER MANUAL</div><div>Model No.: AFT05001-UL</div><div></div><div>5 QT AIR FRYER WITH TOUCHSCREEN</div><div>Read this manual thoroughly before using and keep it for future reference. For product warranty, please contact customer support@crowdfull.com</div></div>	<p><a href="#">Crownful 5 QT Air Fryer User Manual - Touchscreen Operation and Safety Guide</a></p> <p>Comprehensive user manual for the Crownful 5 QT Air Fryer with Touchscreen (Model AFT05001-UL). Includes detailed safety instructions, operating procedures, touchscreen controls, preset cooking chart, air frying guide, cleaning, and storage tips.</p>
<div><div>CROWNFUL</div><div>AIR FRYER OVEN</div><div>USER MANUAL</div><div>Model No.: TXG-KK-DT10L-D-W</div><div></div><div>HOUSEHOLD USE ONLY</div><div>Read this manual thoroughly before using and keep it for future reference. For product warranty, please contact support@crowdfull.com</div></div>	<p><a href="#">Crownful Air Fryer Oven TXG-KK-DT10L-D-W User Manual</a></p> <p>User manual for the Crownful Air Fryer Oven (Model TXG-KK-DT10L-D-W), providing safety instructions, setup guide, usage details, cooking recommendations, accessory guide, cleaning, troubleshooting, and compliance information.</p>