

[Manuals.plus](#) /

› [Superer](#) /

› Superer Charger Cord for Homitt Electric Spin Scrubber HM115C Series User Manual

Superer SP-04390

Superer Charger Cord for Homitt Electric Spin Scrubber HM115C Series User Manual

Model: SP-04390

INTRODUCTION


This manual provides essential instructions for the safe and effective use of your Superer replacement charger cord, Model SP-04390. This charger is designed to power and charge specific Homitt Electric Spin Scrubber models. Please read this manual thoroughly before use and retain it for future reference.

PRODUCT COMPATIBILITY

The Superer Charger Cord (Model SP-04390) is specifically designed for use with the following Homitt Electric Spin Scrubber models:

- Homitt Electric Spin Scrubber HM115C
- Homitt Electric Spin Scrubber HM115CW
- Homitt Electric Spin Scrubber HM115CD
- Homitt Electric Spin Scrubber HM115CG

Ensure your device model matches one of the listed compatible models to guarantee proper function and safety.

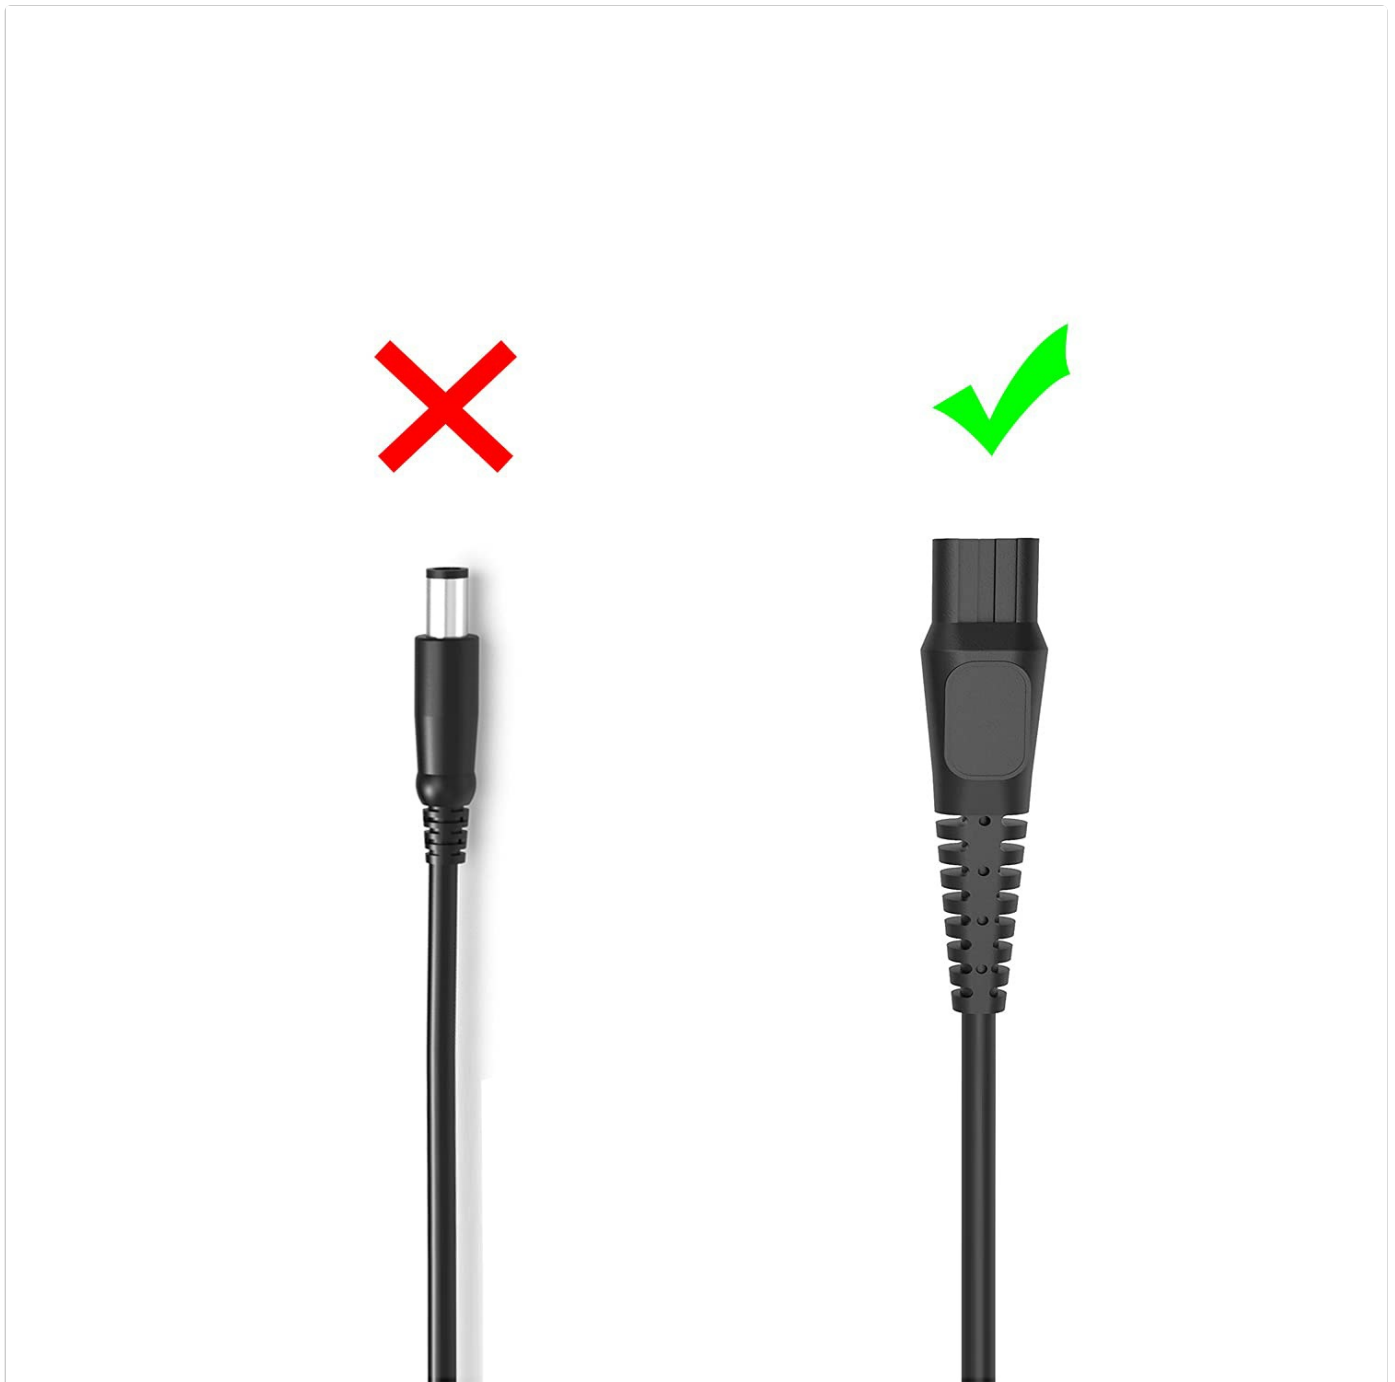

This image illustrates the correct plug type for the Homitt Electric Spin Scrubber (right, with green checkmark) compared to an incompatible plug type (left, with red cross). Always verify the connector shape before plugging in.

SAFETY INFORMATION

This charger cord meets nationally recognized standards for electronic safety. To ensure safe operation, please observe the following:

- Do not use the charger if the cord or plug is damaged.
- Do not expose the charger to water or excessive moisture.
- Use only with compatible devices as listed above.
- Keep out of reach of children.
- Unplug the charger from the power outlet when not in use or during electrical storms.

SETUP

1. **Unpack:** Carefully remove the charger cord from its packaging. Inspect the cord and plug for any visible damage.
2. **Connect to Scrubber:** Locate the charging port on your Homitt Electric Spin Scrubber. Insert the charger's connector firmly into the scrubber's charging port. Ensure a secure connection.
3. **Connect to Power Outlet:** Plug the charger's AC adapter into a standard electrical wall outlet.

Note: Some users have reported a slightly loose fit with the scrubber's charging port. Ensure the plug is inserted as far as it can go to establish a connection. A charging indicator light on your scrubber (if present) should illuminate.

OPERATING (CHARGING PROCESS)

Once properly connected, the charger will begin supplying power to your Homitt Electric Spin Scrubber. The charging process is automatic.

- **Charging Indicator:** Refer to your Homitt Electric Spin Scrubber's user manual for details on its charging indicator light behavior (e.g., solid red for charging, green for fully charged).
- **Charging Time:** Charging time will vary depending on the scrubber's battery level. Avoid overcharging by disconnecting the charger once the scrubber is fully charged, or if the scrubber's manual indicates automatic shut-off.
- **Usage During Charging:** It is generally recommended not to operate the electric spin scrubber while it is actively charging to prevent potential damage to the battery or charger.

MAINTENANCE

Proper care will extend the life of your charger cord:

- **Cleaning:** Disconnect the charger from the power outlet and the scrubber before cleaning. Wipe the cord and adapter with a dry, soft cloth. Do not use liquid cleaners.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly winding the cord to prevent damage.
- **Inspection:** Periodically inspect the cord and plug for any signs of wear, cuts, or damage. If damage is found, discontinue use and replace the charger.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber not charging.	Charger not properly connected to scrubber or outlet.	Ensure both ends of the charger cord are securely plugged in. Check the wall outlet for power.
Scrubber not charging.	Incompatible scrubber model.	Verify your Homitt Electric Spin Scrubber model is listed under "Product Compatibility".
Loose connection at scrubber port.	Minor variation in port/plug fit.	Gently adjust the plug to ensure it is fully seated and making contact. The scrubber's charging indicator should confirm connection.
Charger or scrubber feels hot.	Normal during charging, but excessive heat indicates an issue.	Disconnect immediately. Ensure proper ventilation. If overheating persists, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Brand	Superer
Model Number	SP-04390
Compatible Devices	Homitt Electric Spin Scrubber models HM115C, HM115CW, HM115CD, HM115CG
Connector Type	Specific to Homitt Electric Spin Scrubber
Maximum Voltage	19 volts DC
Color	Black
Indoor/Outdoor Usage	Indoor, Outdoor

WARRANTY AND SUPPORT

This Superer charger cord is eligible for replacement or returns within 30 days of purchase. Additionally, the manufacturer provides an extra 12-month guarantee from the date of purchase.

For technical support, warranty claims, or further assistance, please contact Superer customer service through the retailer where the product was purchased or visit the official Superer website.

For more information about Superer products, you can visit the [Superer Store on Amazon](#).

