

[Manuals.plus](#) /

> [Chicco](#) /

> Chicco Home & Travel Bottle Warmer with 2 Programs and Automatic Shut-off, Model 00007389100000

## Chicco 00007389100000

# Chicco Home & Travel Bottle Warmer

Model: 00007389100000

## 1. INTRODUCTION

The Chicco Home & Travel Bottle Warmer is designed to quickly and safely warm breast milk, formula, and baby food jars, as well as gently defrost milk and food. This versatile device ensures your baby's meals are always at the optimal temperature, whether you are at home or on the go.



**Image 1.1:** Chicco Home & Travel Bottle Warmer packaging. This image displays the product box with key features highlighted in multiple languages, including its ability to warm milk in 4 minutes, preserve breast milk nutrients, and include a car adapter.

Key features include two heating programs, automatic shut-off, a car adapter for travel, and compatibility with most bottles and jars. The intuitive touch interface makes operation simple and straightforward.

## 2. SAFETY INFORMATION

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always check the temperature of the milk or food before feeding your baby.
- Consume warmed milk immediately. Discard any excess milk after warming.
- For powdered milk, warm once and discard any excess.

### 3. PRODUCT COMPONENTS

The Chicco Home & Travel Bottle Warmer typically includes the following components:

- **Main Warmer Unit:** The primary device for heating.
- **Car Adapter:** For use in vehicles.
- **Bottle/Jar Basket:** A convenient basket for easy insertion and removal of bottles and jars, reducing the risk of burns.



**Image 3.1:** The Chicco Bottle Warmer showing its spacious design and the practical basket for smaller bottles. This illustrates the universal compatibility and ease of use.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, clean the warmer unit and basket according to the "Maintenance and Cleaning" section.
3. **Placement:** Place the warmer on a stable, flat, heat-resistant surface, away from children.
4. **Power Connection:**
  - **Home Use:** Plug the power cord into a standard electrical outlet.
  - **Travel Use:** Connect the car adapter to the warmer unit and then plug the adapter into your vehicle's 12V power socket.
5. **Add Water:** Fill the warmer with clean water up to the recommended level (usually indicated inside the warmer or in the specific program instructions). Do not overfill.

## 5. OPERATING INSTRUCTIONS

The Chicco Bottle Warmer features an intuitive touch interface for selecting different programs.

# UNIVERSAL: ADECUADO PARA LA MAYORÍA DE BIBERONES

ESPACIOSO

PRÁCTICA CESTA PARA BOTELLAS MÁS PEQUEÑAS



**Image 5.1:** The easy-to-use, backlit touch interface of the Chicco Bottle Warmer, showing icons for formula, breast milk, and baby food.

## General Steps:

1. Place the bottle or jar into the warmer, using the basket for smaller items.
2. Add the appropriate amount of water to the warmer chamber (refer to specific program guidelines).
3. Select the desired program using the touch controls.
4. The warmer will begin the heating cycle. A warning system will indicate the start and end of the process.
5. Once the cycle is complete, carefully remove the bottle/jar using the basket to avoid direct contact with hot surfaces.
6. Always shake the bottle gently and check the temperature of the contents on your wrist before feeding.

## Specific Programs:

- **Formula/Milk Warming:** Heats milk to approximately 37°C in as little as 3-4 minutes.

**PRÁCTICO E IDEAL  
INCLUSO DE VIAJE**



**ADAPTADOR DE COCHE  
INCLUIDO, PARA  
CALENTAR TAMBIÉN  
EN VIAJES**



**Image 5.2:** Demonstrates the quick and precise heating capability, warming milk in approximately 4 minutes.

- **Breast Milk Program:** This special program gradually warms breast milk to preserve its nutritional properties.

# BIBERÓN SIEMPRE LISTO, INCLUSO DE VIAJE



**MANTIENE  
LA LECHE  
CALIENTE  
1 HORA**



**DESCONGELA**



Image 5.3: Highlights the dedicated breast milk function designed to preserve essential nutrients.

- **Baby Food Jar Warming:** Suitable for warming various types of baby food jars.
- **Defrost Function:** Safely and gradually defrosts frozen milk or baby food.

# FÁCIL DE USAR, RETROILUMINADO, INTUITIVO, PANTALLA TÁCTIL

LECHE DE  
FÓRMULA

LECHE  
MATERNA

TARRITOS  
COMIDA



Image 5.4: Illustrates the ability to keep milk warm for 1 hour and the defrost function.

## Travel Use with Car Adapter:

The included car adapter allows you to use the bottle warmer while traveling. Simply connect the warmer to your vehicle's 12V power socket and follow the same operating instructions as for home use.

# FUNCIÓN LECHE MATERNA



**CONSERVA LOS  
NUTRIENTES  
DE LA LECHE  
MATERNA**



**Image 5.5:** The Chicco Bottle Warmer in a car, demonstrating its portability and the included car adapter for convenient travel use.

## **Automatic Shut-off and Keep Warm Function:**

The warmer automatically shuts off after approximately one hour. It also has a function to keep the warmed contents at an optimal temperature for up to one hour.



3. Allow the solution to sit for approximately 30 minutes. Do not turn on the warmer.
4. Empty the solution and rinse the chamber thoroughly with clean water several times.
5. If necessary, repeat the process until all limescale is removed.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer not turning on.	Not plugged in correctly; power outage; damaged cord/plug.	Check power connection; verify power outlet; inspect cord for damage (do not use if damaged).
Milk/food not heating sufficiently.	Insufficient water; incorrect program selected; limescale buildup.	Ensure water level is correct; select appropriate program; descale the warmer.
Warmer shuts off prematurely.	Overheating; automatic shut-off triggered.	Allow unit to cool down; ensure proper water level; the automatic shut-off after 1 hour is normal operation.
Warning light/sound active.	Indicates start/end of cycle or an error.	Refer to the specific indicator in the user manual for detailed meaning. If an error, unplug and restart.

## 8. SPECIFICATIONS

- **Model Number:** 00007389100000
- **Product Dimensions:** 14 x 14 x 17.5 cm
- **Product Weight:** 600 g
- **Model Year:** 2021
- **Color:** White
- **Material Composition:** Not specified
- **Additional Product Features:** Dishwasher safe (basket)
- **Number of Pieces:** 1
- **Style:** Home and Travel Bottle Warmer
- **Batteries Required:** No
- **Manufacturer:** Artsana
- **ASIN:** B092SDF2R2
- **First Available Date:** April 17, 2021

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Chicco website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact Chicco customer service for assistance.

