

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gtek Canada](#) /
- › [Gtek Wireless Mini Keyboard with Touchpad User Manual](#)

Gtek Canada Gtek Mini

Gtek Wireless Mini Keyboard with Touchpad User Manual

Model: Gtek Mini

1. INTRODUCTION

Thank you for choosing the Gtek Wireless Mini Keyboard with Touchpad. This compact and versatile device combines a full QWERTY keyboard with a multi-touch touchpad, offering convenient control for various compatible devices. It is designed for ease of use with Android devices, Smart TVs, and IPTV boxes.

Package Contents:

- 1 x 2.4Ghz Mini Wireless Keyboard
- 1 x USB Wireless Receiver
- 1 x Lithium-ion Battery
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Figure 1: Gtek Wireless Mini Keyboard, USB receiver, and product packaging. This image displays the compact keyboard alongside its small USB wireless receiver and the retail box, illustrating the complete product package.

2. SETUP

2.1 Charging the Keyboard

1. Locate the USB charging port on the keyboard.
2. Connect the provided USB charging cable to the keyboard and a standard USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will illuminate. Allow approximately 2-3 hours for a full charge. The

indicator light may change or turn off once fully charged.

2.2 Connecting the USB Receiver

1. Ensure the keyboard is charged.
2. Locate the USB wireless receiver, typically stored in a compartment on the keyboard itself or within the packaging.
3. Plug the USB wireless receiver into an available USB port on your compatible device (Android box, Smart TV, IPTV box, PC, etc.).
4. Turn on the keyboard using the power switch, usually located on the side or back. The device should automatically detect the keyboard.



Figure 2: Top-down view of the Gtek Wireless Mini Keyboard. This image highlights the full QWERTY keyboard layout and the integrated touchpad, showing the arrangement of keys and control buttons.

3. OPERATING INSTRUCTIONS

3.1 Basic Keyboard Functions

- **Typing:** Use the QWERTY keys for text input.
- **Function Keys (Fn):** Press the **Fn** key simultaneously with other keys to access secondary functions (e.g., F1-F12, multimedia controls).
- **Navigation Keys:** Use the arrow keys and dedicated navigation buttons (Home, Page Up, Page Down, End) for menu and content navigation.

3.2 Touchpad Usage

- **Single Finger Tap:** Functions as a left-click.
- **Two Finger Tap:** Functions as a right-click.
- **Two Finger Scroll:** Drag two fingers up or down on the touchpad to scroll content.
- **Mouse Buttons:** Dedicated left and right mouse buttons are also available above the touchpad for

precise control.

3.3 Backlight Control

The keyboard features a 3-color backlight (Blue, Green, Red). To cycle through the backlight colors or turn it off:

- Press the **Fn** key and the **F2** key simultaneously. Each press will cycle to the next color or turn the backlight off.



Figure 3: Gtek Wireless Mini Keyboard displaying its three backlight color options: blue, green, and red. This image demonstrates the visual effect of the backlit keys in different colors.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the device. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the keyboard regularly, especially if it will be stored for an extended period.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Solution
Keyboard not responding.	<ol style="list-style-type: none"> 1. Ensure the keyboard is powered on. 2. Check if the battery is charged. Recharge if necessary. 3. Verify the USB receiver is securely plugged into the device. 4. Try plugging the USB receiver into a different USB port. 5. Ensure the keyboard is within the operating range (up to 15 meters).
Backlight not working or stuck on one color.	<ol style="list-style-type: none"> 1. Press Fn + F2 repeatedly to cycle through colors and ensure it's not turned off. 2. Ensure the keyboard has sufficient battery charge.
Touchpad is erratic or unresponsive.	<ol style="list-style-type: none"> 1. Ensure your fingers are clean and dry. 2. Restart the keyboard and the connected device. 3. Check for any obstructions on the touchpad surface.

6. SPECIFICATIONS

- **Model:** Gtek Mini
- **Connectivity:** RF 2.4G Wireless
- **Operating Range:** Up to 15 meters (Max)
- **Backlight:** 3 Colors (Blue, Green, Red)
- **Battery Type:** Rechargeable Lithium-ion
- **Compatible Devices:** Android Boxes, Smart TVs (not all models), IPTV Boxes, Streaming Players
- **Wireless Transmit Power:** +5dBm
- **Dimensions:** Approximately 18.4 x 10.4 x 2.8 cm
- **Weight:** Approximately 130 g

7. WARRANTY AND SUPPORT

Gtek Canada products are designed for reliability and performance. For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

For additional support or product information, you may visit the official Gtek Canada store online [Gtek Canada Store](#).