

Alizen Roku TV Remote

Alizen Replacement Remote Control

Instruction Manual for Roku TV Brands

1. INTRODUCTION

Thank you for choosing the Alizen Replacement Remote Control. This remote is designed to provide seamless control for a wide range of Roku TV brands, offering a direct replacement without the need for complex setup. This manual will guide you through the features, setup, operation, and maintenance of your new remote control.



Figure 1: Alizen Replacement Remote Control for Roku TVs.

This image displays the Alizen Replacement Remote Control, showcasing its ergonomic design and the arrangement of its buttons, including the dedicated shortcut keys for popular streaming services.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Universal Compatibility:** Works with all built-in Roku TV models from various brands including TCL, Hisense, ONN, Insignia, Sharp, Hitachi, Philips, Sanyo, Westinghouse, Element, JVC, LG, RCA, and Magnavox.
- **No Setup Required:** Operates right out of the box with no pairing or programming needed for built-in Roku TVs.
- **Dedicated Shortcut Buttons:** Features 12 popular shortcut keys for quick access to NETFLIX, Amazon Prime Video, Roku Channel, HULU, Disney+, Sling, VUDU, YouTube, ESPN+, Fan-NOW, Google Play, and Spotify.
- **Improved IR Signal:** Enhanced infrared signal strength for reliable operation up to 36 feet.
- **Durable Construction:** Made from premium, non-toxic ABS material for long-lasting use.

2.2 Remote Control Layout

Familiarize yourself with the buttons and their functions on your Alizen remote control.



Figure 2: Labeled diagram of the Alizen Remote Control.

This diagram illustrates the various buttons on the remote control, including the power button, navigation pad, playback controls, and the 12 dedicated channel shortcut buttons, along with their respective functions.

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Roku TV home screen.
- **Volume Buttons (Right Side):** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Instant Replay:** Jumps back a few seconds during video playback.
- **Options (*):** Accesses context-sensitive options.
- **Rewind/Fast Forward/Play/Pause:** Standard media playback controls.
- **Channel Shortcut Buttons:** Direct access to popular streaming applications.

3. SETUP

3.1 Battery Installation

The Alizen Replacement Remote Control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

3.2 Initial Use (No Setup Needed)

One of the primary advantages of the Alizen Replacement Remote Control is its plug-and-play functionality. For all built-in Roku TV models, no pairing, programming, or complex setup is required. Simply insert the batteries, point the remote at your Roku TV, and it should function immediately.



Figure 3: Alizen Remote Control highlighting 'No Setup Needed'.

This image emphasizes the ease of use, showing the remote control with text indicating that no setup is required and it works right out of the box, along with icons for signal stability and no programming.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

To operate your Roku TV with the Alizen remote, ensure there is a clear line of sight between the remote's infrared (IR) emitter and the IR receiver on your TV. Point the remote directly at the TV and press the desired button.

- **Power On/Off:** Press the **Power** button (red circle) at the top right.
- **Navigation:** Use the directional pad (Up, Down, Left, Right) to move through menus and content. Press **OK** to select.
- **Volume Control:** Use the dedicated volume buttons on the right side of the remote to adjust audio levels.
- **Home Screen:** Press the **Home** button (house icon) to return to the main Roku TV interface.
- **Back:** Press the **Back** button (left arrow) to go back one step in menus or applications.

4.2 Using Shortcut Buttons

The remote features 12 dedicated shortcut buttons for popular streaming services. Simply press the button corresponding to the service you wish to launch. Your TV must have the respective application installed and an active internet connection for these buttons to function.



Figure 4: Alizen Remote Control with 12 popular channel shortcut buttons.

This image highlights the 12 pre-programmed shortcut buttons on the remote, providing direct access to streaming platforms such as Netflix, Amazon Prime Video, Hulu, Disney+, YouTube, and more.

Note: Some shortcut buttons can be disabled using a 'Channel-LOCK' feature if desired, though this remote does not include specific instructions for that feature. Refer to your Roku TV's settings for channel management.

5. COMPATIBILITY

The Alizen Replacement Remote Control is designed for broad compatibility with Roku TVs. It is compatible with all standard Roku TV models from the following brands:

- TCL Roku TV
- Hisense Roku TV
- ONN Roku TV
- Insignia Roku TV
- Sharp Roku TV
- Hitachi Roku TV
- Philips Roku TV
- Sanyo Roku TV
- Westinghouse Roku TV
- Element Roku TV
- JVC Roku TV
- LG Roku TV
- RCA Roku TV
- Magnavox Roku TV
- InFocus Roku TV

This includes specific TCL models such as 32S321, 32S301, 32S327, 65S421, 55S421, 50S421, 43S423, 50S423, 55S423, 65S423, 43S403, 32S325, 43S425, 49S425, 50S425, 55S425, 65S425; and Hisense 4K Roku TV models like 50R7E, 32H4E1, 50R6E, 32H4030F, 40H4030F, 43H4030F, 55R6000E, 75R6E1, 65R6D, 43R7080E, 65R6E, 32H4F, 58R6E, 50R6E (HU-RCRIS-21G), and many others.

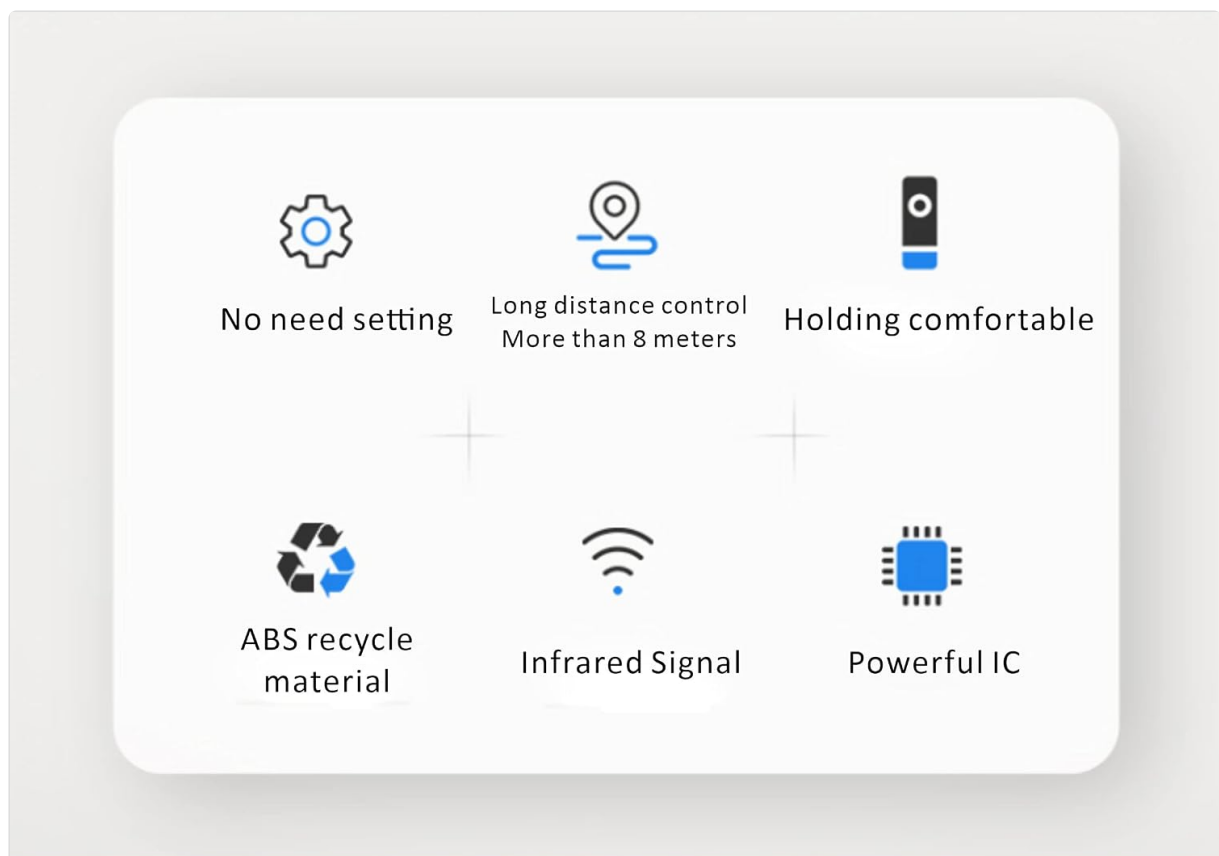


Figure 5: Visual representation of Roku TV brand compatibility.

This image displays various Roku TV brand logos (TCL, Hisense, ONN, Hitachi, RCA) to visually confirm the broad

5.1 Important Compatibility Notes

- **NOT for Roku Stick:** This remote is not compatible with Roku Streaming Sticks or Roku Ultra devices.
- **No Voice Control:** This remote does not support voice control features.
- **No Headphone Jack:** There is no headphone jack on this remote.
- **IR Model Only:** This is an Infrared (IR) remote control and is not an RF (Radio Frequency) model. It requires a direct line of sight to the TV's IR receiver.

6. MAINTENANCE

6.1 Cleaning the Remote

To maintain the remote's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

6.2 Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- If the remote will not be used for an extended period (e.g., several weeks or months), remove the batteries to prevent leakage and potential damage to the remote.
- Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

If you encounter issues with your Alizen Replacement Remote Control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with fresh AAA batteries.
 - Check for any obstructions between the remote and the TV's IR receiver. Ensure a clear line of sight.
 - Confirm you are pointing the remote directly at the TV.
- **Limited Range:**
 - Ensure batteries are fresh. Low batteries can reduce signal strength.
 - Minimize interference from bright lights or other electronic devices that might affect IR signals.
 - The maximum effective range is approximately 12 meters (36 feet). Ensure you are within this range.
- **Specific Buttons Not Working:**
 - Verify that the TV application or menu you are in supports the function of the button (e.g., playback controls only work during media playback).

- For shortcut buttons, ensure the corresponding streaming app is installed and accessible on your Roku TV.
- **Remote Not Compatible with My TV:**
 - Double-check the compatibility list in Section 5. This remote is specifically for Roku TVs (TVs with Roku built-in), not Roku Sticks or other external Roku devices.
 - If your TV is a compatible Roku TV model and the remote still does not work after trying the above steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Alizen
Model Number	Roku TV Remote
ASIN	B092T3FT2R
Product Dimensions	15.24 x 5.08 x 1.78 cm
Item Weight	45.36 g
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared (IR)
Maximum Range	12 Meters (approx. 36 feet)
Number of Buttons	12 (shortcut keys) + standard controls
Controller Type	Button Control
Compatible Devices	Television (Roku TV models)
Material	Premium ABS
Color	Black

9. WARRANTY AND SUPPORT

Alizen is committed to providing high-quality products. While specific warranty details are not provided in this manual, if you encounter any issues with your remote control or if it does not suit your TV as expected, please contact the seller or manufacturer directly for assistance.

When contacting support, please have your product model number (Roku TV Remote) and ASIN (B092T3FT2R) ready, as this will help expedite the support process.

For further assistance or inquiries, please refer to the contact information provided by your retailer or on the product packaging.

