

Manuals.plus /

› Longines /

› Longines Presence Automatic White Dial Ladies Watch L4.322.1.12.7 User Manual

Longines L4.322.1.12.7

User Manual

LONGINES PRESENCE AUTOMATIC WHITE DIAL LADIES WATCH

Model: L4.322.1.12.7

PRODUCT OVERVIEW

The Longines Presence Automatic White Dial Ladies Watch L4.322.1.12.7 is an elegant timepiece featuring an automatic movement. It is designed with a white dial, rose gold-tone hands, and a durable stainless steel case. The watch is complemented by a stylish two-tone (silver-tone and rose gold PVD) stainless steel band, a fixed bezel, and a scratch-resistant sapphire crystal. It also boasts a transparent caseback and a fold-over clasp with push-button release. This model offers water resistance up to 30 meters (100 feet).



A front view of the Longines Presence Automatic White Dial Ladies Watch L4.322.1.12.7, featuring a white dial with rose

gold-tone hands, a stainless steel case, and a two-tone (silver-tone and rose gold PVD) stainless steel band. The date window is visible at the 3 o'clock position.

SETUP

1. **Unboxing:** Carefully remove the watch and its accessories from the packaging. Inspect for any visible damage.
2. **Initial Winding:** As an automatic watch, it powers itself with the motion of your wrist. If the watch has stopped, gently rotate the crown clockwise approximately 30-40 times to provide an initial power reserve.
3. **Setting the Time:** Pull the crown out to the furthest position. Rotate the crown to set the hour and minute hands to the correct time. Push the crown back in to start the watch.
4. **Setting the Date:** Pull the crown out to the middle position. Rotate the crown to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism. Push the crown back in once the date is set.
5. **Adjusting the Band:** If necessary, have the stainless steel band adjusted by a qualified jeweler to ensure a comfortable and secure fit on your wrist.

OPERATING INSTRUCTIONS

- **Automatic Movement:** The watch is powered by an automatic mechanical movement. It winds itself through the natural motion of your wrist. If worn daily for at least 8-10 hours, it should maintain its power reserve.
- **Power Reserve:** When fully wound, the watch has a power reserve that allows it to run for a certain period (typically 38-40 hours) even when not worn. If the watch stops after not being worn, simply wind it manually as described in the Setup section or wear it for a few hours.
- **Crown Functions:**
 - **Position 1 (Pushed In):** Normal operating position.
 - **Position 2 (Pulled Out One Click):** Adjusts the date.
 - **Position 3 (Pulled Out Two Clicks):** Adjusts the time (hour and minute hands).

MAINTENANCE

- **Cleaning:** Regularly wipe the watch case and band with a soft, dry cloth to remove dust and fingerprints. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying.
- **Water Resistance:** This watch is water resistant to 30 meters (100 feet). This means it is suitable for splashes or brief immersion in water, but not for swimming, showering, or diving. Always ensure the crown is fully pushed in before any contact with water.
- **Avoid Extreme Conditions:** Protect your watch from extreme temperatures (hot or cold), strong magnetic fields, and severe shocks.
- **Servicing:** For optimal performance and longevity, it is recommended to have your automatic watch serviced by an authorized Longines service center every 3-5 years.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Watch has stopped or is running slow.	The watch may not have enough power reserve. Manually wind the watch by rotating the crown clockwise 30-40 times, or wear it consistently for several hours.
Date is not changing at midnight.	The watch may be set to AM instead of PM. Advance the time by 12 hours. Avoid setting the date between 9 PM and 3 AM.
Condensation under the crystal.	This indicates moisture ingress. Immediately take the watch to an authorized service center to prevent further damage.
Watch is running too fast or too slow consistently.	The movement may require regulation or servicing. Contact an authorized Longines service center.

SPECIFICATIONS

- **Model Number:** L4.322.1.12.7
- **Movement:** Automatic
- **Dial Color:** White
- **Hands:** Rose Gold-tone
- **Case Material:** Stainless Steel
- **Band Material:** Two-tone (Silver-tone and Rose Gold PVD) Stainless Steel
- **Crystal:** Scratch Resistant Sapphire
- **Water Resistance:** 30 meters / 100 feet
- **Case Size:** 30 mm x 7.6 mm
- **Band Width:** 16 mm
- **Clasp:** Fold Over with Push Button Release
- **Crown:** Pull / Push

WARRANTY INFORMATION

Your Longines watch is covered by a manufacturer's international warranty against manufacturing defects. The duration and terms of the warranty are specified in the warranty card provided with your purchase. Please retain your proof of purchase and the warranty card for any warranty claims. The warranty typically does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

SUPPORT

For technical assistance, repairs, or inquiries regarding your Longines watch, please contact an authorized Longines service center or the official Longines customer support. You can find contact information and a list of authorized service centers on the official Longines website. Always ensure that any servicing or repairs are carried out by certified professionals to maintain the integrity and warranty of your timepiece.

For more information, please visit the official Longines website or consult your local authorized dealer.

