

## Sharp QW-MA814-SS

# Sharp Dishwasher User Manual

Model: QW-MA814-SS | Brand: Sharp

## 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your Sharp QW-MA814-SS Dishwasher. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. This dishwasher features 14 place settings and 8 wash programs, including an Auto wash function, designed for optimal cleaning performance.

- **Capacity:** 14 Place Settings
- **Programs:** 8 (including Auto wash)
- **Special Features:** Child Lock, LED light inside, Delay Start (1-24 Hours), Anti-Bacterial Filter, Alternative Wash, Three Layer Cutlery Drawer
- **Energy Efficiency:** A++
- **Water Consumption:** 11L/cycle

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Always turn off the power supply before performing any maintenance or cleaning.

## 3. SETUP AND INSTALLATION

The Sharp QW-MA814-SS is a freestanding dishwasher. Proper installation is crucial for optimal performance and safety.



**Figure 3.1:** Front view of the Sharp QW-MA814-SS Dishwasher. This image shows the sleek Inox Silver exterior with the control panel located at the top of the door.



**Figure 3.2:** Interior view of the Sharp QW-MA814-SS Dishwasher with the door open. This image highlights the three-layer cutlery drawer and the spacious racks designed for 14 place settings.

### 3.1 Placement

Place the dishwasher on a level, stable surface. Ensure there is adequate space for the door to open fully. The dimensions are approximately 59.8D x 84.5W x 61H centimeters.

### 3.2 Water and Electrical Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Connect the power cord to a grounded 240 Volt electrical outlet. It is recommended to have a qualified technician perform the initial installation.

## 4. OPERATING INSTRUCTIONS

---

Your Sharp dishwasher is equipped with a user-friendly touch control panel and various features to simplify dishwashing.

### 4.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket.
- Utilize the three-layer cutlery drawer for forks, knives, and spoons, ensuring they do not block spray arms.

### 4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill the rinse aid dispenser as needed for spot-free drying.

### 4.3 Selecting a Program

Use the touch controls to select one of the 8 available wash programs. The LED light inside illuminates the interior for better visibility during loading and unloading. The 'Auto wash' program automatically adjusts settings based on soil level.

### 4.4 Starting a Wash Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected program. You can use the 'Delay Start' feature to postpone the start of a cycle by 1 to 24 hours.

### 4.5 Child Lock Function

Activate the Child Lock feature to prevent accidental program changes or operation by children. Refer to the control panel instructions for activating and deactivating this function.

## 5. MAINTENANCE AND CLEANING

---

Regular maintenance ensures the longevity and efficiency of your dishwasher.

### 5.1 Cleaning the Filters

The dishwasher is equipped with an Anti-Bacterial Filter. Regularly clean the filter system (coarse filter, fine filter, and microfilter) to prevent food particles from recirculating and affecting wash performance. Twist and remove the filter assembly, rinse under running water, and brush if necessary.

### 5.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. Remove the spray arms and clean any clogged holes with a thin wire or toothpick.

### 5.3 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, periodically run a dishwasher cleaning cycle with a specialized

dishwasher cleaner to remove grease and limescale buildup.

## 6. TROUBLESHOOTING

Before contacting service, refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, child lock active.	Check power connection, ensure door is latched, deactivate child lock.
Dishes not clean	Clogged spray arms, dirty filters, improper loading, insufficient detergent.	Clean spray arms and filters, reload dishes correctly, add more detergent.
Water not draining	Clogged drain hose or filter, drain pump issue.	Check and clear drain hose/filter, consult service if pump is faulty.
Excessive noise	Items hitting spray arms, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

## 7. SPECIFICATIONS

Model Name	QW-MA814-SS
Brand	Sharp
Colour	Silver (Inox)
Form Factor	Freestanding
Product Dimensions (D x W x H)	59.8 x 84.5 x 61 cm
Item Weight	25.2 Kilograms
Capacity	14 Place Settings
Number of Programs	8
Type of Controls	Touch
Noise Level	53 dB
Voltage	240 Volts
Annual Energy Consumption	290 Kilowatt Hours
Water Consumption (per cycle)	11 Liters
Special Features	Delay Start, Child Lock, LED light inside, Anti-Bacterial Filter

## 8. WARRANTY AND SUPPORT




Your Sharp QW-MA814-SS Dishwasher comes with a standard manufacturer's warranty. For specific warranty terms and



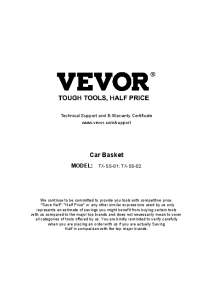
conditions, please refer to the warranty card included with your purchase or contact Sharp customer service. Extended warranty options may be available from third-party providers, such as Salama Care, offering 1-Year or 2-Year extended coverage. Please check with your retailer for details.

For technical support, spare parts, or service inquiries, please visit the official Sharp Store or contact their authorized service centers. You can find more information and support resources by visiting the [Sharp Store on Amazon.ae](#).

© 2024 Sharp Corporation. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - QW-MA814-SS

	<p><a href="#">Sharp Dishwasher User Manual: QW-NA1CF47ES-EU &amp; QW-NA1CF47EW-EU</a></p> <p>User manual for Sharp dishwashers, models QW-NA1CF47ES-EU and QW-NA1CF47EW-EU. Provides comprehensive guidance on installation, operation, safety, maintenance, and troubleshooting for optimal appliance use.</p>
	<p><a href="#">Sharp Dishwasher User Manual: QW-NA26F39DI-DE &amp; QW-NA26F39DW-DE</a></p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Includes installation, operation, safety, maintenance, and troubleshooting guides.</p>
	<p><a href="#">Sharp Dishwasher QW-NA26F39DI-DE / QW-NA26F39DW-DE User Manual</a></p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Provides essential safety, installation, operation, maintenance, and troubleshooting guidance.</p>

 <p>The cover of the Sharp dishwasher user manual features a white background with a red curved band at the bottom containing the Sharp logo. The top left corner has a small icon and the text "Home Appliances". Below it, the model numbers "QW-NS1CF49EI-ES" and "QW-NS1CF49EW-ES" are listed, followed by "Dishwasher" and a small "see manual" icon.</p>	<p><a href="#">Sharp Dishwasher User Manual: QW-NS1CF49EI-ES, QW-NS1CF49EW-ES</a></p> <p>Comprehensive user manual for Sharp dishwashers models QW-NS1CF49EI-ES and QW-NS1CF49EW-ES, covering installation, safety, operation, maintenance, and troubleshooting.</p>
 <p>The cover of the Sharp dishwasher user manual features a white background with a red curved band at the bottom containing the Sharp logo. The top left corner has a small icon and the text "Home Appliances". Below it, the model number "QW-NA1CF47EW-FR" is listed, followed by "Dishwasher" and a small "see manual" icon.</p>	<p><a href="#">Sharp QW-NA1CF47EW-FR Dishwasher User Manual</a></p> <p>User manual for the Sharp QW-NA1CF47EW-FR dishwasher, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting.</p>
 <p>The cover of the VEVOR car basket user manual and warranty document features a black background with the VEVOR logo in white. Below the logo, it says "TOUGH TOOLS, HALF PRICE". Further down, it mentions "Technical Support and 8 Yearly Certificate" and "see more advantages". At the bottom, it specifies "Car Basket" and "MODEL: TX-SS-01, TX-SS-02". A small disclaimer is visible at the very bottom.</p>	<p><a href="#">VEVOR Car Basket TX-SS-01 TX-SS-02 User Manual and Warranty</a></p> <p>Comprehensive guide for the VEVOR Car Basket (Models TX-SS-01, TX-SS-02), covering installation, operation safety, parts list, cleaning, and manufacturer details. Find technical support and warranty information.</p>