

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Odin 4.2L Air Fryer User Manual

Aigostar Odin

Aigostar Odin 4.2L Air Fryer User Manual

Model: Odin

1. INTRODUCTION

Thank you for choosing the Aigostar Odin 4.2L Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with little to no oil. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Ensure the voltage indicated on the appliance matches your local power supply.
- Do not block any air vents.
- Unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool completely before handling or cleaning.
- This appliance is for household use only.
- The air fryer is BPA-free and PFOA-free for healthy cooking.

2. PRODUCT OVERVIEW

The Aigostar Odin Air Fryer features a sleek design with advanced cooking technology. Familiarize yourself with its components and key features.



Figure 2.1: Aigostar Odin Air Fryer with basket and digital display.

Key Features:

- **Digital LED Touch Screen:** Easy-to-use interface for precise control.
- **8 Pre-programmed Menus:** One-touch cooking for common dishes.
- **Manual Control:** Adjustable time (1-60 minutes) and temperature (50-200°C).
- **360° High-Speed Hot Air Circulation:** Ensures even and fast cooking while retaining nutrients.
- **Cool-Touch Handle:** Safely check or shake food during cooking.
- **Non-Slip Feet:** Provides stability on your countertop.
- **Retractable Cable Storage:** Conveniently store the power cord when not in use.
- **Automatic Stop Function:** The appliance pauses operation when the basket is removed and resumes when reinserted.
- **Aigostar App Community:** Access recipes and interact with other users by scanning the QR code.



Figure 2.2: Key components including the basket, grill, and non-slip feet.



Figure 2.3: Retractable cable storage for neat organization.

3. INITIAL SETUP

1. **Unpack:** Carefully remove the air fryer and all packaging materials.
2. **Clean:** Before first use, wash the basket and grill plate with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface, ensuring adequate space (at least 10 cm) around the appliance for proper air circulation.
4. **Power Connection:** Extend the power cord from the retractable storage at the back of the unit and plug it into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1. Control Panel Overview



Figure 4.1: Digital LED Touch Screen Control Panel.

The digital LED touch screen allows for intuitive control of your air fryer. It displays temperature, time, and various pre-programmed menu icons.

4.2. Basic Operation

1. **Prepare Food:** Place your ingredients in the air fryer basket. Do not overfill.
2. **Insert Basket:** Slide the basket firmly into the main unit.
3. **Power On:** Plug in the appliance. The display will light up.
4. **Select Cooking Mode:**
 - **Pre-programmed Menus:** Touch the desired menu icon on the screen. The appliance will automatically set the optimal time and temperature.
 - **Manual Mode:** Use the temperature and time adjustment buttons (+/-) to set your desired cooking parameters (Temperature: 50-200°C, Time: 1-60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin cooking.
6. **Shake Reminder:** For some recipes, it is recommended to shake the basket halfway through cooking. The cool-touch handle allows for safe removal and reinsertion of the basket. The appliance will pause automatically when the basket is removed and resume when reinserted.
7. **End of Cooking:** The appliance will beep when cooking is complete and automatically shut off. Carefully remove the basket and transfer food to a serving dish.

4.3. Aigostar App Integration

Enhance your cooking experience by connecting with the Aigostar community. Scan the QR code on the appliance or refer to the packaging to download the official Aigostar app.



Figure 4.2: Scan the QR code to access the Aigostar app.

The app provides regularly updated recipes and allows you to interact with a community of users. You can find the app community at: [Aigostar Recipe Community](#).

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Basket and Grill:** Remove the basket and grill plate. Wash them with warm soapy water and a non-abrasive sponge. They are also dishwasher safe.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners.
4. **Exterior:** Clean the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Ensure all parts are clean and dry before storing. Use the retractable cable storage at the back of the unit

to keep the power cord tidy.

6. TROUBLESHOOTING

If you encounter any issues with your Aigostar Odin Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket overloaded, food not shaken.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use, fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, this is normal.
Appliance stops during operation.	Basket removed, overheating protection.	Ensure the basket is fully inserted. If due to overheating, unplug and let it cool down for 30 minutes before restarting.

If the problem persists, please contact Aigostar customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Aigostar
Model Name	Aigostar Odin
Model Number	40
Capacity	4.2 Liters
Power	1500 Watts
Voltage	240 Volts
Dimensions (L x W x H)	33.3 x 33.3 x 32.5 cm
Weight	4.9 Kilograms
Material	Plastic
Control Method	Digital Touch Screen / Application
Temperature Range	50°C - 200°C
Timer Range	1 - 60 minutes

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer.

Aigostar is committed to providing quality products and customer satisfaction.
For further assistance, product registration, or to explore more recipes, please visit the official Aigostar website or join the Aigostar App Community mentioned in Section 4.3.

© 2025 Aigostar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B092VKLKNT>
More documents and user manuals: <https://manuals.plus/>