

[manuals.plus](#) /› [LOUTOC](#) /› [LOUTOC BN59-01301A Universal Replacement Remote Control Instruction Manual for Samsung Smart TVs](#)**LOUTOC BN59-01301A**

LOUTOC BN59-01301A Universal Replacement Remote Control Instruction Manual

Model: BN59-01301A

1. PRODUCT OVERVIEW

The LOUTOC BN59-01301A is a universal replacement remote control designed for compatibility with various Samsung Smart TVs, including LED, LCD, HDTV, and 3D models. It functions as an updated alternative to older Samsung remote models BN59-01199F and BN59-01289A. This remote control requires no programming and is ready for use upon battery insertion.



Image 1.1: Front and side view of the LOOUTOC BN59-01301A Universal Replacement Remote Control.



Image 1.2: The BN59-01301A remote control is a suitable replacement for BN59-01199F and BN59-01289A models.

2. SETUP INSTRUCTIONS

2.1 Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Battery type:
2x AAA batteries
(NOT included)



Image 2.1: Diagram illustrating the correct insertion of two AAA batteries into the remote control.

2.2 Initial Use

This remote control is pre-programmed and requires no additional setup or pairing with your Samsung TV. Once batteries are installed, it is ready for immediate use.



Image 2.2: The remote control is ready to use without any setup or programming.

3. OPERATING INSTRUCTIONS

The remote control provides standard functions for navigating and controlling your Samsung Smart TV. Point the remote directly at your television for optimal performance. The effective transmitting distance is over 8 meters (26 feet).



Image 3.1: Detailed layout of remote control buttons and their corresponding functions.

3.1 Button Functions

- **Power Button (Red):** Turns the TV on and off.
- **SOURCE:** Displays and selects available video sources.
- **Number Buttons (0-9):** Gives direct access to channels.
- **PRE-CH:** Returns to the previous channel.
- **MUTE:** Turns the sound on and off.
- **VOL (+/-):** Adjusts the volume.
- **CH (Up/Down):** Changes channels.
- **CH LIST:** Launches the Channel List.
- **SLEEP:** Automatically shuts off the TV at a preset time.
- **Home Button:** Returns to the Home Screen.
- **GUIDE:** Displays the Electronic Program Guide (EPG).
- **SETTINGS:** Displays the main on-screen menu.
- **INFO:** Displays information on the TV screen.
- **Navigation Buttons (Up/Down/Left/Right):** Moves the cursor, selects on-screen menu items, and changes values.

- **OK Button:** Press this button to select or run a focused item.
- **RETURN:** Returns to the previous menu.
- **EXIT:** Exits the menu.
- **Colored Buttons (A, B, C, D):** Use these buttons with specific features, according to the directions on the TV's screen.
- **E-MANUAL:** Displays the e-Manual.
- **P.SIZE:** Changes the picture size.
- **CC/VD:** When pressed, the Accessibility Shortcuts menu appears.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.



Image 3.2: The remote control in use with a Samsung Smart TV.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or harsh chemicals, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.

- Check for any obstructions between the remote and the TV's infrared receiver.
- Ensure you are within the operating range (up to 8 meters) and pointing the remote directly at the TV.

- **Specific buttons not working:**
 - Verify that the button is intended for your TV model's functions. Some advanced features may vary between TV models.
 - Clean the remote control to ensure no debris is obstructing button presses.

6. SPECIFICATIONS

Feature	Detail
Model Number	BN59-01301A
Brand	LOUTOC
Compatibility	Samsung Smart LED LCD 4K ULTRA HDTV 3D TVs (Replaces BN59-01199F, BN59-01289A)
Power Source	2 x AAA Batteries (not included)
Material	ABS Plastic
Operable Distance	More than 10 meters
Dimensions (L x W x H)	2.95 x 1.77 x 0.79 inches
Item Weight	1.44 ounces
Special Features	Ergonomic, Lightweight, No Programming Required, Pre-Programmed, Universal



Image 6.1: Physical dimensions of the remote control.

7. WARRANTY AND SUPPORT

This product is covered by a 60-day replacement policy. For any issues or support, please contact the manufacturer, LOUTOC.



60-Day Replacement



Image 7.1: Information regarding the 60-day replacement policy.

Related Documents - BN59-01301A

	<p><u>Samsung Remote Control User Guide and Compatibility</u> Comprehensive guide to Samsung remote control functions, installation steps, and compatibility with various Samsung TV models. Includes model numbers for easy reference.</p>
	<p><u>Samsung Smart-TV Remote Control Function Guide: TM1850A BN59-01259B & Replacement Models</u> Detailed comparison of original and replacement remote control buttons for Samsung Smart TVs, including models TM1850A BN59-01259B, BN59-01301A, and BN59-01350B. Find button function mapping from Mandis shop.</p>
	<p><u>Samsung BN59-00516A Replacement Remote Control Guide</u> This guide provides button mapping details for the Samsung BN59-00516A replacement remote control, covering TV, DVD, STB, and CABLE-VCR functions. Compare original remote buttons to their replacements.</p>
	<p><u>Samsung Fernseher Ersatz-Fernbedienung Gebrauchsanleitung</u> Gebrauchsanleitung für die Dakana Ersatzfernbedienung für Samsung Fernseher. Enthält Anleitungen zur Einrichtung, zum Einlegen von Batterien, zur Bedienung grundlegender Funktionen, Kompatibilitätsinformationen und häufig gestellte Fragen. Kompatibel mit Modellen wie BN59-01175N.</p>

<p>LUPO Replacement Remote Control for Samsung TVs</p> <p>The LUPO Replacement Remote Control is designed for Samsung LCD and LED TVs. It is a cost-effective alternative to purchasing a new remote, especially for older models that may no longer be supported by the manufacturer.</p> <p>LUPO Replacement Remote Control Features:</p> <ul style="list-style-type: none"> Universal remote control for Samsung LCD and LED TVs. Simple setup and easy to use. Cost-effective alternative to purchasing a new remote. Designed for older Samsung models that may no longer be supported by the manufacturer. <p>LUPO Replacement Remote Control Specifications:</p> <ul style="list-style-type: none"> Model: LUPO-1000 Range: Up to 10 meters (33 feet) Battery: 2 x AAA batteries (not included) Control: 100+ functions Interface: Infrared <p>LUPO Replacement Remote Control Setup Instructions:</p> <ol style="list-style-type: none"> Turn on your Samsung TV. Point the LUPO Replacement Remote Control at the TV's remote sensor. Press and hold the "Source" button until the TV displays a message indicating the remote is learning. Press the appropriate button on the remote to select the function you want to control (e.g., Power, Volume, Channel). Repeat steps 3-4 for all desired functions. Once all functions are learned, the remote will be ready to use. <p>LUPO Replacement Remote Control Troubleshooting:</p> <ul style="list-style-type: none"> If the remote does not work, try relearning the functions. Check the battery level and replace if necessary. Ensure the remote is pointed directly at the TV's remote sensor. Check for interference from other electronic devices. 	<p>LUPO Replacement Remote Control for Samsung TVs - Plug-and-Play Solution</p> <p>The LUPO Replacement Remote Control offers a simple, reliable, and plug-and-play solution for Samsung LCD and LED TVs. Discover compatible models, key features, specifications, and setup instructions.</p>
	<p>Samsung LW22N23N LCD TV Owner's Instructions</p> <p>Comprehensive owner's instructions for the Samsung LW22N23N LCD TV, covering setup, connections, picture and sound settings, PC functions, and teletext.</p>