



[Manuals.plus](#) /

> [CUSIMAX](#) /

> CUSIMAX Stainless Steel 2-Slice Toaster (Model WT-8150ES) Instruction Manual

CUSIMAX WT-8150ES

CUSIMAX Stainless Steel 2-Slice Toaster Instruction Manual

MODEL: WT-8150ES

1. Introduction

Thank you for purchasing the CUSIMAX Stainless Steel 2-Slice Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. Important Safety Information

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

3. Product Overview



Figure 1: CUSIMAX Stainless Steel 2-Slice Toaster (Model WT-8150ES)

The CUSIMAX 2-Slice Toaster is designed for efficient and convenient toasting. Key features include:

- **Extra-Wide Slots:** 1.5-inch wide slots accommodate various bread types, including thick-cut bread, croissants, English muffins, and bagels.
- **SUPER-CLEAR LED Display:** A digital display shows the countdown timer, selected browning setting, and active function (Bagel or Defrost).
- **6 Browning Settings:** A dial allows selection from lightly golden (setting 1) to deep dark (setting 6) to suit individual preferences.
- **Multiple Functions:** Dedicated buttons for CANCEL, BAGEL, and DEFROST, each indicated by a blue light when active.
- **Extra-High Lift Lever:** Manually raises the toast carriage higher for safe and easy removal of smaller items.
- **Removable Crumb Tray:** Located at the bottom for easy collection and disposal of crumbs, simplifying cleaning.
- **Durable Stainless Steel Housing:** Provides a classic aesthetic and ensures product longevity.

MAKE IT TO BE YOUR DAILY TOASTER



Figure 2: Visual representation of the toaster's key features.

4. Setup

1. **Unpack:** Carefully remove the toaster and all packaging materials. Ensure all accessories are present and the toaster is free from damage.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from curtains, walls, or any flammable materials. Ensure adequate ventilation around the appliance.
3. **First Use (Burn-Off Cycle):** Before toasting food for the first time, operate the toaster empty for one cycle at the highest browning setting (6). This will burn off any manufacturing residues and odors. It is normal for a slight odor or smoke to be present during this initial use. Ensure the area is well-ventilated.

5. Operating Instructions

5.1 Basic Toasting

1. Plug the toaster into a standard electrical outlet.
2. Place up to two slices of bread into the toaster slots.
3. Select your desired browning level using the browning control dial (settings 1-6). The LED display will show the selected setting and a countdown timer.
4. Press the toast lever down until it locks into place. The toasting cycle will begin, and the LED display will count down.
5. Once the cycle is complete, the toast will automatically pop up.



Figure 3: The LED display showing browning setting and countdown timer.



Figure 4: Detailed view of the LED display during operation.

5.2 Special Functions

Your CUSIMAX toaster includes three special functions for versatile toasting:

- **CANCEL:** To stop the toasting cycle at any time, press the CANCEL button. The toast will immediately pop up. The blue indicator light will turn off.
- **BAGEL:** This function toasts the cut side of bagels while gently warming the other side. Insert the bagel with the cut side facing inwards towards the center of the toaster. Select your desired browning level, then press the BAGEL button. The blue indicator light will illuminate. Press the toast lever down to start.
- **DEFROST:** Use this function to toast frozen bread. Place frozen bread into the slots, select your desired browning level, then press the DEFROST button. The blue indicator light will illuminate. Press the toast lever down to start.

MULTIPLE FUNCTIONS IN YOUR NEED

CANCEL

Stop toasting anytime and pop up

BAGEL

Toast the cut side of bagel easily

DEFROST

Warm the frozen waffle without burning



Figure 5: Overview of the toaster's multiple function buttons.

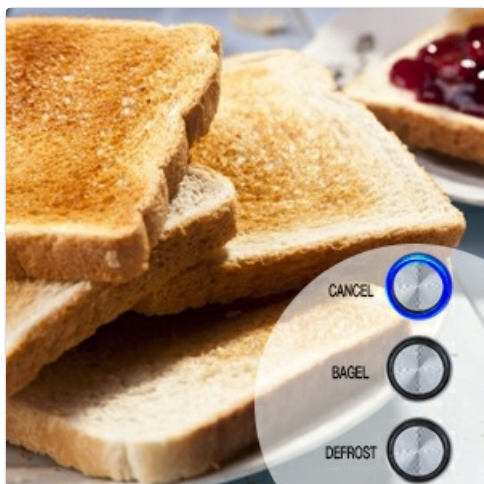 


Figure 6: The Cancel button, used to stop toasting at any time.

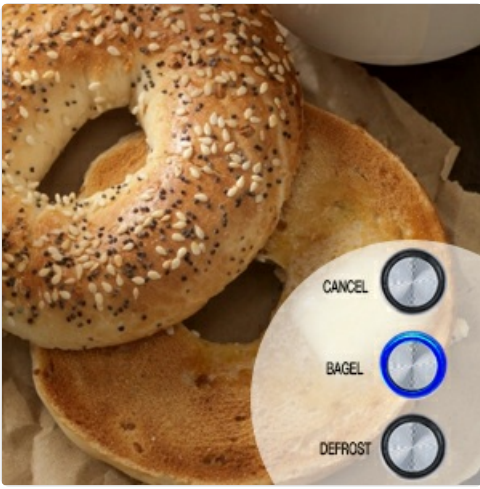 


Figure 7: The Bagel button, designed for toasting bagels.

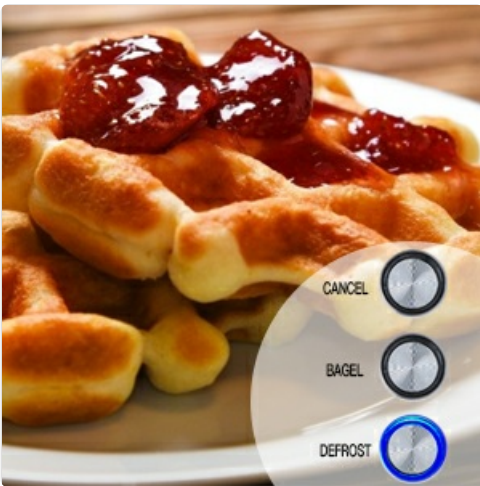 


Figure 8: The Defrost button, used for frozen bread.

5.3 Using the High-Lift Lever

After the toasting cycle is complete and the toast has popped up, you can manually pull the toast lever upwards to further elevate smaller items like English muffins or small pastries. This 'extra-high lift' feature helps prevent burning your fingers when retrieving food.



Figure 9: Demonstrating the extra-high lift lever for easy toast retrieval.

6. Maintenance

6.1 Cleaning the Crumb Tray

1. Ensure the toaster is unplugged and completely cool.

2. Pull out the removable crumb tray located at the bottom rear of the toaster.
3. Empty the crumbs into a waste bin.
4. Wipe the tray clean with a damp cloth, if necessary. Ensure it is completely dry before reinserting.
5. Slide the crumb tray back into its position until it clicks securely.



Figure 10: The removable crumb tray and high-lift lever for convenience.

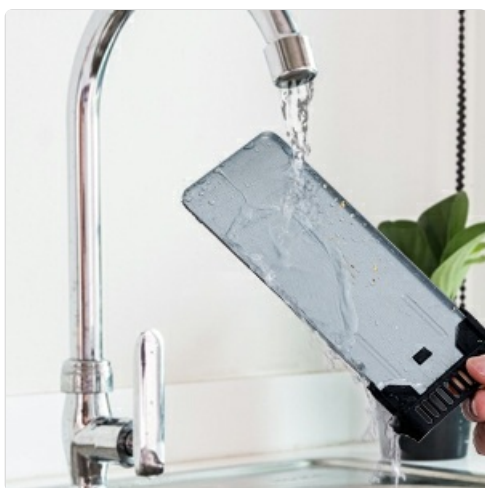 


Figure 11: Step-by-step removal of the crumb tray for cleaning.

6.2 Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.

6.3 Interior Cleaning

Never insert metal objects or utensils into the toaster slots to clean the interior. If food becomes lodged, unplug the toaster and allow it to cool completely before carefully dislodging the food. Invert the toaster over a sink to shake out any loose crumbs.

7. Troubleshooting

Problem	Possible Cause	Solution
Toast is too light/dark	Browning setting is too low/high.	Adjust the browning control dial to a higher/lower setting.
Toast does not pop up	Toast lever not fully engaged.	Ensure the toast lever is pressed down until it locks.
Food stuck in slots	Oversized food item or improper insertion.	Unplug the toaster and allow it to cool. Carefully remove the food using non-metallic tongs.
Toaster not heating	Not plugged in, power outage, or circuit breaker tripped.	Check if the toaster is properly plugged into a working outlet. Check your home's circuit breaker.
Exterior gets hot during use	Normal operation.	This is normal for toasters. Always use caution and avoid touching hot surfaces directly.

8. Specifications

- **Brand:** CUSIMAX
- **Model Number:** WT-8150ES
- **Color:** Silver Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 6.26"D x 10.43"W x 7.09"H
- **Number of Slices:** 2

- **Browning Settings:** 6
- **Special Features:** LED Display, Extra-wide Slots, Cancel Function, Bagel Function, Defrost Function, High-Lift Lever, Removable Crumb Tray
- **Item Weight:** 3.52 pounds



Figure 12: Product dimensions for the CUSIMAX 2-Slice Toaster.

9. Warranty and Support

CUSIMAX provides an 18-month warranty for this product. Additionally, lifetime customer service and support are available. For any questions, suggestions, or assistance during use, please contact CUSIMAX customer service. We aim to provide the best service and reply within 24 hours.

Contact Information:

Website: [Insert CUSIMAX Website Here]

Email: [Insert CUSIMAX Support Email Here]

Phone: [Insert CUSIMAX Support Phone Number Here]

10. Product Videos

Your browser does not support the video tag.

Video 1: An official overview of the CUSIMAX 2-Slice LED Toaster, highlighting its design and features. (Source: CusimaxPlus)

Your browser does not support the video tag.

Video 2: A demonstration of the CUSIMAX Stainless Steel Toaster's functionality. (Source: CusimaxPlus)

Your browser does not support the video tag.

Video 3: A brief clip showcasing the toaster in use. (Source: Bo.)

