

CUSIMAX 8250ES

CUSIMAX 4-Slice Toaster Instruction Manual

Model: 8250ES | Brand: CUSIMAX

[Safety Instructions](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Clean crumb trays regularly.

2. PRODUCT OVERVIEW

The CUSIMAX 4-Slice Toaster (Model: 8250ES) is designed for efficient and convenient toasting of various bread types. It features dual independent control panels, extra-wide slots, and multiple functions for optimal results.



Image: Front view of the CUSIMAX 4-Slice Toaster, showing its stainless steel finish, four slots, dual control panels, and LED displays.

Key Features:

- **5.5-inch Long & 1.5-inch Extra Wide Slots:** Accommodates various bread types, including thick-cut breads, bagels, and waffles.
- **Dual Independent Control Panels:** Allows simultaneous toasting with different browning shades.
- **SUPER-CLEAR LED Display:** Shows countdown timer, selected browning settings, and function (Toaster, Bagel, Defrost).
- **6 Browning Settings:** Adjustable dial from lightly golden to deep dark.
- **3 Toasting Functions:** Cancel, Bagel, Defrost.
- **Extra-High Lift Lever:** Safely removes smaller items without burning fingers.
- **Removable Crumb Trays:** For easy cleaning.
- **Stainless Steel Housing:** Durable and classic design.

MAKE IT TO BE YOUR DAILY TOASTER



Image: Diagram highlighting key features of the toaster, including extra-wide slots, 3 toasting functions, 6 browning settings, extra lift lever, removable crumb tray, and LED display.

3. SETUP AND FIRST USE

Unpacking:

- Carefully remove the toaster and all packaging materials.
- Ensure all parts are present and undamaged.
- Place the toaster on a stable, heat-resistant, and non-flammable surface.
- Ensure there is adequate ventilation around the toaster.

Before First Use:

1. Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners.
2. Ensure the crumb trays are properly inserted at the bottom of the toaster.
3. Plug the power cord into a standard 120V AC electrical outlet.
4. For the first use, operate the toaster without bread on browning setting 3 or 4 to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.

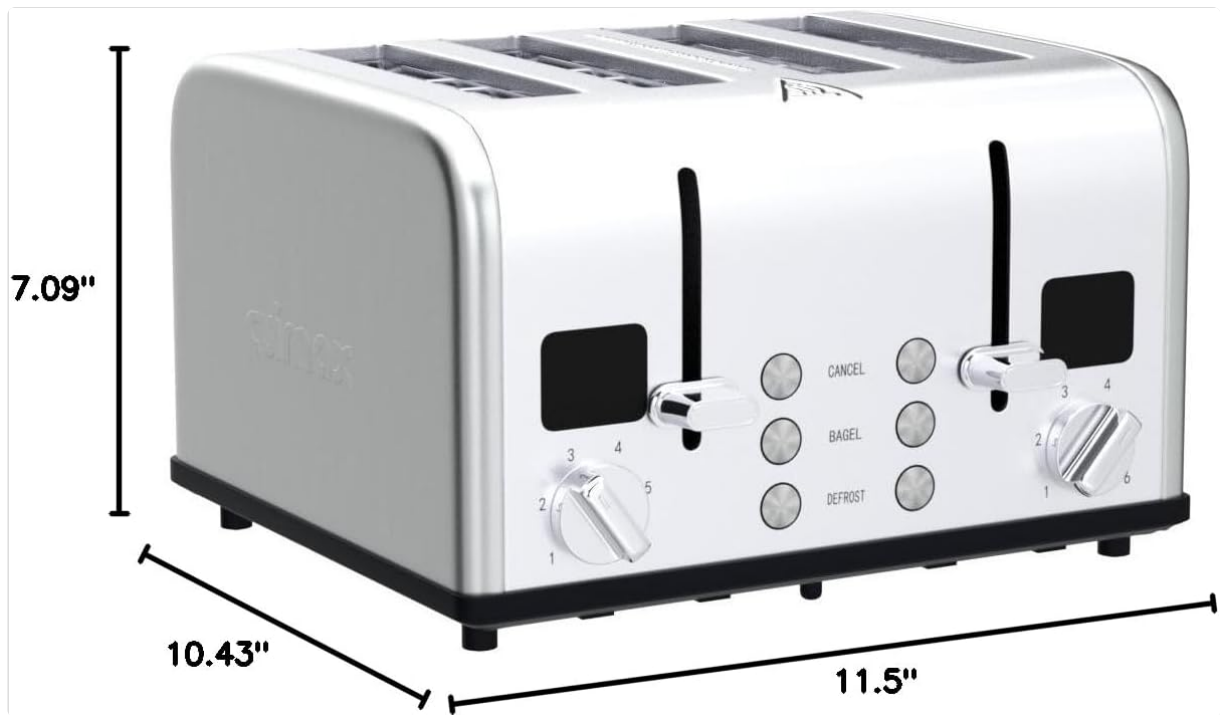


Image: Side view of the toaster with dimensions (10.43"D x 11.5"W x 7.09"H) indicating its compact size for storage.

4. OPERATING INSTRUCTIONS

Basic Toasting:

1. Insert slices of bread into the toaster slots. The toaster has four slots, divided into two independent sections.
2. Select your desired browning level using the browning control dial (1-6) for each section. Level 1 is lightest, Level 6 is darkest.
3. Press down the toast lever until it locks into place. The LED display will illuminate, showing the selected browning level and a countdown timer.
4. When the toasting cycle is complete, the toast will automatically pop up.



Image: Step-by-step visual guide on how to use the toaster, including inserting bread, setting browning level, pushing down the lever, and toast popping up.

Function Buttons:

- **CANCEL:** Press this button to stop the toasting cycle at any time and immediately eject the bread. The blue light indicates the function is active.
- **BAGEL:** Ideal for bagels and buns. This function toasts the cut side of the bagel while gently warming the other side. Insert the bagel with the cut side facing inwards. The blue light indicates the function is active.

- **DEFROST:** Use this function to toast frozen bread. It thaws and toasts the bread in one cycle, warming it quickly without burning. The blue light indicates the function is active.



Image: Close-up of the toaster's LED display, showing the browning setting, function (Toaster, Bagel, Defrost), and countdown timer.

Browning Settings:

The toaster offers 6 browning settings to suit individual preferences:

Setting	Description	Recommended Use
1-2	Lightly golden	Lightly toasted bread, pastries
3-4	Medium brown	Regular toast, bagels
5-6	Dark brown	Darker toast, thicker breads

6 BROWNING SETTINGS FOR YOUR PREFER

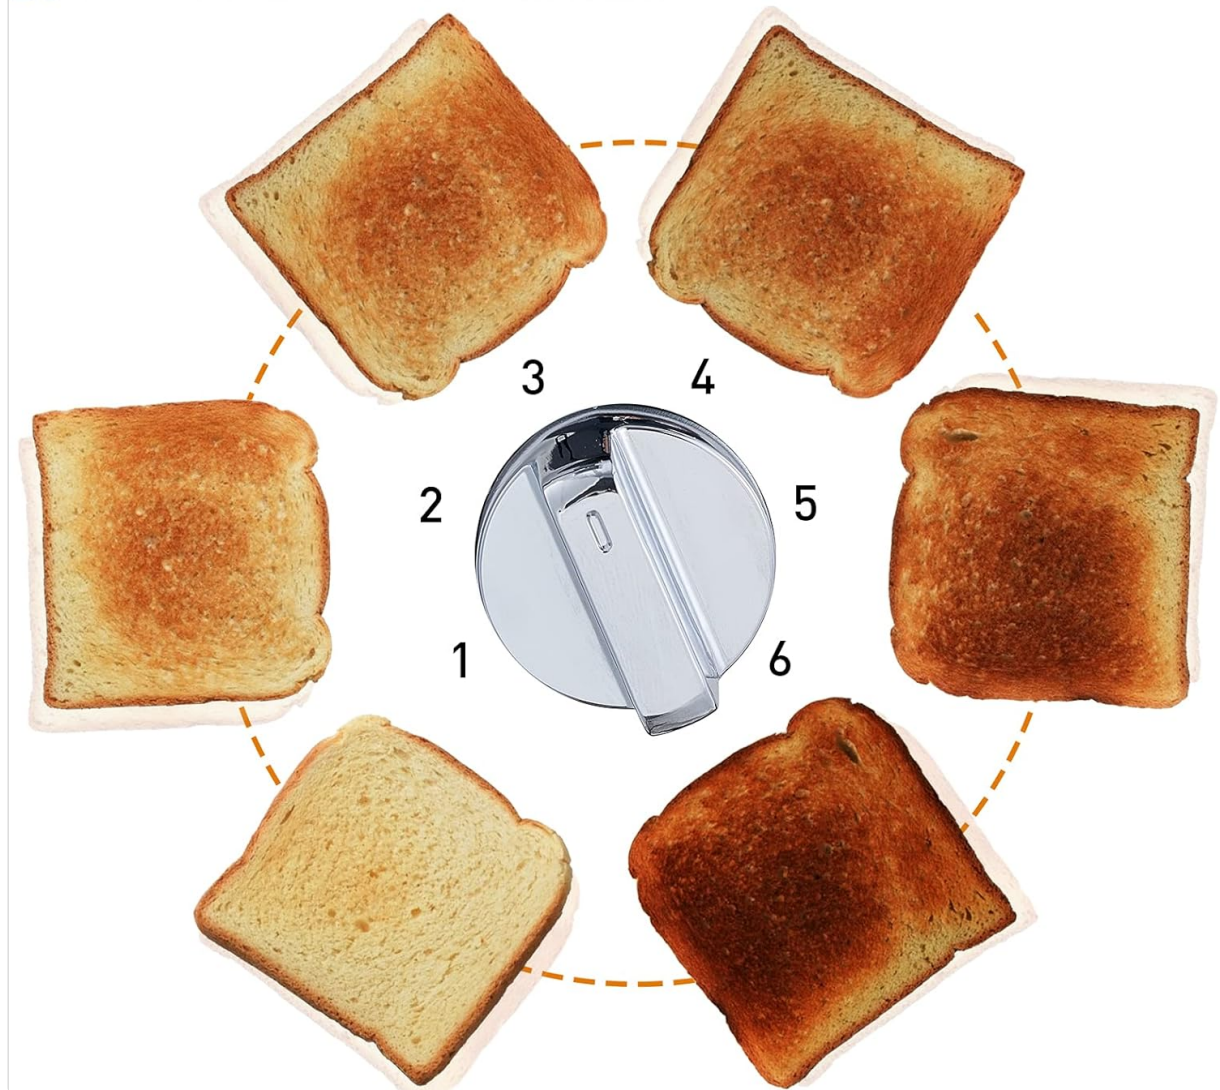


Image: Visual representation of the 6 browning settings, showing toast from very light to very dark.

Official Product Video:

No official seller videos are available for this product at this time.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always unplug the toaster** from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Trays:** Pull out the removable crumb trays from the bottom of the toaster. Discard crumbs. Wipe the trays with a damp cloth and dry thoroughly before reinserting.



Image: A hand pulling out the crumb tray from the bottom of the toaster, demonstrating easy removal for cleaning.

3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner. Do not use steel wool, scouring pads, or abrasive cleaners as they may scratch the surface.
4. **Interior:** Do not attempt to clean the inside of the toaster with sharp objects or metal utensils. If food becomes lodged inside, unplug the toaster and carefully turn it upside down to shake out the contents.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check circuit breaker. Try a different outlet.
Toast is too light/dark.	Browning setting is too low/high.	Adjust the browning control dial to a higher/lower setting.
Bread stuck in slots.	Oversize bread; food lodged.	Unplug toaster. Use the extra-high lift lever. If still stuck, carefully remove after cooling. Do not use metal objects.
Smoke coming from toaster.	Crumbs accumulated; food lodged; first use residue.	Unplug immediately. Clean crumb trays. Remove any lodged food. If it's the first use, this is normal.

7. SPECIFICATIONS

- **Brand:** CUSIMAX
- **Model:** 8250ES
- **Color:** Silver Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 10.43"D x 11.5"W x 7.09"H
- **Wattage:** 1650 watts
- **Voltage:** 120 Volts
- **Number of Slices:** 4
- **Number of Browning Settings:** 6

- **Number of Programs:** 3 (Cancel, Bagel, Defrost)
- **Item Weight:** 5.59 pounds
- **Display Type:** LED

8. WARRANTY AND SUPPORT

CUSIMAX provides free Lifetime Customer Service and support for 18 Months Warranty.

If you have any questions or suggestions during using, please contact CUSIMAX customer service. They aim to provide the best service and reply within 24 hours.

For support, please refer to the contact information provided in your product packaging or visit the official CUSIMAX website.