

[Manuals.plus](#) /

› [CUSIMAX](#) /

› CUSIMAX 4 Slice Toaster Instruction Manual

## CUSIMAX B092VVQ8PL

# CUSIMAX 4 Slice Toaster Instruction Manual

Model: B092VVQ8PL

Brand: CUSIMAX

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Be sure to unplug bread from outlet after each use.

- To reduce the risk of fire, clean out crumb trays regularly.

## SAVE THESE INSTRUCTIONS

## PRODUCT OVERVIEW

The CUSIMAX 4 Slice Toaster is designed for efficient and versatile toasting, featuring extra-wide slots and dual control panels for simultaneous operation. Its sleek stainless steel design complements any kitchen.



Figure 1: CUSIMAX 4 Slice Toaster with bread and bagels in slots, showcasing its sleek design and digital displays.

## Key Features:

- **5.5-inch Long, 1.5-inch Extra Wide Slots:** Accommodates various bread types, including thick-cut breads, croissants, English muffins, and bagels.
- **Dual Independent Control Panels:** Allows for simultaneous toasting of different bread types or browning shades.
- **SUPER-CLEAR LED Display:** Shows countdown timer, selected browning settings, and function (Bagel/Defrost).
- **6 Browning Settings:** Adjustable dial from lightly golden to deep dark to suit individual preferences.
- **Multiple Functions:** CANCEL, BAGEL, and DEFROST functions with blue light indicators.
- **Extra-High Lift Lever:** Safely retrieve smaller items without burning fingers.
- **Removable Crumb Trays:** Two trays for easy cleaning and maintenance.
- **Durable Stainless Steel Housing:** Classic and robust design.

# MAKE IT TO BE YOUR DAILY TOASTER



Figure 2: Overview of key features of the CUSIMAX Toaster.

## SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.
3. **Initial Use (Burn-off):** Before first use, operate the toaster without bread for a few cycles at a medium setting (e.g., setting 3 or 4) to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

### Basic Toasting:

1. Insert slices of bread into the toaster slots. The extra-wide slots accommodate various bread sizes.
2. Select your desired browning level using the browning control dial (settings 1-6). Setting 1 is the lightest, and 6 is the darkest. The LED display will show the selected setting and estimated time.



Figure 3: Browning settings from 1 (lightest) to 6 (darkest).

3. Press down the toast lever until it locks into place. The toaster will begin toasting, and the LED display will show a countdown timer.

## 6 BROWNING SETTINGS FOR YOUR PREFER

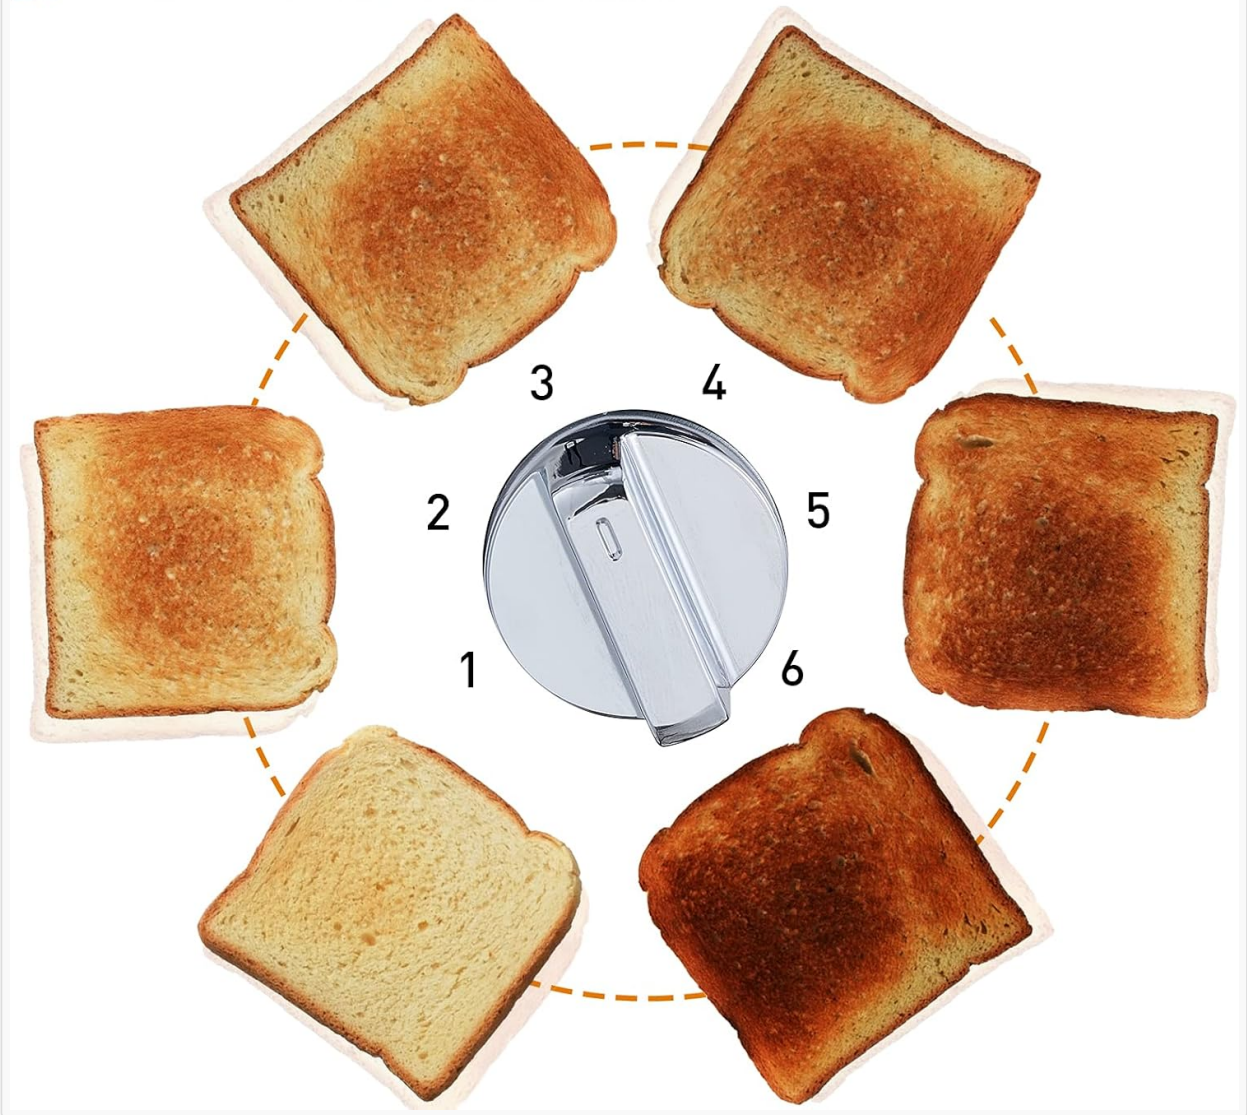 


Figure 4: The clear LED display shows the function, browning setting, and countdown timer.

- Once the toasting cycle is complete, the toast will automatically pop up. Use the extra-high lift lever to safely retrieve smaller items.

### Special Functions:

- CANCEL:** Press the **CANCEL** button at any time to stop the toasting process and immediately eject the bread. The blue light will illuminate when active.

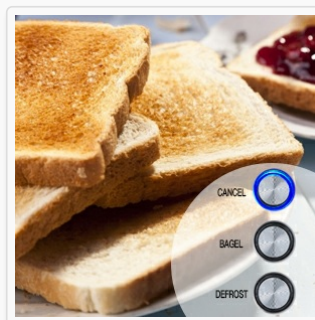 


Figure 5: Cancel function button and its indicator light.

- BAGEL:** Ideal for bagels and English muffins. This function toasts the cut side while gently warming the other side. Press the **BAGEL** button after lowering the toast lever. The blue light will illuminate when active.

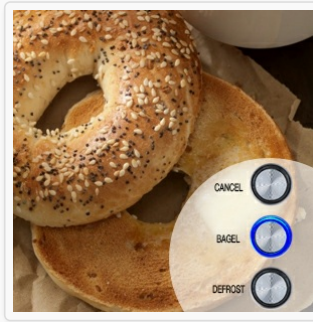 


Figure 6: Bagel function button and its indicator light.

- **DEFROST:** For toasting frozen bread. This function adds extra time to the toasting cycle to thaw and then toast the bread. Press the **DEFROST** button after lowering the toast lever. The blue light will illuminate when active.

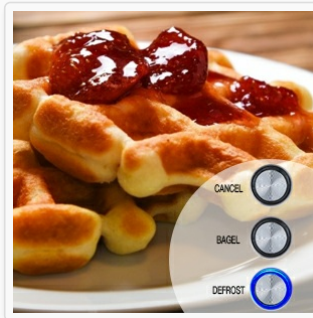 


Figure 7: Defrost function button and its indicator light.

## Using Dual Control Panels:

The CUSIMAX 4 Slice Toaster features two independent control panels, allowing you to toast different items or at different browning levels simultaneously. Each side (two slots) has its own set of controls (lever, browning dial, and function buttons).

# Extra Wide Slots

Perfect to toast various kinds of thick-cut breads



Figure 8: Dual independent control panels for versatile toasting.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and completely cooled down.
2. **Crumb Tray Cleaning:** Pull out the removable crumb trays located at the bottom of the toaster. Discard crumbs and wipe the trays clean with a damp cloth. Dry thoroughly before reinserting. Clean regularly to prevent fire hazards.



Figure 9: Removable crumb tray for easy cleaning.

- 3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner. Do not use abrasive pads or harsh chemicals that could damage the finish.
- 4. **Interior Cleaning:** Do not attempt to clean the inside of the toaster with sharp objects or abrasive materials. If food becomes lodged, unplug the toaster and carefully remove it.
- 5. **Cord Storage:** The power cord can be wrapped around the base for neat storage when not in use.



Figure 10: Integrated cord storage at the base of the toaster.

TROUBLESHOOTING

| Problem                         | Possible Cause                                                             | Solution                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Toaster does not turn on.       | Not plugged in; power outlet malfunction; toast lever not fully depressed. | Ensure toaster is securely plugged into a working outlet. Press the toast lever down until it locks.            |
| Bread is unevenly toasted.      | Inconsistent bread thickness; crumb tray full.                             | Ensure bread slices are of uniform thickness. Clean crumb trays regularly. Adjust browning setting.             |
| Smoke or burning smell.         | Food lodged inside; crumb tray full; initial burn-off.                     | Unplug and allow to cool. Remove any lodged food. Clean crumb trays. Initial use may produce slight smoke/odor. |
| Toast lever does not stay down. | Toaster not plugged in; internal mechanism issue.                          | Ensure the toaster is plugged in. If the issue persists, contact customer service.                              |

SPECIFICATIONS

- **Brand:** CUSIMAX
- **Model:** B092VVQ8PL

- **Color:** Black Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 11.5"W x 10.43"D x 7.09"H
- **Number of Slices:** 4
- **Wattage:** 1650 watts
- **Voltage:** 120 Volts
- **Number of Browning Settings:** 6
- **Special Features:** Cancel, Bagel, Defrost Functions, LED Display, Extra-High Lift, Removable Crumb Trays
- **Item Weight:** 5.77 pounds

## WARRANTY AND SUPPORT

---

CUSIMAX provides free Lifetime Customer Service and support for 18 Months Warranty for this product. If you have any questions or suggestions during use, please contact CUSIMAX customer service.

**Contact Information:** Please refer to the contact details provided on the product packaging or the official CUSIMAX website for the most up-to-date support information.

