

Manuals.plus /

› Spares2go /

› SPARES2GO Lower Basket Clip Instruction Manual for Bauknecht Dishwashers

Spares2go Lower Basket Clip

SPARES2GO Lower Basket Clip Instruction Manual

Compatible with Bauknecht Dishwashers (ADP, GSF, GSI, GSU, GSX Series)

PRODUCT OVERVIEW

This document provides instructions for the installation and maintenance of the SPARES2GO Lower Basket Clip, a high-quality replacement part designed for various Bauknecht dishwasher models. This clip is essential for securing the lower dishwasher basket and ensuring proper operation of the plate rack system.

Note: This product is a compatible replacement part and is not an original Bauknecht component. Manufacturer names and model numbers are used for compatibility reference only.



Image 1: The SPARES2GO Lower Basket Clip. This image shows the grey plastic clip from an angled top-down view, highlighting its two prongs on each side designed to hold a dishwasher basket roller.

COMPATIBILITY

This replacement lower basket clip is compatible with a wide range of Bauknecht dishwasher models. Please verify your dishwasher model against the list below to ensure compatibility.

Compatible Bauknecht Dishwasher Series:

- ADP Series: ADP 5300 WH, ADP 5650 WH, ADP 6930 IX PC, ADP S 5540, ADPS 3540 BL, ADPS 3540 WH, ADPS 5540 WH
- GSF Series: GSF 100 POWER IN, GSF 1023 03 A3 + TR PT, GSF 102303/1 A3+ TR, GSF 102414 A+++ WS, GSF 180 POWER WS, GSF 190 POWER IN, GSF 2719 POWER WS, GSF 2989/1 WS, GSF 2990, GSF 61204 A++ WS, GSF 61307 A++ WS, GSF 61314 A++ WS, GSF 61415 A++ TR, GSF 6610 PC, GSF 6619R, GSF 81308 A++ WS, GSF 81414 A++ WS, GSF 81454 A++ PT, GSFK 102414
- GSI Series: GSI 102414 A+++ IN, GSI 158111 A++, GSI 158112 A++, GSI 61204 A++ IN, GSI 61307 A++ IN, GSI 61415 A++ TR, GSI 81308 A++ IN, GSI 814 A++ IN, GSI 81454 A++ PT, GSIK 5011 IN A+, GSIK 6204A2P, GSIK 8214A2P, GSIS 5104A1I
- GSU Series: GSU 102303/1 A3+ TR, GSU 102414 A+++ IN, GSU 1024 A+++ WS, GSU 158111 A++, GSU 158112 A++, GSU 61204 A++ IN, GSU 61307 A++ IN, GSU 61415 A++TR, GSU 81308 A++ IN, GSU 81414 A++ IN, GSU 81414 A++ WS, GSU 81454 A++ PT, GSUK 822 14A2P
- GSX Series: GSX 102414 A+++ , GSX 158111 A++ , GSX 158112 A++ , GSX 61204 A++ , GSX 61307A++ , GSX 61414 A++ , GSX 61415 A++ TR, GSX 81308 A++ , GSX 8 A++ , GSX 81414141414 A++ , GSX 8141414 14 A++ , GSX 81454 A++ , GSXA 6134 TR A++ , GSXK 5011 A+ , GSXK 5020 SD , GSXK 6204A2 , GSXK 6214A2 , GSXK 8214A2 , GSXS 5104A1

SETUP AND INSTALLATION

The lower basket clip is designed to be easily installed without specialized tools. It secures the rollers on the lower dishwasher basket, allowing it to slide smoothly.

1. **Preparation:** Ensure the dishwasher is turned off and unplugged from the power outlet for safety. Remove the lower dishwasher basket from the appliance.
2. **Identify Damaged Clip:** Locate the existing damaged or broken clip on the lower basket's roller assembly. The clips typically hold the roller wheels in place on the basket frame.
3. **Remove Old Clip:** Carefully detach the old clip. This may involve gently prying it off or sliding it out, depending on the specific basket design. Be cautious not to damage the basket frame.
4. **Install New Clip:** Position the new SPARES2GO Lower Basket Clip onto the designated spot on the lower basket frame. Ensure the clip's prongs align with the roller wheel's axle or mounting point.
5. **Secure the Clip:** Press the new clip firmly into place until it clicks or feels securely attached. Verify that the roller wheel is properly held by the clip and can rotate freely.
6. **Test Functionality:** Reinsert the lower dishwasher basket into the dishwasher. Gently pull it out and push it back in a few times to ensure it slides smoothly and the rollers are functioning correctly.
7. **Final Steps:** Plug the dishwasher back into the power outlet.

OPERATING

Once the lower basket clip is correctly installed, the dishwasher's lower basket should operate as intended, allowing for smooth loading and unloading of dishes. No specific operational steps are required for the clip itself beyond ensuring its proper installation.

MAINTENANCE

Regular inspection of the lower basket clips and rollers is recommended to ensure continued smooth operation of your dishwasher basket. Over time, plastic components can wear or become brittle.

- **Periodic Check:** Every few months, remove the lower basket and visually inspect all clips and rollers for signs of wear, cracks, or damage.
- **Cleaning:** If food debris or grime accumulates around the clips or rollers, clean them with a soft brush and mild detergent. Rinse thoroughly.
- **Replacement:** If any clip appears damaged or broken, replace it promptly to prevent further issues with the basket's movement or potential damage to the dishwasher.

TROUBLESHOOTING

If you experience issues with your dishwasher's lower basket after installing the clip, consider the following:

- **Basket Not Sliding Smoothly:**
 - Ensure all clips are securely attached and not loose.
 - Check that the roller wheels are properly seated within the clips and on the basket rails.
 - Inspect the dishwasher's internal rails for obstructions or damage.
- **Clip Detaches:**
 - Verify that the correct clip type has been installed for your specific Bauknecht model.
 - Ensure the clip was pressed firmly into place during installation.
 - If the clip repeatedly detaches, it may indicate wear on the basket frame's mounting point, or the clip itself might be faulty.

SPECIFICATIONS

Product Type	Lower Dishwasher Basket Clip
Brand	SPARES2GO
Compatibility	Bauknecht Dishwashers (ADP, GSF, GSI, GSU, GSX Series)
Material	Durable Plastic
Color	Grey (as pictured)
Origin	China
ASIN	B092W5F69G