

[Manuals.plus](#) /

› [YESMOO](#) /

› SmartClean 2000 Robovac - User Manual

YESMOO 8788JCP

SmartClean 2000 Robovac - User Manual

Model: 8788JCP | Brand: YESMOO

1. INTRODUCTION

The SmartClean 2000 Robovac is an intelligent robotic vacuum cleaner designed to provide hassle-free cleaning for your living spaces. It efficiently navigates various floor types, from hardwood to rugs and carpets, ensuring a thorough clean with its powerful suction and advanced features. This manual provides essential information for setting up, operating, and maintaining your Robovac.



Figure 1.1: The SmartClean 2000 Robovac, showcasing its sleek design along with its remote control and a smartphone displaying the companion app for smart home integration.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the SmartClean 2000 Robovac. Keep this manual for future reference.

- Ensure the charging dock is placed against a wall in an open area, away from obstacles.
- Do not use the Robovac on wet surfaces or to pick up liquids.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Do not operate the Robovac in areas with exposed electrical wires.
- Supervise children and pets when the Robovac is in operation.
- Only use the original power adapter and charging dock provided with the device.

3. PRODUCT FEATURES

The SmartClean 2000 Robovac is equipped with several features to optimize your cleaning experience:

- **Powerful Suction:** Features 2000Pa suction power for effective cleaning on various surfaces.
- **Slim Profile:** At just 2.86 inches high, it easily cleans under furniture.
- **Intelligent Navigation:** Built-in multi-directional movement and sensors identify stairs and avoid collisions.
- **Long Battery Life:** Provides up to 100 minutes of continuous cleaning on a single charge.
- **Automatic Charging:** Returns to its dock for automatic charging when the battery is low or cleaning is complete.
- **Multiple Control Methods:** Can be operated via remote control, Wi-Fi enabled smartphone APP, or voice-enabled apps like Google Assistant.
- **Large Dust Bin:** Equipped with a 0.6-liter capacity dirt bin and a high-efficiency filter.



Figure 3.1: The Robovac's super slim profile, measuring 12.76 inches in diameter and 2.86 inches in height, allowing it to clean under low-clearance furniture.

Brain, meet Brawn.

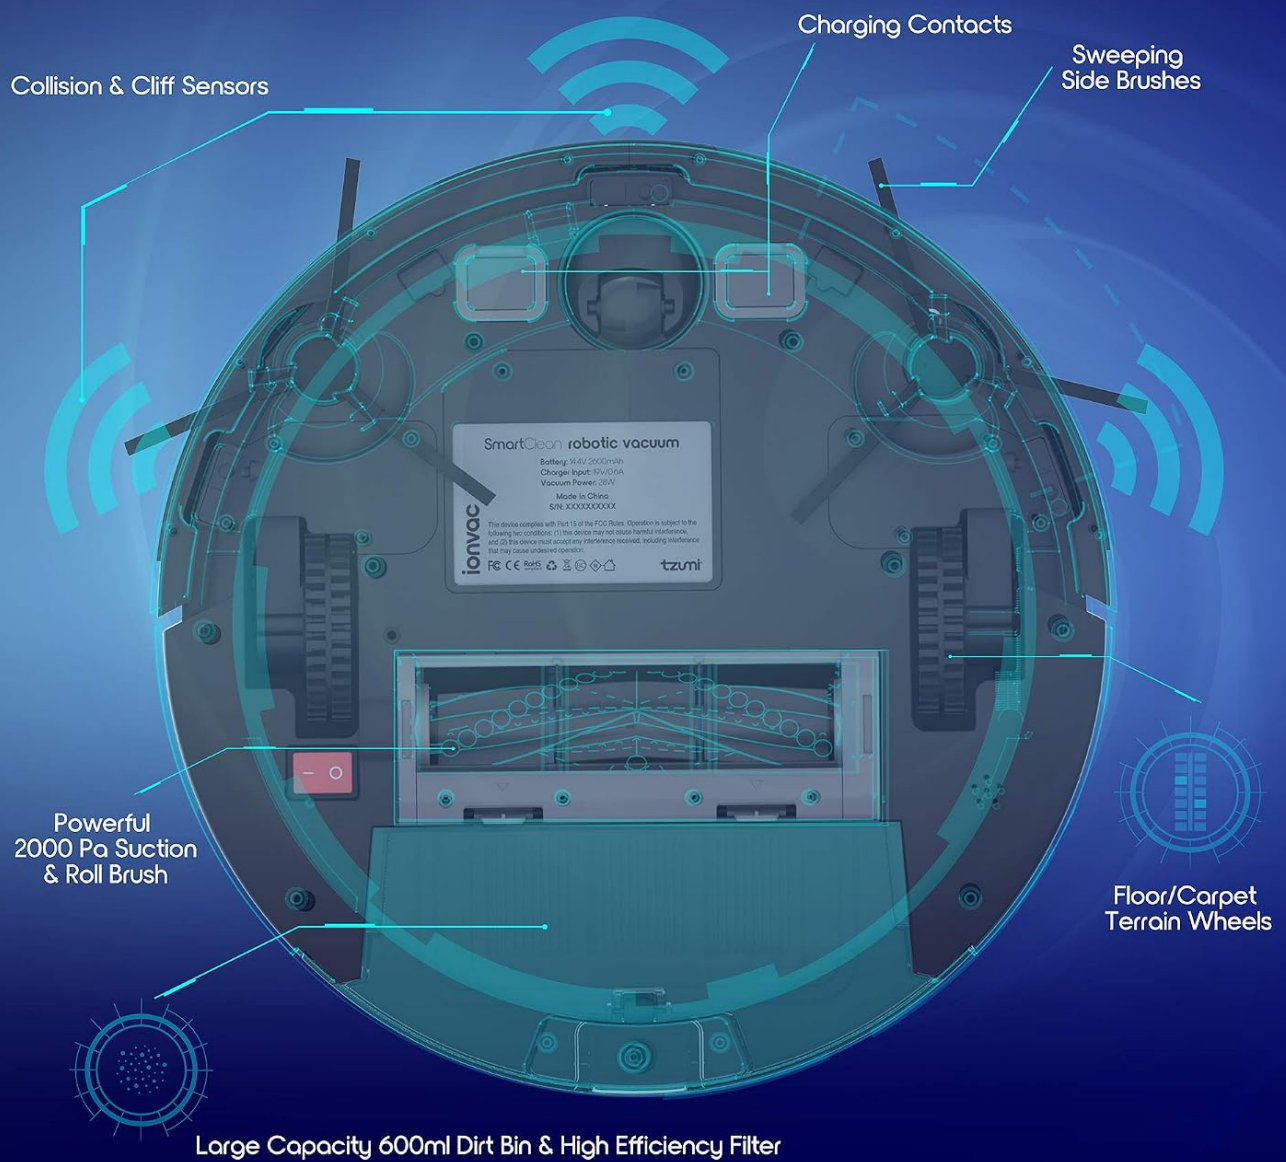


Figure 3.2: Demonstrating the impressive 2000Pa cleaning power of the Robovac as it effectively picks up debris from the floor.



Figure 3.3: The Robovac operating with a quiet 62dB noise level, suitable for use even when a baby is sleeping.

Senses Stairs & Obstacles



Figure 3.4: The Robovac's advanced sensors detect stairs and other obstacles, preventing falls and collisions.



Figure 3.5: An exploded view of the Robovac's underside, highlighting key components such as collision and cliff sensors, sweeping side brushes, powerful 2000 Pa suction and roll brush, floor/carpet terrain wheels, and the large capacity 600ml dirt bin with a high-efficiency filter.

4. SETUP

4.1 Unpacking and Initial Placement

1. Carefully remove all components from the packaging.
2. Place the charging dock against a wall in an open, clutter-free area. Ensure there is at least 1 meter (3 feet) of clear space in front of the dock and 0.5 meters (1.5 feet) on either side.
3. Plug the power adapter into the charging dock and then into a wall outlet.

4.2 First Use and Charging

1. Manually place the Robovac onto the charging dock, ensuring the charging contacts align. The indicator light on the Robovac will illuminate to show it is charging.
2. Allow the Robovac to fully charge before its first use. This may take several hours.



Figure 4.1: The Robovac demonstrating its intelligent docking capability, returning to its charging station automatically after cleaning or when battery is low.

5. OPERATING INSTRUCTIONS

5.1 Control Methods

The SmartClean 2000 Robovac offers flexible control options:

- **Remote Control:** Use the included remote to start/stop cleaning, select cleaning modes, and direct the Robovac manually.
- **Smartphone App:** Download the companion app (available on Google Play and App Store) to control the Robovac,

schedule cleanings, and monitor its status from your smartphone.

- **Voice Control:** Integrate with voice-enabled assistants such as Google Assistant for hands-free operation.

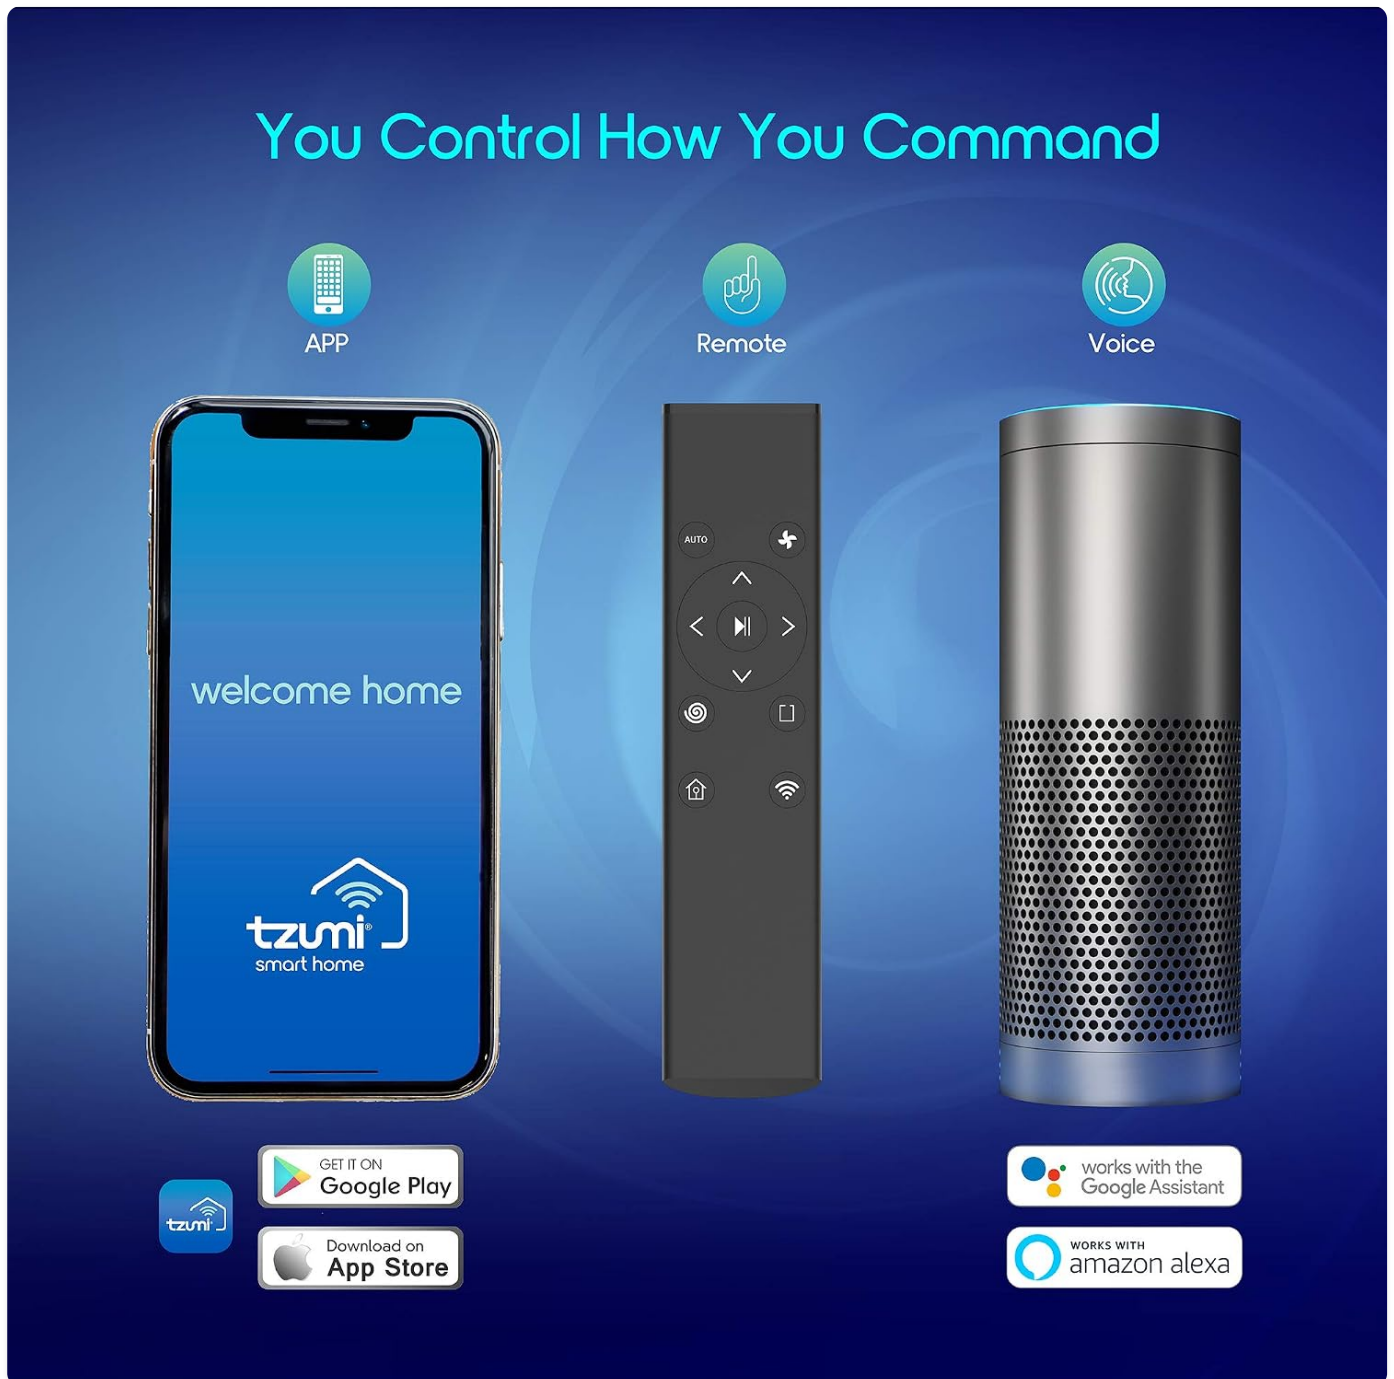


Figure 5.1: Various ways to control your SmartClean 2000 Robovac, including a dedicated smartphone app, the physical remote control, and voice commands via compatible smart assistants like Amazon Echo.

5.2 Cleaning Modes

The Robovac features 4 distinct cleaning modes to suit different needs:

- **Auto Mode:** The default mode, where the Robovac intelligently navigates and cleans your home.
- **Spot Mode:** Focuses on a specific area for intensive cleaning.
- **Edge Mode:** Cleans along walls and furniture edges.
- **Manual Control:** Allows you to steer the Robovac using the remote control or app.

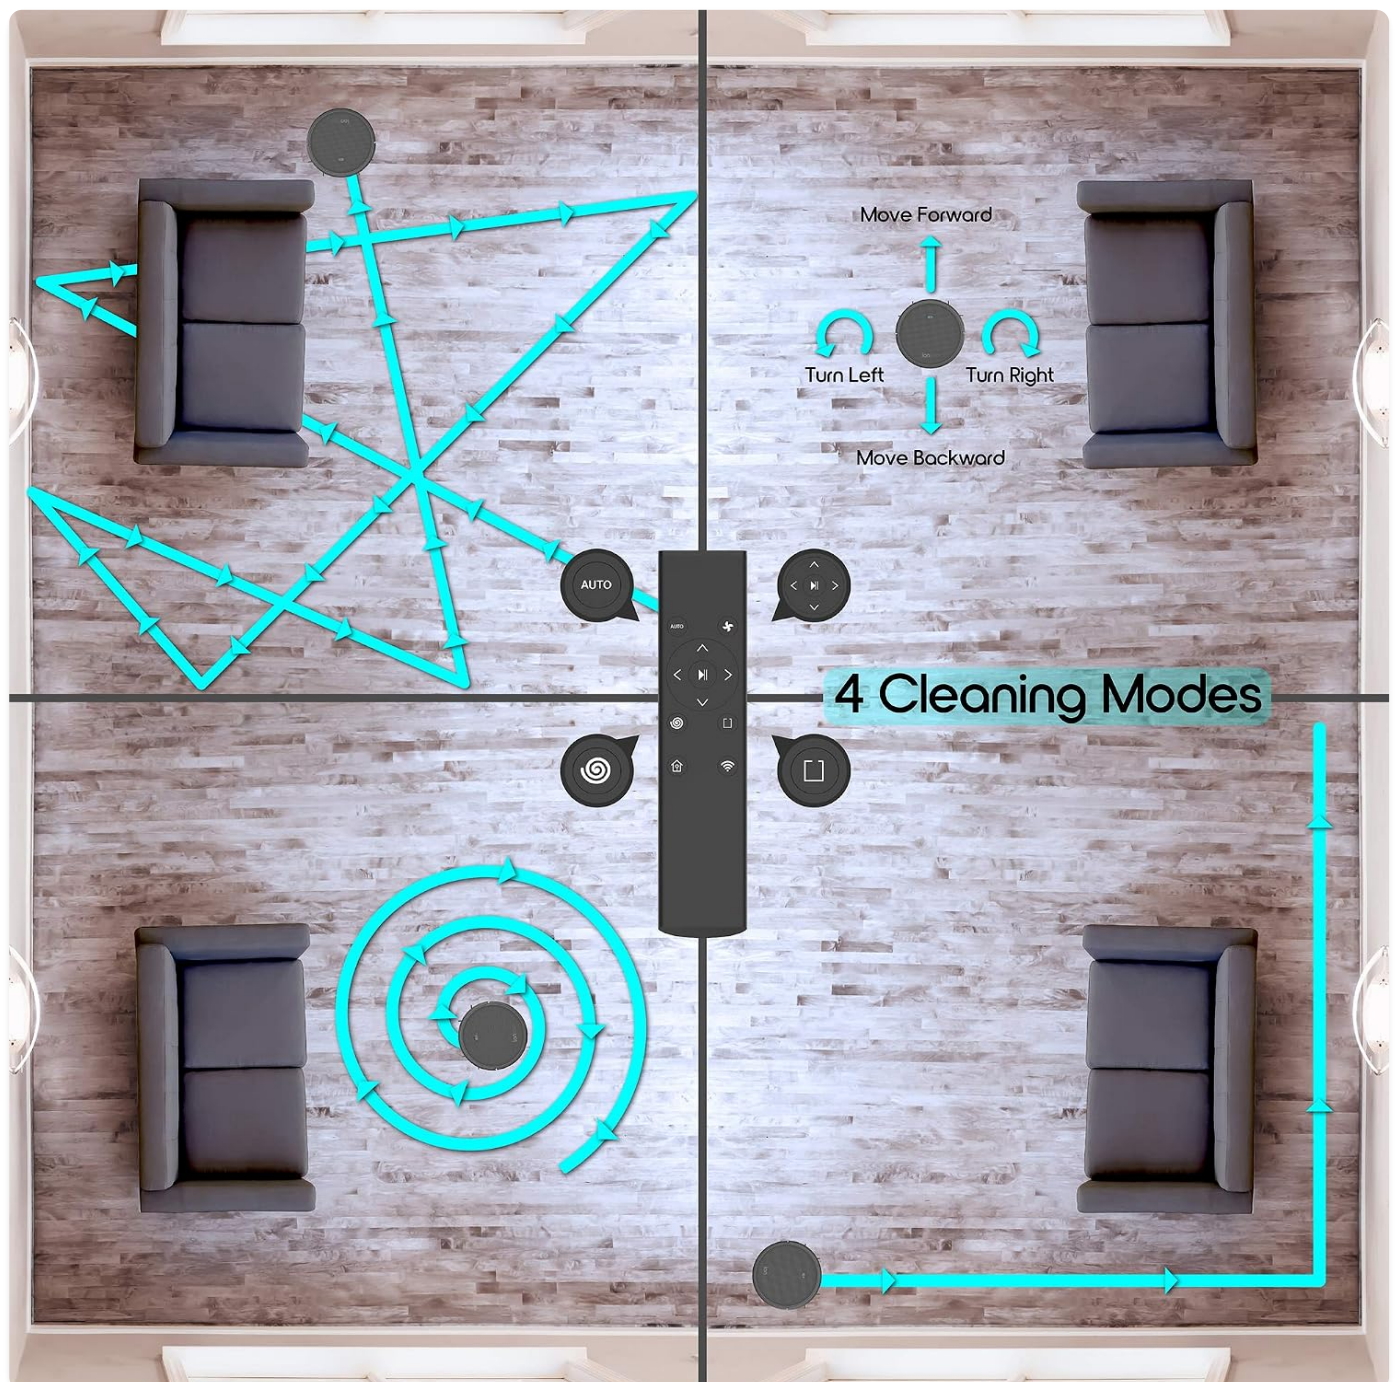


Figure 5.2: Visual representation of the four cleaning modes: automatic (random path), manual control (move forward, turn left/right, move backward), spot cleaning (spiral pattern), and edge cleaning (along walls).

6. MAINTENANCE

Regular maintenance ensures optimal performance of your SmartClean 2000 Robovac.

6.1 Emptying the Dust Bin

1. Press the dust bin release button and pull out the dust bin.
2. Open the dust bin cover and empty its contents into a trash can.
3. Clean the filter by gently tapping it or using a cleaning brush.
4. Rinse the dust bin with water if necessary (ensure it is completely dry before reinserting).

6.2 Cleaning Brushes and Wheels

- Regularly check the main brush and side brushes for tangled hair or debris. Use the cleaning tool to remove any obstructions.
- Wipe the wheels and sensors with a dry cloth to ensure proper function.

7. TROUBLESHOOTING

If you encounter issues with your Robovac, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Robovac does not turn on.	Low battery; Power switch off.	Charge the Robovac; Ensure power switch is ON.
Robovac does not charge.	Charging contacts not aligned; Power adapter not connected.	Reposition Robovac on dock; Check power connections.
Poor cleaning performance.	Full dust bin; Clogged brushes/filter.	Empty dust bin; Clean brushes and filter.
Robovac gets stuck frequently.	Obstacles; Dirty sensors.	Clear obstacles; Clean sensors.

8. SPECIFICATIONS

Feature	Detail
Brand	YESMOO
Model	8788JCP
Color	Black
Product Dimensions	12.76"L x 12.76"W x 2.86"H
Item Weight	7.8 pounds
Suction Power	2000Pa
Battery Life	100 minutes
Dust Bin Capacity	0.6 Liters
Control Method	Remote, App, Voice
Filter Type	Cartridge
Voltage	220 Volts

9. OFFICIAL PRODUCT VIDEOS

No official seller videos are available for this product at this time.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official YESMOO website. Keep your purchase receipt as proof of purchase.

For further assistance, you may also visit the product's Amazon page:amazon.com/dp/B092W7G2B3

© 2024 YESMOO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question