

[Manuals.plus](#) /

› [Westclox](#) /

› Westclox Tilt & Swivel Digital Alarm Clock User Manual

Westclox 71052

Westclox Tilt & Swivel Digital Alarm Clock

Model# 71052

INTRODUCTION

Thank you for choosing the Westclox Tilt & Swivel Digital Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Designed for ease of use and optimal visibility, this clock features a large LED display and a unique adjustable stand to suit your needs.



Figure 1: Front view of the Westclox Tilt & Swivel Digital Alarm Clock with its large red LED display.

KEY FEATURES

- **Digital Display:** Features a large 1.8" LED digital display for easy reading.
- **Tilt & Swivel Design:** Unique tilt and swivel stand allows flexible positioning.
- **Alarm Clock Function:** Built-in alarm clock with loud, distinctive sound.
- **Easy to Use:** Simple to set alarms and adjust settings.
- **Durable Construction:** Made from sturdy ABS plastic with metal accents.

WESTCLOX TILT & SWIVEL DIGITAL ALARM CLOCK EXTRA LARGE

LED TIME DISPLAY—EASY TO READ DISPLAY GREAT
FOR BEDROOM HOME OFFICE

-  Electric Operated
-  Snooze Button
-  Alarm Clock
-  Large LED Display
-  Easy To Use Buttons
-  Battery Backup
(Batteries Not Included)



Figure 2: Key features of the Westclox Digital Alarm Clock.

PACKAGE CONTENTS

- Westclox Tilt & Swivel Digital Alarm Clock (Model# 71052)
- Power Adapter
- Instruction Manual

SETUP

1. Power Connection

1. Unpack the alarm clock and power adapter from the packaging.
2. Insert the small end of the power adapter into the DC IN jack located on the back of the clock.
3. Plug the other end of the power adapter into a standard electrical outlet. The LED display will illuminate.

2. Battery Backup (Optional)

For backup power during outages, install 2 AAA batteries (not included) into the battery compartment on the bottom of the clock. The battery backup maintains time and alarm settings but does not power the display.



ELECTRIC OPERATED WITH BATTERY BACKUP

NO GOODBYE TO OVERSLEEPING DURING POWER OUTAGE

The battery backup is optional and requires 2 AAA battery (not included)

Figure 3: The clock operates electrically with optional battery backup.

OPERATING INSTRUCTIONS

SIMPLE, EASY TO USE CONTROLS



Figure 4: Rear panel controls for setting time and alarms.

1. Setting the Time

1. Press and hold the **TIME SET** button located on the back of the clock until the hour digits begin to flash.
2. Press the **HOUR SET** button repeatedly to adjust the hour. Observe the PM indicator for correct AM/PM setting.
3. Press the **MIN SET** button repeatedly to adjust the minutes.
4. Press the **TIME SET** button again to confirm and save the time.

2. Setting Alarms (AL1 and AL2)

This clock features two independent alarms.

1. **To Set Alarm 1:** Press and hold the **ALARM 1 SET** button until the hour digits flash. Use **HOUR SET** and **MIN SET** buttons to adjust the alarm time. Press **ALARM 1 SET** again to confirm.
2. **To Set Alarm 2:** Follow the same procedure using the **ALARM 2 SET** button.
3. **To Activate/Deactivate Alarm:** Use the **ALARM 1 ON/OFF** and **ALARM 2 ON/OFF** switches on the back of the clock to turn each alarm on or off. An indicator light on the display will show if an alarm is active.

3. Snooze and Dimmer Function

The large button on top of the clock serves two functions:

- **Snooze:** When an alarm sounds, press the **SNOOZE / DIMMER** button to temporarily silence the alarm for a few minutes. The alarm will sound again after the snooze period.
- **Dimmer:** When the alarm is not sounding, press the **SNOOZE / DIMMER** button to cycle through different brightness levels for the LED display (5% to 100%).



Figure 5: The large snooze button on top of the clock.

A promotional graphic for the clock's dimmer feature. It features a large image of the clock with a red LED display showing '12:08'. To the right, the text 'EXTRA LARGE' is written in large, bold, teal letters, followed by '1.8" RED DIGITAL LED DISPLAY'. Below this, a horizontal slider bar shows a gradient from dark to light, with '100%' and a sun icon on the left, and '05%' and a sun icon on the right. At the bottom, four smaller images of the clock show the display at different brightness levels, from very dim to full brightness.

EXTRA LARGE

1.8" RED DIGITAL LED DISPLAY

DISPLAY 5%-100% ADJUSTABLE DIMMER

100% 05%

Figure 6: Adjustable display brightness from 5% to 100%.

4. Tilt & Swivel Function

The clock is designed with a flexible stand for optimal viewing angles:

- **Tilt:** The clock face can be tilted 35 degrees back and forth. Gently adjust the top panel to your desired angle.
- **Swivel:** The base allows the clock to swivel 90 degrees left and right. Rotate the clock on its base for the best viewing position.



Figure 7: The clock offers 35-degree tilt and 90-degree swivel for flexible positioning.



Figure 8: Multiple viewing angles are possible with the tilt and swivel feature.

MAINTENANCE

To ensure the longevity and optimal performance of your Westclox alarm clock, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.
- **Battery Replacement:** If using battery backup, replace AAA batteries annually or when the display shows signs of dimming during a power outage.

TROUBLESHOOTING

If you encounter any issues with your alarm clock, please refer to the following common problems and solutions:

- **No Display / Clock Not Working:**
 - Ensure the power adapter is securely plugged into both the clock and a working electrical outlet.
 - Check if the outlet is receiving power by plugging in another device.
 - If using battery backup, ensure batteries are correctly installed and not depleted.
- **Alarm Not Sounding:**
 - Verify that the ALARM ON/OFF switch for the desired alarm (AL1 or AL2) is in the "ON" position.
 - Check that the alarm time is correctly set and is not set for AM instead of PM, or vice-versa.
- **Display Too Bright/Dim:**
 - Press the SNOOZE / DIMMER button on top of the clock to adjust the brightness level.

SPECIFICATIONS

Feature	Detail
Brand	Westclox
Model Number	71052
Color	Red
Display Type	Digital LED
LED Display Size	1.8 inches
Product Dimensions	6"W x 4"H
Power Source	Corded Electric
Battery Backup	2 AAA batteries (not included)
Frame Material	Acrylonitrile Butadiene Styrene
Item Weight	9.92 ounces
Mounting Type	Tabletop



Figure 9: Dimensions of the Westclox Digital Alarm Clock.

WARRANTY AND SUPPORT

Westclox products are manufactured with high-quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Westclox website. Keep your purchase receipt as proof of purchase for any warranty claims.