

# Lionelo Dani Stroller User Manual

Model: Dani (PO2020/793)

## 1. INTRODUCTION

Thank you for choosing the Lionelo Dani Stroller. This manual provides essential information for the safe assembly, operation, and maintenance of your stroller. Please read these instructions carefully before use and retain them for future reference.

### Important Safety Information

- Always read and follow all instructions before using the stroller.
- Never leave your child unattended in the stroller.
- Ensure all locking devices are engaged before use.
- To avoid injury, ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- Always use the restraint system.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- The maximum weight capacity for this stroller is 15 kg.
- The stroller is designed for children from birth (0+) up to 15 kg.
- This stroller complies with the European safety standard EN 1888.

## 2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Stroller Frame
- Seat Unit

- Canopy
- Front Wheels (2)
- Rear Wheels (2)
- Cup Holder
- Foot Cover

## 3. ASSEMBLY INSTRUCTIONS

---

### 3.1. Unfolding the Stroller Frame

1. Place the folded stroller on a flat surface.
2. Release the folding lock mechanism, usually located on the side of the frame.
3. Lift the handle upwards until the frame fully extends and locks into place. Listen for a click sound to confirm it is securely locked.

### 3.2. Attaching the Wheels

1. **Rear Wheels:** Slide the rear wheels onto the axles until they click into position. Pull gently to ensure they are securely attached.
2. **Front Wheels:** Insert the front wheel assemblies into the designated slots on the front of the frame until they click. Ensure they can swivel freely.



Image: The Lionelo Dani Stroller viewed from the front-side, showcasing the attached wheels and seat unit.

### 3.3. Attaching the Seat Unit

1. Align the connectors on the seat unit with the corresponding slots on the stroller frame.
2. Push the seat unit down firmly until it clicks into place.
3. Verify that the seat unit is securely attached by gently pulling upwards.



Image: A complete view of the Lionelo Dani Stroller, fully assembled with the seat unit, canopy, and wheels in place.

### 3.4. Attaching the Canopy

1. Slide the canopy attachments onto the designated points on the seat unit frame.
2. Secure any additional fasteners, such as snaps or zippers, to fully attach the canopy.



Image: A close-up view of the stroller's canopy, highlighting the mesh ventilation window for airflow and visibility.

## 4. OPERATING THE STROLLER

---

### 4.1. Seat Reversal

The seat unit can be mounted in either a forward-facing or rear-facing position.

1. To reverse the seat, first ensure the child is removed from the stroller.
2. Locate the release levers or buttons on both sides of the seat unit, near the frame attachment points.
3. Press the levers/buttons and lift the seat unit off the frame.
4. Rotate the seat unit 180 degrees and re-align the connectors with the frame slots.
5. Push down firmly until it clicks into place, ensuring it is securely attached in the new direction.

### 4.2. Backrest Adjustment

The backrest can be adjusted to three positions, from upright sitting to a full recline.

1. Locate the adjustment lever or strap mechanism on the back of the seat unit.
2. To recline, press the lever or loosen the strap and gently push the backrest down to the desired position.
3. To raise, lift the backrest upwards until it locks into the desired position.



Image: The Lionelo Dani Stroller shown with its seat unit fully reclined, demonstrating the sleeping position.

#### **4.3. Footrest Adjustment**

The footrest can be adjusted to three comfortable positions.

1. Locate the buttons or levers on either side of the footrest.
2. Press the buttons/levers and move the footrest to the desired angle.
3. Release the buttons/levers to lock the footrest in place.

#### **4.4. Canopy Operation**

The XXL canopy provides protection from sun, wind, and rain, featuring UPF 50+ sun protection and hydrophobic material.

- To extend the canopy, pull it forward.
- To retract, push it backward.
- Some canopies include a mesh window for ventilation and viewing your child.

## 4.5. Folding and Unfolding

The Dani stroller features an easy compact folding system.

1. **Folding:** Ensure the seat is in an upright position and the canopy is retracted. Locate the folding mechanism (often a button and lever on the handle or frame). Engage the mechanism and push the handle forward/downward until the stroller folds compactly. Secure with the automatic folding lock if present.
2. **Unfolding:** Release the folding lock and lift the handle until the frame clicks into its open position.



Image: The Lionelo Dani Stroller shown in its compact folded state, ideal for storage or transport.

## 4.6. Handle Adjustment

The handle can be adjusted to three different heights for comfortable pushing.

1. Locate the adjustment buttons on either side of the handle.
2. Press the buttons simultaneously and move the handle to the desired height.
3. Release the buttons to lock the handle in place.



Image: A side view of the Lionelo Dani Stroller, illustrating the handle extended to a higher position.

#### **4.7. Harness System**

The 5-point harness system ensures your child's safety.

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their hips.
3. Insert the buckle tongues into the central buckle until they click.
4. Adjust the straps to ensure a snug, secure fit without being too tight.
5. To release, press the button on the central buckle.





Image: A detailed view of the stroller's seat, focusing on the 5-point safety harness and its central buckle.

## 4.8. Wheel and Brake System

The stroller features EVA wheels with double shock absorption and a single-leg brake.

- **Brake:** To engage the brake, press down on the brake pedal located near the rear wheels. To release, lift the pedal upwards. Always engage the brake when the stroller is stationary.
- **Front Wheel Lock:** The front wheels can swivel for maneuverability or be locked for stability on uneven terrain. Locate the locking mechanism above each front wheel. Push down to lock, pull up to unlock.



Image: A close-up view of the stroller's wheels and the foot-operated brake pedal located between the rear wheels.

## 4.9. Accessories

- **Cup Holder:** Attach the cup holder to the designated slot on the handle or frame.
- **Foot Cover:** Attach the foot cover to the seat unit to provide warmth for your child in colder weather.

## 5. MAINTENANCE AND CARE

---

### 5.1. Cleaning

- **Fabric Parts:** Clean with a damp cloth and mild soap. Do not use harsh detergents or bleach. Allow to air dry completely. The fabric is 100% polyester.
- **Frame:** Wipe the aluminum frame with a damp cloth. Dry thoroughly to prevent corrosion.
- **Wheels:** Regularly clean the EVA wheels to remove dirt and debris. Check for any foreign objects that might impede movement.

### 5.2. Storage

- Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures.
- Ensure the stroller is completely dry before storing to prevent mold or mildew.

- When storing for extended periods, it is recommended to cover the stroller to protect it from dust.

## 6. TROUBLESHOOTING

If you encounter any issues with your Lionelo Dani Stroller, please refer to the following common problems and solutions:

- **Problem: Wheels are difficult to attach or detach, or fall off during use.**

**Solution:** Ensure the wheels are correctly aligned with the axles/slots and pushed firmly until a distinct click is heard, indicating they are securely locked. Check for any debris in the wheel mechanism.

- **Problem: Stroller does not fold or unfold smoothly.**

**Solution:** Ensure the seat is in an upright position and the canopy is fully retracted. Check for any obstructions (e.g., fabric, accessories) in the folding mechanism. Apply gentle, even pressure when folding/unfolding.

- **Problem: Seat backrest or footrest does not adjust.**

**Solution:** Check that the adjustment levers or buttons are fully engaged. Ensure no fabric or other items are obstructing the mechanism.

- **Problem: Brake is not engaging or releasing properly.**

**Solution:** Check for any debris around the brake pedal or wheel mechanism. Ensure the brake pedal is fully pressed down or lifted up.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Lionelo
Model	Dani (PO2020/793)
Maximum Weight Capacity	15 kg
Age Range	From birth (0+)
Frame Material	Aluminum
Fabric Composition	100% Polyester
Wheel Material	EVA (Ethylene Vinyl Acetate)
Front Wheel Diameter	8 inches (17.5 cm)
Rear Wheel Diameter	11 inches (23 cm)
Harness Type	5-point
Backrest Adjustment	3 positions (sitting to lying)
Footrest Adjustment	3 levels
Handle Adjustment	3 levels

Product Dimensions (L x W x H)	115 x 57 x 96 cm
Product Weight	9.9 kg
Safety Standard	EN 1888

## 8. WARRANTY AND SUPPORT

---

The Lionelo Dani Stroller has undergone multi-stage verification and testing in an independent certification laboratory, Intertek, ensuring full compliance with the European safety standard EN 1888.

For warranty information, specific product support, or to report any issues not covered in this manual, please contact Lionelo customer service or your retailer. Please have your model number (PO2020/793) and purchase details available when contacting support.