

[Manuals.plus](#) /

› [Commercial Cool](#) /

› Commercial Cool 16 inch Wall Fan with Remote, White (CCFWR16W) User Manual

Commercial Cool CCFWR16W

Commercial Cool 16 inch Wall Fan with Remote

Model: CCFWR16W

PRODUCT OVERVIEW

The Commercial Cool 16-inch Wall Fan with Remote Control (Model CCFWR16W) is designed to provide efficient and customizable airflow for various indoor spaces. This oscillating fan features multiple speed settings and operating modes, along with a convenient remote control for ease of use. Its wall-mountable design helps save floor space while effectively circulating air.

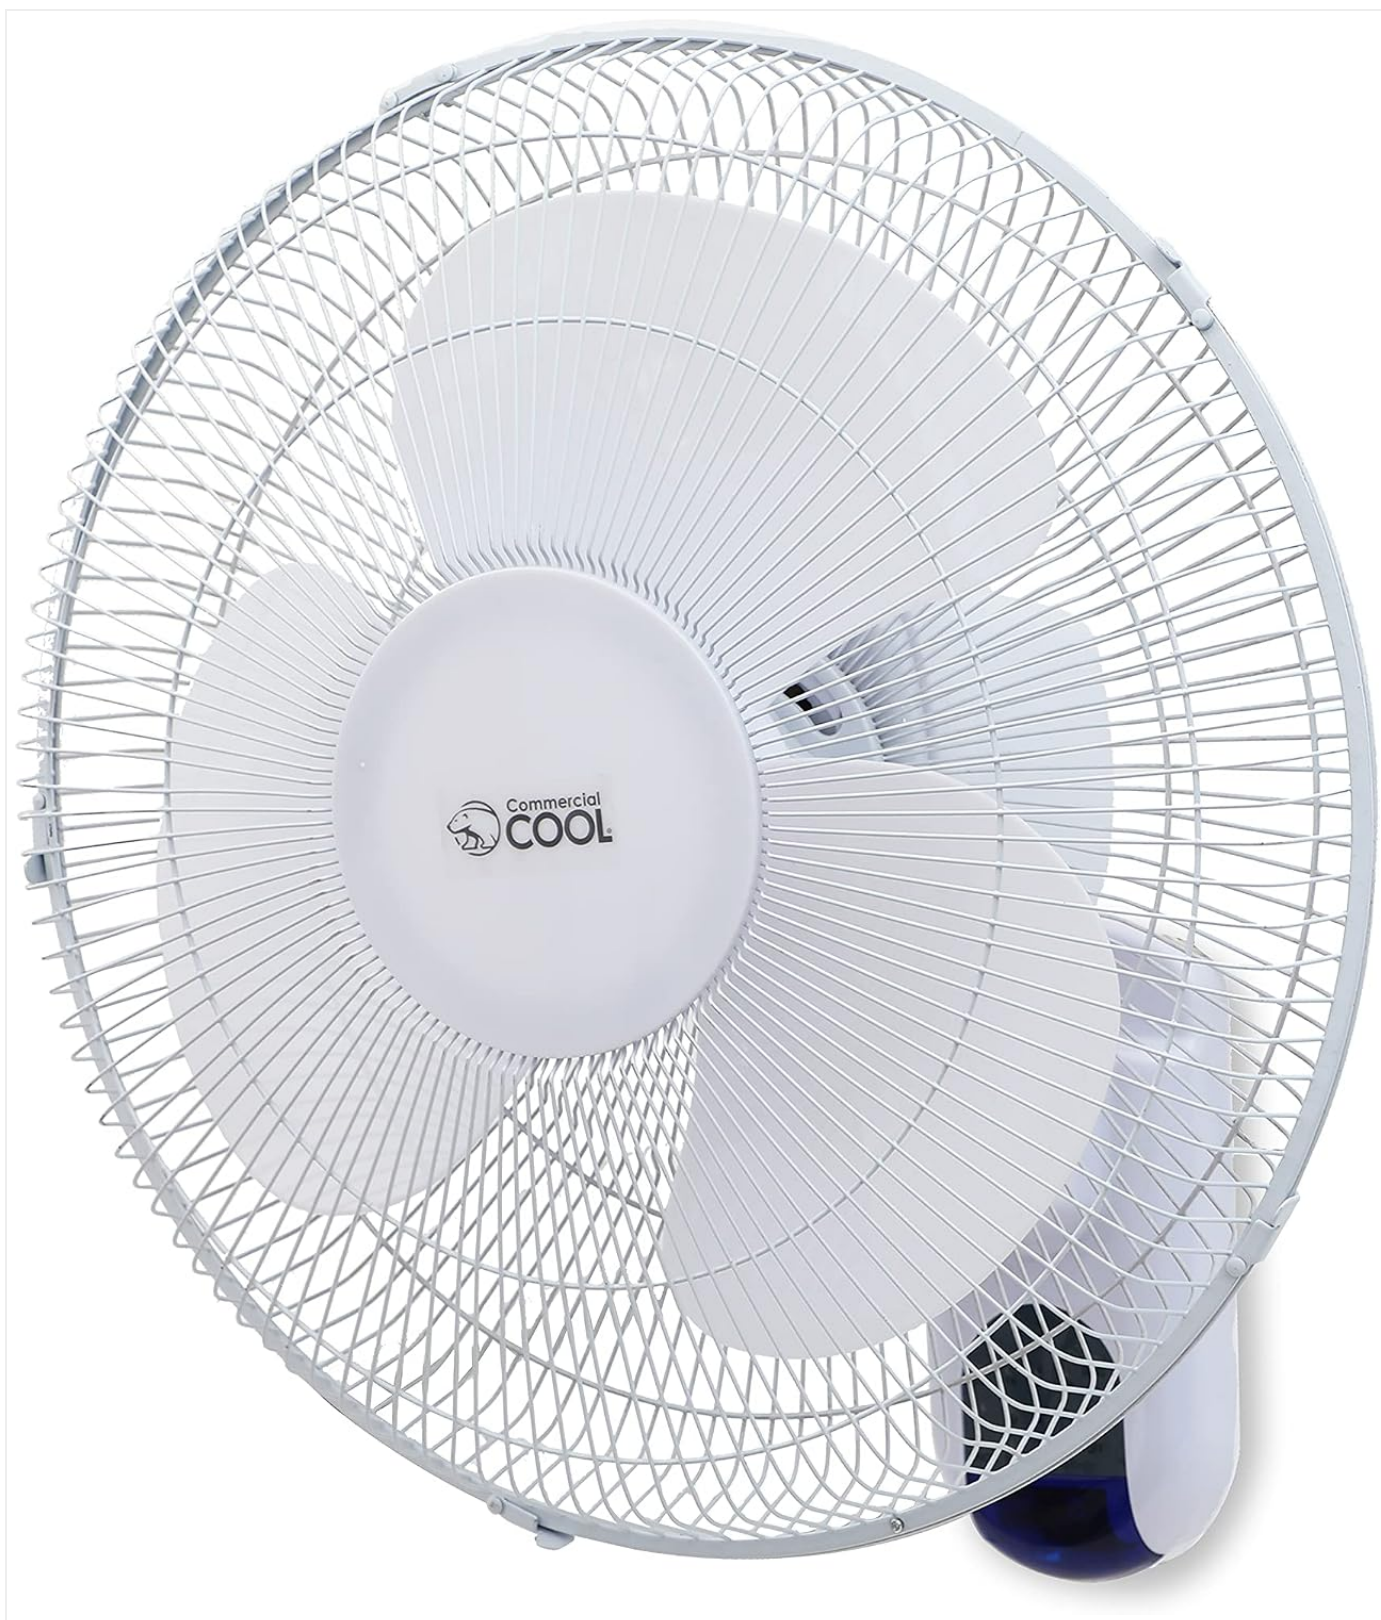


Image: The Commercial Cool 16-inch Wall Fan, showcasing its white finish and three-blade design, ready for wall mounting.

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan from the power outlet before cleaning, servicing, or relocating.
- Do not operate the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.

- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- This fan is intended for indoor use only. Do not use outdoors or in wet locations.
- Do not insert fingers or foreign objects into any openings of the fan.
- Ensure the fan is mounted securely to a sturdy wall surface according to installation instructions.
- Keep children and pets away from the fan during operation.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 16-inch Wall Fan Unit
- Remote Control
- Wall Mounting Plate
- Screws and Wall Anchors (for mounting)
- User Manual (this document)

SETUP AND INSTALLATION

Mounting the Fan

The fan is designed for wall mounting to optimize air circulation and save space. Choose a location with a sturdy wall surface, away from obstructions and direct sunlight.

1. **Select Location:** Identify a suitable wall location, ensuring it is within reach of a power outlet and allows for optimal airflow.
2. **Mark Drilling Points:** Hold the wall mounting plate against the wall at the desired height. Use a pencil to mark the positions for drilling holes.
3. **Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked positions. If mounting into drywall, insert the provided wall anchors.
4. **Attach Mounting Plate:** Secure the mounting plate to the wall using the provided screws. Ensure it is firmly attached.
5. **Mount Fan:** Carefully align the fan unit with the mounting plate and slide it into place until it locks securely.
6. **Connect Power:** Plug the fan's power cord into a standard 120V AC electrical outlet.

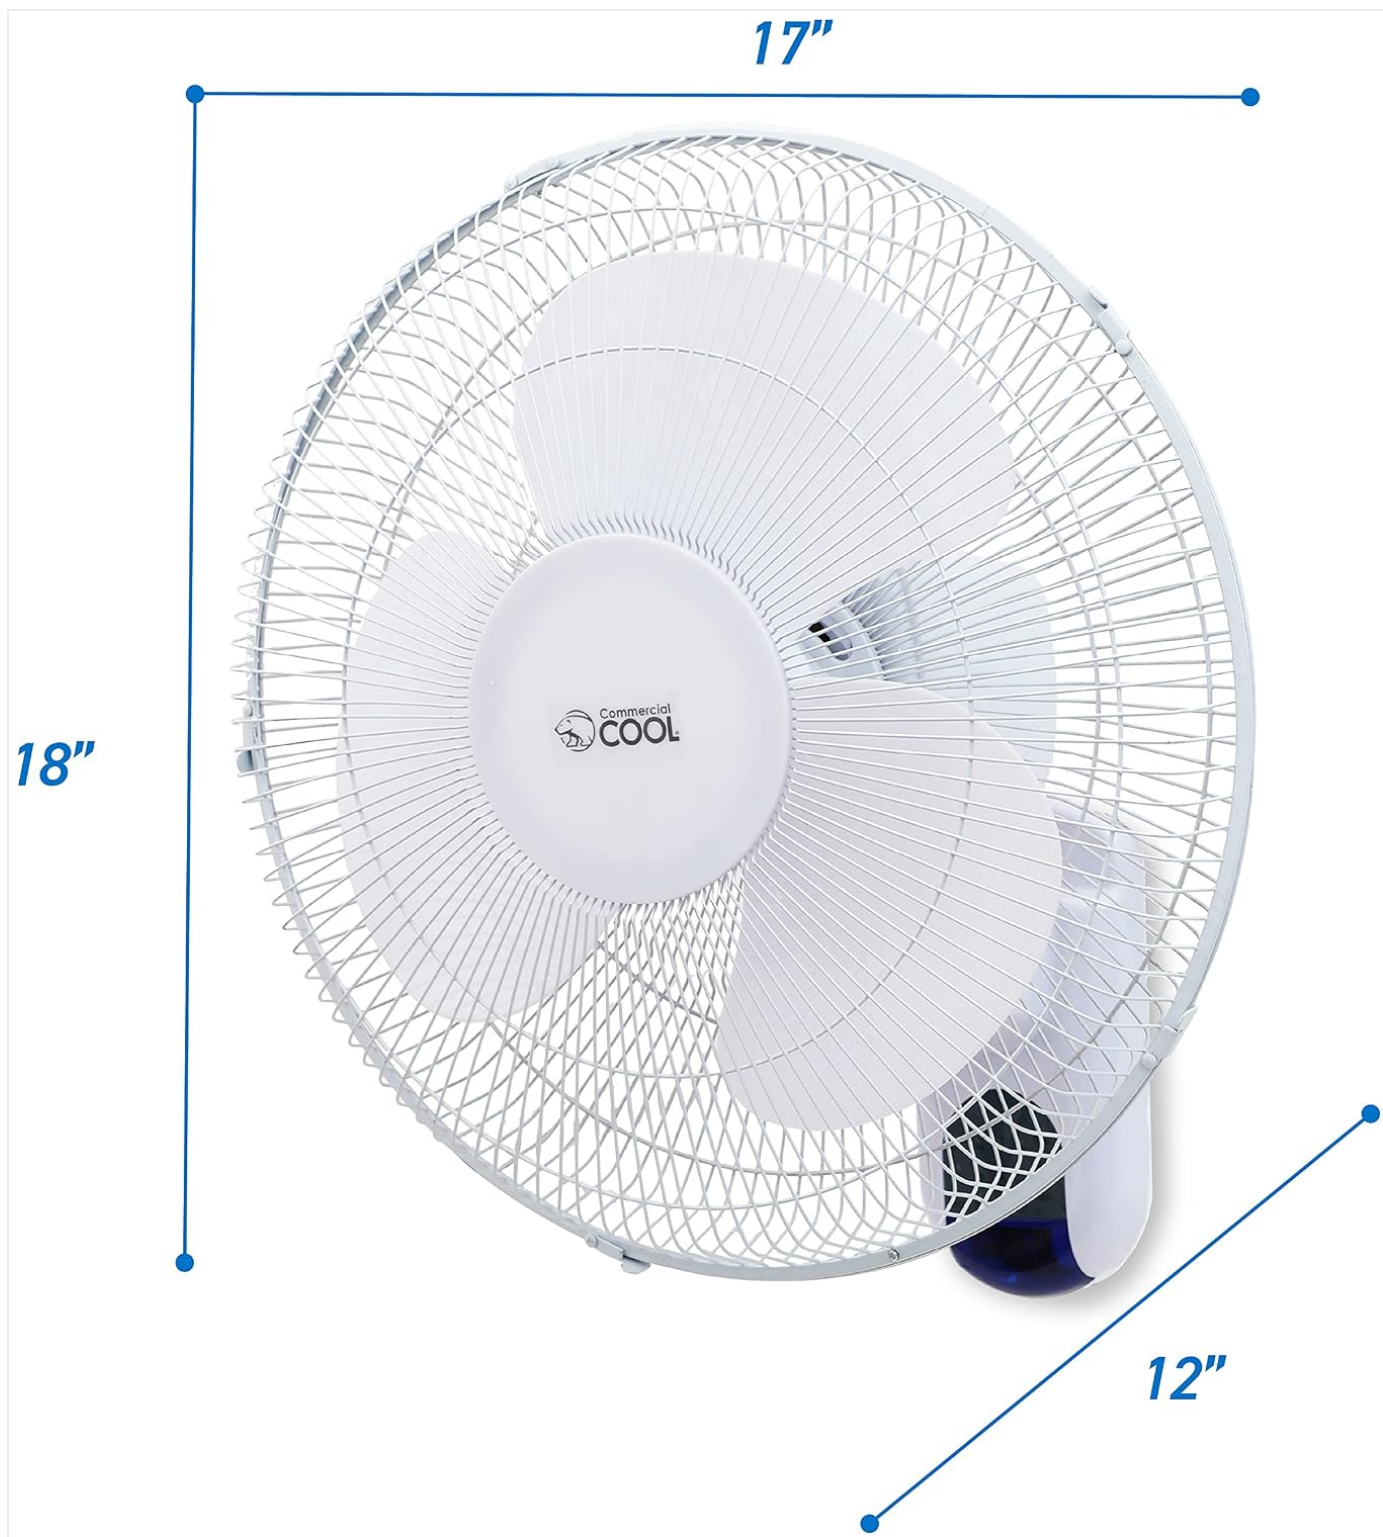


Image: Diagram illustrating the dimensions of the 16-inch wall fan (17"W x 12"D x 18"H), useful for planning installation space.

OPERATING INSTRUCTIONS

Using the Remote Control

The fan comes with a fully functional remote control for convenient operation from a distance. Ensure the remote has working batteries (not included, typically 2x AAA).

Remote Control

Convenience at your fingertips.
Find the perfect setting
without ever leaving
the couch.



Image: Close-up of the remote control for the wall fan, showing buttons for OFF/OSC, Timer, Mode, and ON/Speed.

- **ON/Speed Button:** Press to turn the fan ON. Subsequent presses cycle through fan speeds: Low, Medium, High.
- **OFF/OSC Button:** Press to turn the fan OFF. When the fan is ON, press to activate or deactivate the oscillation function.
- **Mode Button:** Press to cycle through the three operating modes:
 - **Normal:** Constant airflow at the selected speed.
 - **Natural:** Simulates natural breeze by varying fan speed.
 - **Sleep:** Gradually decreases fan speed over time for quiet operation during sleep.
- **Timer Button:** Press to set the automatic shut-off timer. The timer can be set for up to 7.5 hours. Each press increases the timer setting.

Adjusting Oscillation and Tilt

The fan offers both oscillation and manual tilt adjustment to direct airflow precisely where needed.

- **Oscillation:** The fan features a 60° oscillation capability. Activate or deactivate this function using the "OFF/OSC" button on the remote control.
- **Tilt Angle:** The fan head can be manually adjusted up or down by 45°. Gently tilt the fan head to the desired angle.



Image: Visual representation of the fan's 60° oscillation range and 45° adjustable tilt angle, demonstrating its air distribution capabilities.

Customize Your Breeze



TIMER
30min - 4hours

3 SPEEDS
low, medium, high

3 MODES
natural, auto, sleep

Image: Graphic showing the fan's customizable breeze options, including a timer (30 min - 4 hours), 3 speeds (low, medium, high), and 3 modes (natural, auto, sleep).



Whisper Quiet

54 dBs

Enjoy a peaceful sleep.

Image: A person sleeping peacefully, illustrating the fan's "Whisper Quiet" operation at 54 dBs, designed for undisturbed rest.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. For dust accumulation on the fan blades, the front grille can be carefully removed (refer to assembly instructions for reverse steps) to allow for cleaning. Ensure all parts are dry before reassembling and plugging in.
- **Storage:** If storing the fan for an extended period, unplug it, clean it thoroughly, and store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Remote control batteries dead.	Ensure fan is securely plugged into a working outlet. Test the outlet with another device. Replace remote control batteries.
Weak airflow.	Fan speed set too low; Grille or blades are dirty.	Increase fan speed using the remote or control panel. Unplug the fan and clean the grille and blades.
Fan is noisy.	Loose parts; Fan not securely mounted; Obstruction.	Unplug and check for any loose parts or obstructions. Ensure the fan is securely mounted to the wall.
Remote control not working.	Batteries dead or incorrectly inserted; Obstruction between remote and fan.	Replace batteries, ensuring correct polarity. Remove any obstructions between the remote and the fan's receiver.

SPECIFICATIONS

Feature	Detail
Model Number	CCFWR16W
Fan Diameter	16 inches
Power Source	Corded Electric
Voltage	120 Volts
Wattage	45 Watts
Noise Level	54 dB
Number of Speeds	3 (Low, Medium, High)
Operating Modes	Normal, Natural, Sleep
Oscillation	60°
Adjustable Tilt Angle	45°
Timer	Up to 7.5 hours
Product Dimensions (DxWxH)	12"D x 17"W x 18"H
Item Weight	4.9 pounds
Color	White
Included Components	Fan unit, Remote control, Mounting hardware

WARRANTY AND SUPPORT

This Commercial Cool 16-inch Wall Fan is covered by a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact Commercial Cool customer service. Please have your model number (CCFWR16W) and proof of purchase ready when contacting support.

For more information, visit the official Commercial Cool website or refer to the contact information provided with your product packaging.

