

[Manuals.plus](#) /

› [Mellerware](#) /

› Mellerware Brizy Ceiling Fan ES9440120L Instruction Manual

Mellerware ES9440120L

Mellerware Brizy Ceiling Fan ES9440120L Instruction Manual

Model: ES9440120L

INTRODUCTION

Thank you for choosing the Mellerware Brizy Ceiling Fan. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before use and retain them for future reference.

The Mellerware Brizy ceiling fan features a silent 45W DC motor, 6 speeds, a summer/winter function, and a timer, all controllable via a modern remote. Its 132 cm (52 inch) diameter blades are designed for effective air circulation in rooms up to 20 m² (215 sq ft).



Figure 1: Powerful and Silent Operation. This image displays the Mellerware Brizy ceiling fan in a bedroom setting, emphasizing its key features: powerful and silent operation, 40W energy efficiency, 6 adjustable speeds, and a durable DC motor.

IMPORTANT SAFETY INSTRUCTIONS

- Always disconnect power before installation or maintenance.
- Installation must be performed by a qualified electrician.
- Ensure the mounting structure can support the fan's weight (5.58 kg / 12.3 lbs).
- Maintain a minimum distance of 2.3 meters (7.5 feet) from the floor to the fan blades.
- Do not insert objects into the fan blades while operating.
- This appliance is for indoor use only.
- Use only the remote control provided with the fan.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Unit
- 3 Fan Blades (Paulownia Wood)
- Mounting Bracket
- Downrods (15 cm and 25 cm)
- Canopy
- Remote Control
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual

SETUP AND INSTALLATION

Note: Installation should be performed by a qualified electrician. Ensure power is disconnected at the circuit breaker before proceeding.

 
1. Mounting the Bracket

Secure the mounting bracket to a ceiling joist or a suitable electrical junction box capable of supporting the fan's weight. Use appropriate screws and washers.

2. Assembling the Downrod and Fan

Choose the appropriate downrod (15 cm for low/standard ceilings, 25 cm for high/sloped ceilings). Insert the downrod through the canopy and connect it to the fan motor unit. Ensure all screws are tightened securely.

TIGES DE SUSPENSION

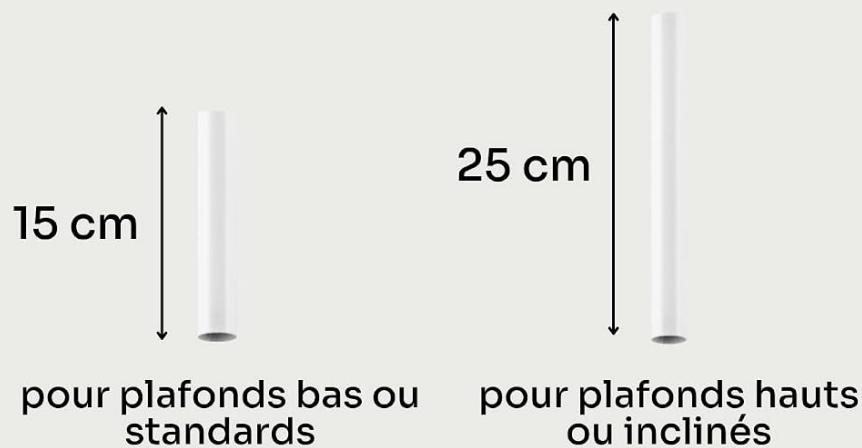

OPTIONS DE MONTAGE

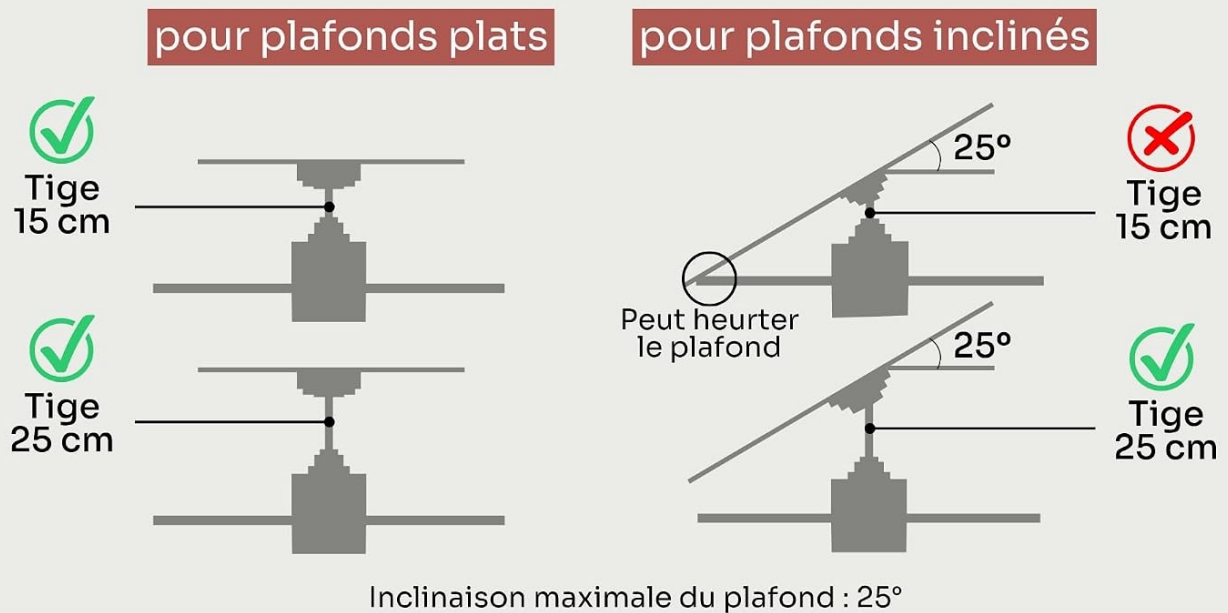 


Figure 2: Suspension Rods and Mounting Options. The diagram illustrates two downrod lengths (15 cm and 25 cm) and how they are used for flat and inclined ceilings. For inclined ceilings, the 15 cm rod may hit the ceiling, while the 25 cm rod provides sufficient clearance for up to a 25-degree incline.

3. Wiring the Fan

Connect the fan's electrical wires to the household wiring according to local electrical codes. Typically, this involves connecting live, neutral, and ground wires. Use the provided wire nuts and ensure connections are secure.

4. Attaching the Blades

Attach the three Paulownia wood blades to the motor unit using the provided screws. Ensure they are firmly secured.

Lames en bois de Paulownia

Design naturel et élégant

- ✓ Bois massif
- ✓ Finition haut de gamme
- ✓ Durée de vie utile plus longue
- ✓ Résistance à l'humidité
- ✓ Durable



Figure 3: Paulownia Wood Blade Features. This image highlights the benefits of the Paulownia wood blades, including solid wood construction, high-end finish, extended lifespan, humidity resistance, and durability.

5. Securing the Canopy

Slide the canopy up to the ceiling and secure it with the provided screws, covering the wiring connections.

OPERATING INSTRUCTIONS

Your Mellerware Brizy ceiling fan is operated using the included remote control.

Remote Control Functions



TÉLÉCOMMANDE



Minuteur
1h / 2h / 4h / 8h



Vitesses
100/132/150/165/181/198 rpm




Mode Brise

Figure 4: Remote Control. The remote control features buttons for setting the timer (1h, 2h, 4h, 8h), adjusting fan speeds (6 levels from 100 to 198 rpm), and activating the breeze mode.

- **Power Button:** Turns the fan ON or OFF.
- **Speed Control:** Adjusts between 6 fan speeds.
- **Timer Function:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Summer/Winter Mode:**
 - **Summer Mode (Downward Airflow):** Blades rotate counter-clockwise, creating a cooling breeze.
 - **Winter Mode (Upward Airflow):** Blades rotate clockwise, circulating warm air from the ceiling downwards to balance room temperature.
- **Breeze Mode:** Simulates natural breeze by cycling through different fan speeds.
- **Night Mode:** Operates the fan at a very low, quiet speed for undisturbed sleep.

 UTILISER TOUT L'ANNÉE A DEUX FONCTIONS

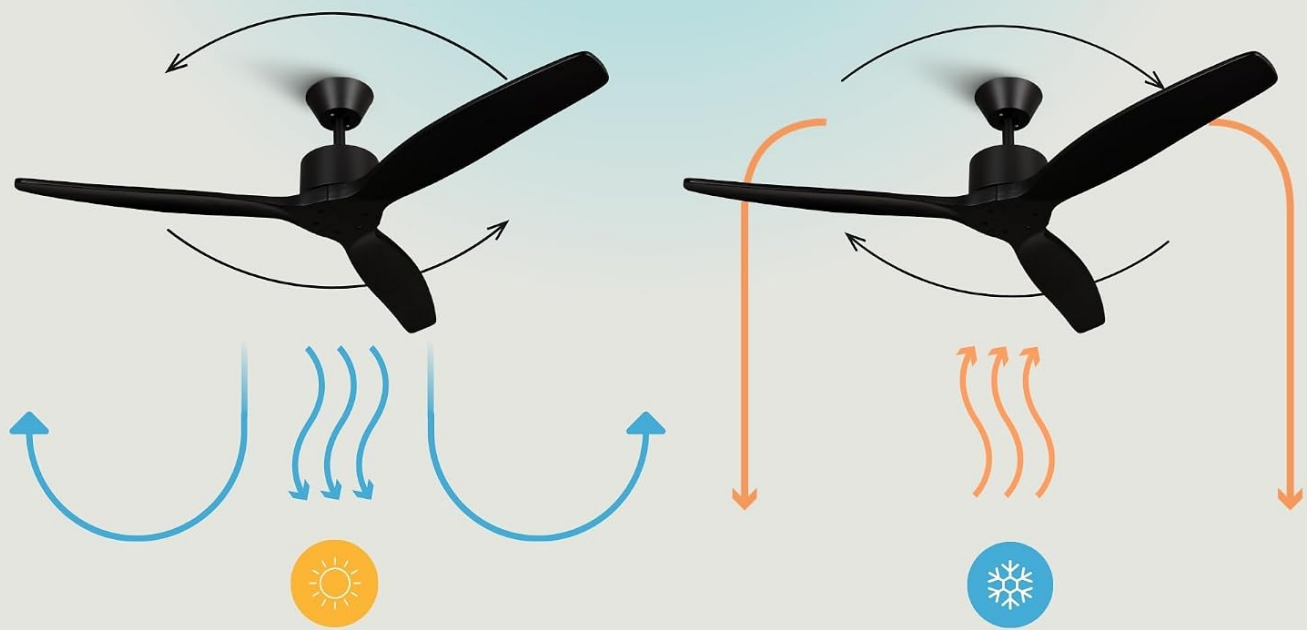

Mode été

Fait circuler l'air vers le bas, créant une brise fraîche qui soulage la chaleur et améliore le confort.

Mode hiver

Fait redescendre l'air chaud du plafond et répartit la chaleur de façon plus équilibrée.

Figure 5: Summer/Winter Function. This diagram visually explains how the fan operates in summer mode (downward airflow for cooling) and winter mode (upward airflow to circulate warm air).

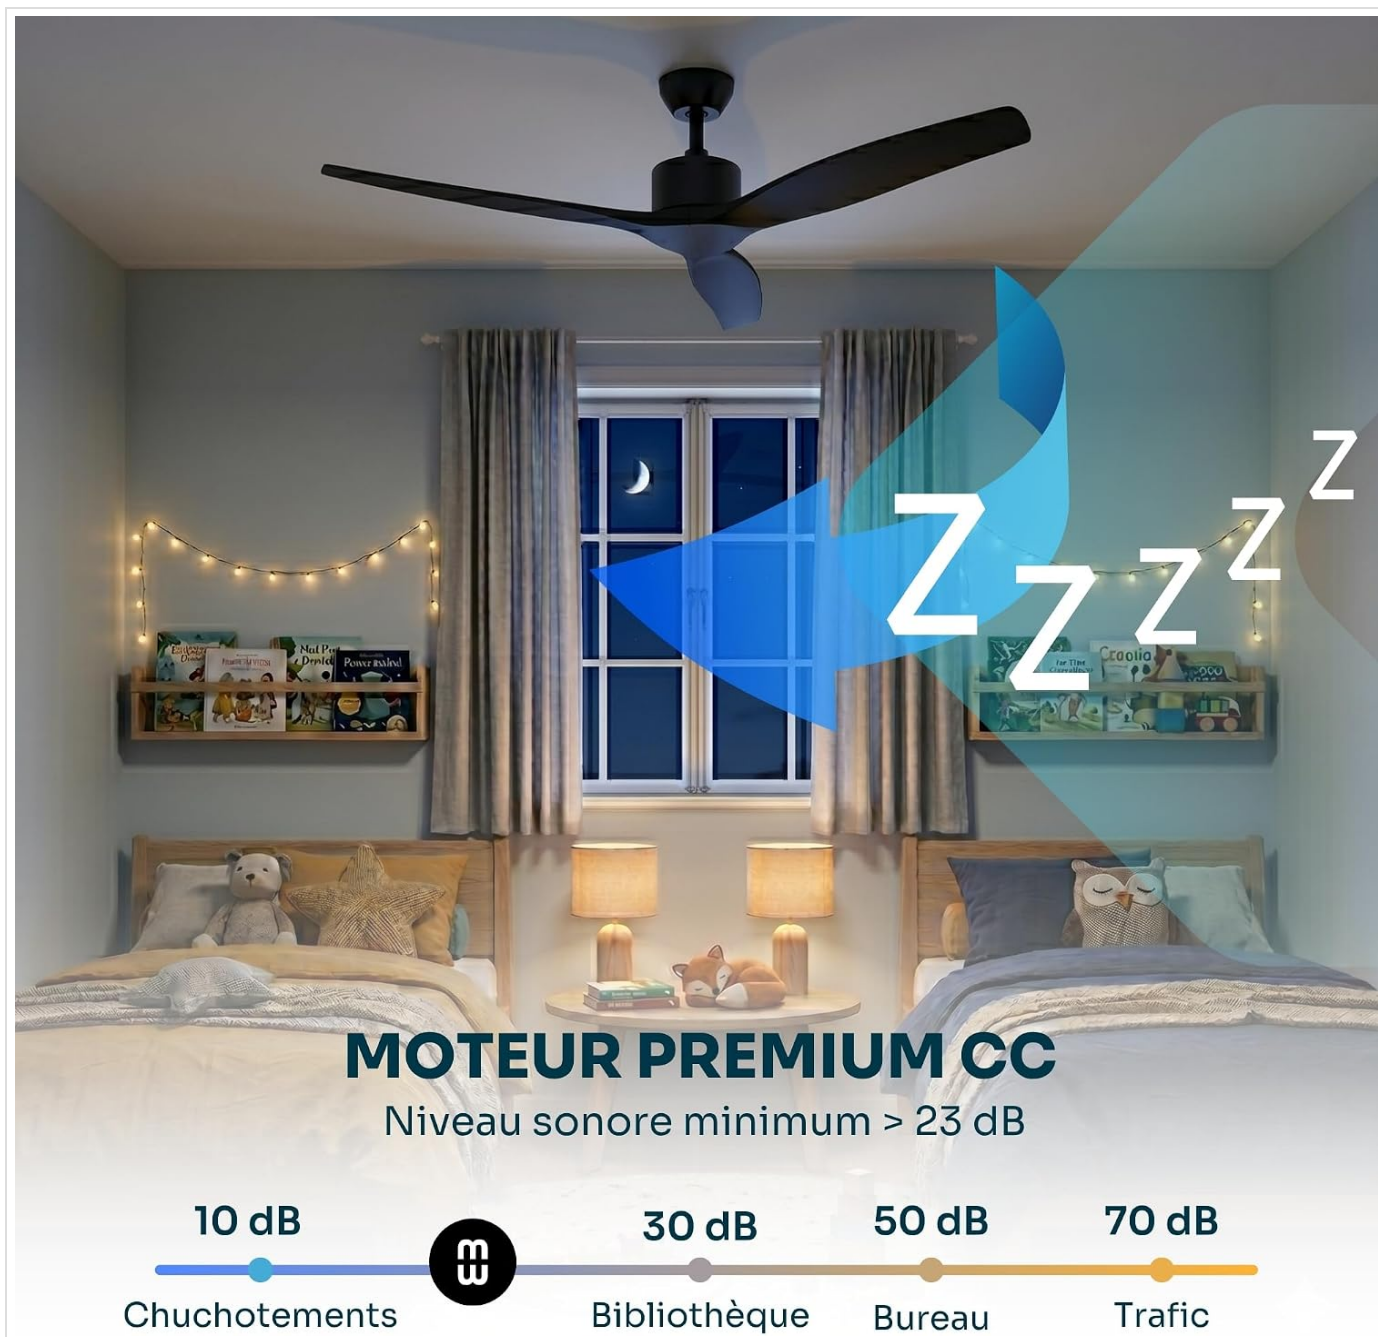 


Figure 6: Quiet Operation. This image highlights the fan's ultra-quiet DC motor, showing it in a bedroom setting with a graphic indicating a minimum noise level of 23 dB, comparable to whispers.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Tightening Screws:** Check all screws and connections annually to ensure they are secure. Loose connections can cause noise or wobbling.
- **Blade Balance:** If the fan wobbles, check that the blades are securely attached and that no blades are bent or damaged. A balancing kit (not included) can be used if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power; Loose wiring; Remote control battery dead.	Check circuit breaker; Verify wiring connections; Replace remote control battery.
Fan wobbles	Loose blades; Uneven blade attachment; Mounting bracket not secure.	Tighten blade screws; Ensure blades are evenly attached; Secure mounting bracket.
Remote control not working	Battery dead; Remote not paired (if applicable); Obstruction.	Replace battery; Refer to remote pairing instructions (if any); Ensure clear line of sight to fan receiver.
Fan is noisy	Loose screws; Motor issue; Blades hitting an obstruction.	Check and tighten all screws; Contact customer support if motor noise persists; Ensure no obstructions are near blades.

SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Number	ES9440120L
Color	Black
Electric Fan Design	Ceiling Fan
Power Source	Corded Electric
Style	No Light
Product Dimensions (D x W x H)	32.5P x 71I x 23H cm (approx. 12.8 x 28 x 9 inches)
Room Type	Bedroom
Special Feature	Timer, Remote Control
Recommended Uses	Ventilation
Mounting Type	Ceiling Mount
Control Type	Remote Control
Number of Speeds	6
Noise Level	45 Decibels (minimum 23 dB)
Wattage	45 Watts
Number of Blades	3
Voltage	24 Volts (DC)
Usage	Indoor

Feature	Detail
Efficiency	High
Motor Type	DC Motor
Smart Home Compatibility	Not Smart Home Compatible
Material	Aluminum, Wood
Blade Material	Wood
Finish Type	Black
Blade Length	132 Centimeters (52 inches)
Item Weight	5.58 Kilograms (12.3 lbs)
Included Components	Remote Control

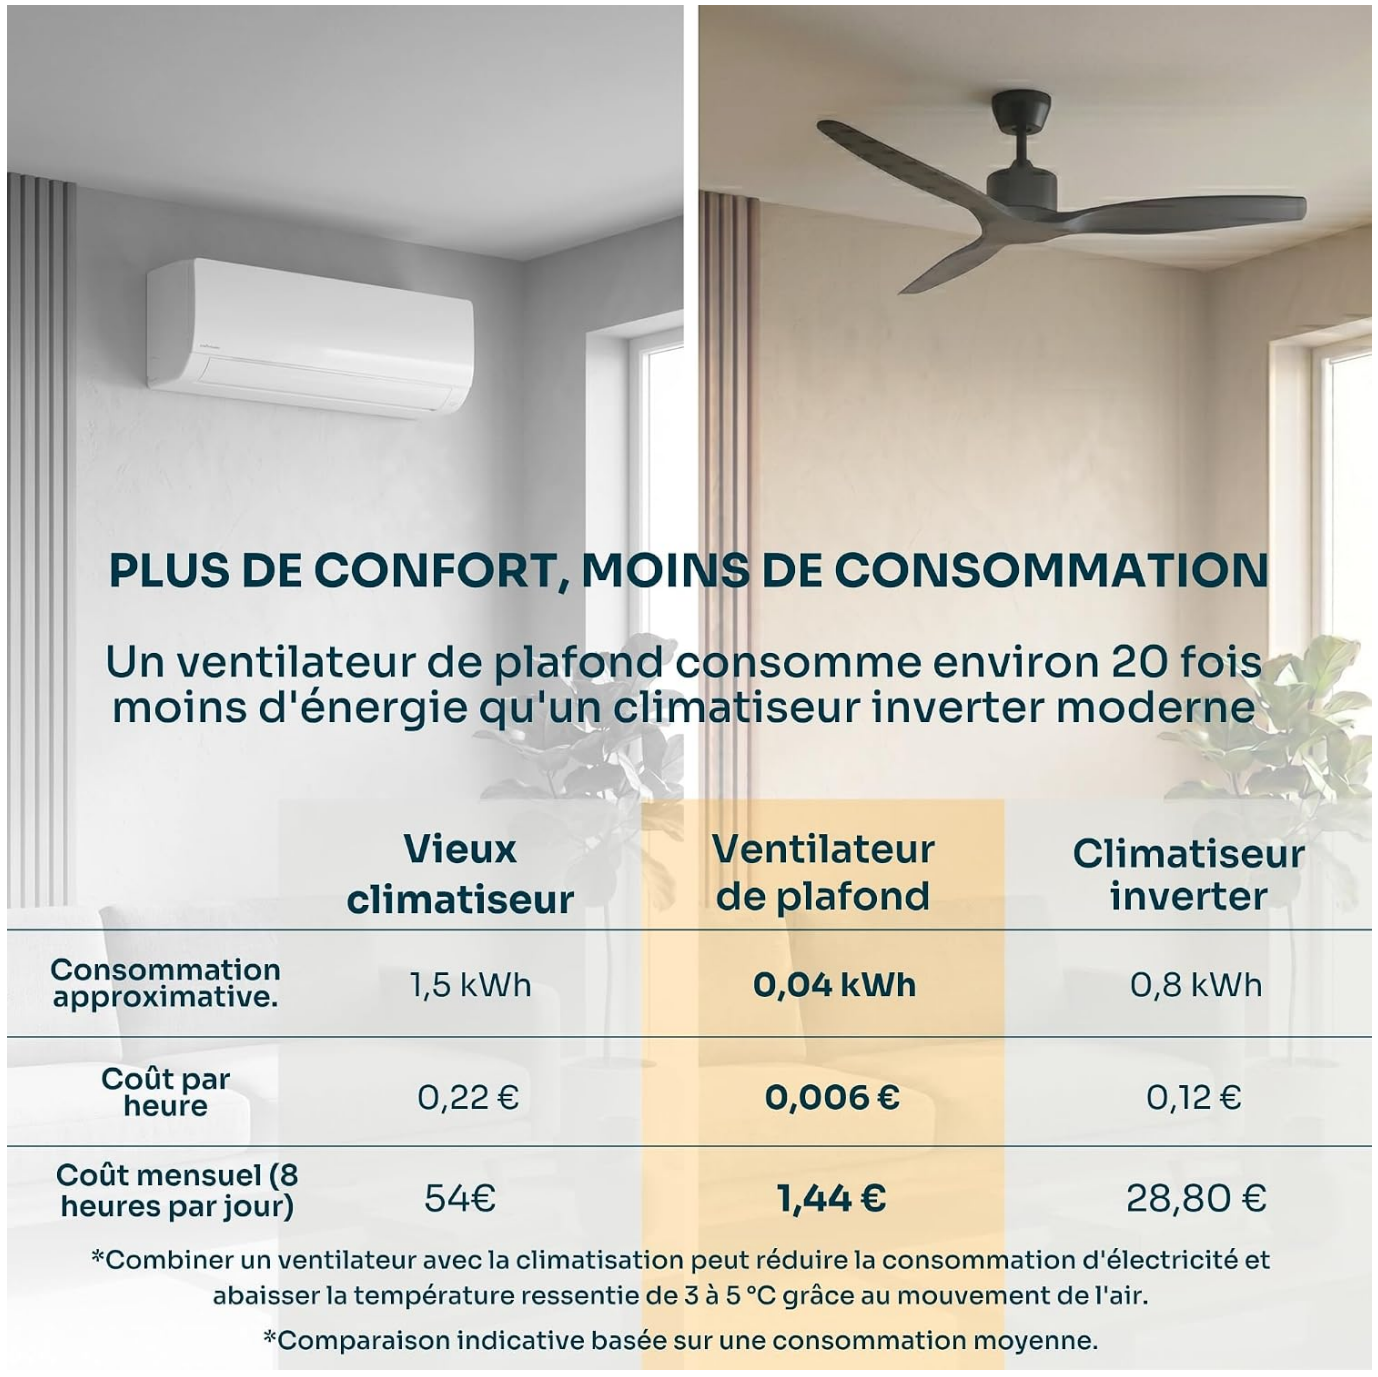 


Figure 7: Energy Consumption Comparison. This table illustrates that a ceiling fan consumes significantly less energy than air conditioning units, offering a cost-effective cooling solution.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Mellerware website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer: Mellerware

Contact: Please visit www.mellerware.com for support and contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B092ZGJFD5>

More documents and user manuals: <https://manuals.plus/>