

[Manuals.plus](#) /

> [Mellerware](#) /

> Mellerware Brizy Bright Ceiling Fan with Remote Control - User Manual

Mellerware ES9440100L

Mellerware Brizy Bright Ceiling Fan with Remote Control - User Manual

Model: ES9440100L

1. PRODUCT OVERVIEW

The Mellerware Brizy Bright ceiling fan is designed to provide efficient and quiet air circulation for your home. It features a powerful yet silent DC motor, multiple speed settings, a convenient timer, and an integrated LED light with adjustable color temperature. Its reversible summer-winter function ensures comfort throughout the year.

mellerware®
Master your home life.



Image: The Mellerware Brizy Bright ceiling fan installed in a modern bedroom, emphasizing its powerful and silent operation. Key features like 40W power, 6 speeds, and a DC motor are highlighted.

Key Features:

- **Silent DC Motor:** Designed with a 30W DC motor, this fan is highly efficient, durable, and consumes less energy, potentially saving up to 70% compared to other fan types. Its ultra-silent operation makes it suitable for bedrooms, children's rooms, or offices.
- **Summer-Winter Function:** This feature allows year-round use.
 - **Summer Mode:** Blades generate a gentle breeze that lowers ambient temperatures, providing a pleasant cooling sensation.

- **Winter Mode:** Blades push accumulated warm air from the ceiling downwards, balancing the room temperature and creating a cozy climate.
- **Design and Quality:** The main body is made of aluminum, and the blades are crafted from ultra-light Paulownia wood. Available in various finishes and colors to complement any room up to 20m².
- **Functions:** Offers 6 speeds and a timer for up to 8 hours. Includes a breeze function, which combines different speeds for a soft airflow, and a night mode. A modern remote control is included for convenience.
- **Integrated LED Light:** Features an integrated LED light plate with low consumption and high illumination. The light temperature is adjustable (warm, cool, and neutral) via the remote control.

2. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your ceiling fan. It is recommended that installation be performed by a qualified electrician in accordance with local electrical codes.

Before Installation:

1. **Unpack:** Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present and undamaged.
2. **Power Disconnection:** Ensure the main power supply to the installation area is turned off at the circuit breaker to prevent electrical shock.
3. **Mounting Location:** Choose a suitable location on the ceiling that can support the fan's weight and allows for proper blade clearance (at least 2.3 meters from the floor and 0.5 meters from walls/obstacles).

Installation Steps (General Guide):

1. **Mounting Bracket:** Securely attach the mounting bracket to the ceiling joist or a suitable electrical junction box designed for ceiling fan support.
2. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full installation manual. Ensure all connections are secure and insulated.
3. **Assemble Fan Body:** Attach the fan motor housing to the mounting bracket.
4. **Attach Blades:** Securely fasten the Paulownia wood blades to the motor hub. Ensure they are balanced.
5. **Install Light Kit:** Connect and install the integrated LED light kit to the fan body.
6. **Final Checks:** Double-check all connections and ensure the fan is securely mounted.

For detailed, step-by-step installation instructions and wiring diagrams, please refer to the comprehensive PDF installation manual available on the Mellerware website or included with your product.

3. OPERATION

Your Mellerware Brizy Bright ceiling fan is operated using the included remote control.



Image: A user operating the ceiling fan with the remote control, illustrating the ease of managing timer, light temperature, fan speeds, and breeze mode from a distance.

Remote Control Functions:

- **Power On/Off:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Select from 6 available speeds to adjust airflow intensity.



Image: Visual representation of the 6 fan speeds, categorizing them into soft breeze (Levels 1-2), natural wind (Levels 3-4), and fresh air (Levels 5-6).

- **Timer:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Light Control:**
 - **Light On/Off:** Separate button for the LED light.
 - **Color Temperature Adjustment:** Cycle through warm (3000K), neutral (4000K), and cool (6000K) light settings.



Image: Illustration of the adjustable LED light, demonstrating the three color temperature options: warm (3000K), neutral (4000K), and cool (6000K).

- **Summer/Winter Mode:** Switch between modes to optimize air circulation for the season.



Image: A diagram explaining the two operational modes: Summer mode, where the fan creates a downward breeze for cooling, and Winter mode, where it circulates warm air from the ceiling downwards.

- **Breeze Mode:** Activates a natural breeze effect by cycling through different fan speeds.
- **Night Mode:** Provides a gentle, quiet airflow suitable for sleeping.

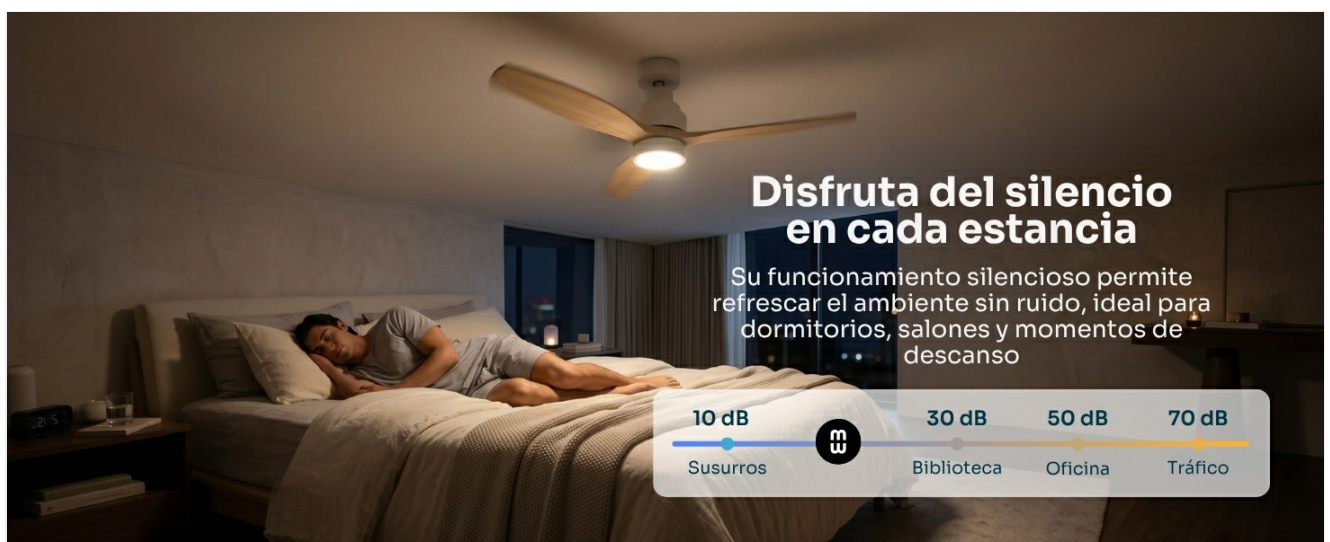


Image: A person sleeping peacefully in a bedroom with the Mellerware Brizy Bright ceiling fan operating silently, highlighting its suitability for quiet environments.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Mellerware Brizy Bright ceiling fan.

- **Cleaning:**
 - Before cleaning, ensure the fan is turned off and the power supply is disconnected at the circuit breaker.
 - Wipe the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
 - Dust the light cover regularly to maintain optimal light output.
- **Blade Inspection:** Periodically check that all blade screws are tight. Over time, they can loosen, causing the fan to wobble or make noise.
- **Lubrication:** The fan's DC motor is permanently lubricated and does not require additional oiling.

Always disconnect power before performing any maintenance.

5. TROUBLESHOOTING

If you encounter issues with your Mellerware Brizy Bright ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; loose wiring; remote control battery low.	Check circuit breaker; ensure all wiring connections are secure; replace remote control batteries.
Fan wobbles	Loose blade screws; unbalanced blades; improper mounting.	Tighten all blade screws; ensure blades are correctly installed and balanced; verify mounting bracket is secure.
Fan is noisy	Loose screws; internal component rubbing; fan not level.	Check and tighten all screws; ensure no wires are rubbing against the motor housing; verify fan is level.
Light does not work	Loose wiring; LED module failure; remote control issue.	Check light kit wiring connections; if LED module is faulty, contact customer support; replace remote control batteries.
Remote control not working	Low or dead batteries; remote not paired; obstruction.	Replace batteries; refer to pairing instructions in the full manual; ensure no obstructions between remote and fan receiver.

If the problem persists after attempting these solutions, please contact Mellerware customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Name	ES9440100

Feature	Detail
Model Number	ES9440100L
Color	Lightwood (Madera Clara)
Electric Fan Design	Ceiling Fan
Power Source	Electricity
Style	With Light (LUZ)
Product Dimensions (DxWxH)	132 cm (diameter) x 38 cm (height)
Room Type	Bedroom
Special Features	Timer, With Remote Control
Recommended Uses	Ventilation
Mounting Type	Ceiling Mount
Controller Type	Remote Control
Number of Speeds	6
Noise Level	45 Decibels (dB)
Power	30 Watts (W)
Number of Blades	3
Airflow Capacity	154.28 Cubic meters per minute
Voltage	230 Volts
Indoor/Outdoor Use	Indoor
Efficiency	Efficient
Motor Type	DC (brushed)
Smart Home Compatibility	Not compatible with digital home
Light Type	LED light
Material	Aluminum, Wood (Paulownia)
Blade Length	132 Centimeters
Item Weight	6.7 Kilograms
Included Components	Remote control

7. WARRANTY AND SUPPORT

Mellerware products are designed for quality and reliability. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Mellerware website.

Customer Support:

If you have any questions, require technical assistance, or need to report a problem, please contact Mellerware customer support. Contact details can typically be found on the product packaging, the official Mellerware website, or in the comprehensive user manual (PDF).

You can also visit the [Mellerware Store on Amazon](#) for more product information and support resources.

© 2026 Mellerware. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B092ZJDK8C>

More documents and user manuals: <https://manuals.plus/>