

ETA ETA142590000

ETA Rotary Handheld Vacuum Cleaner User Manual

Model: ETA142590000

1. INTRODUCTION

Thank you for choosing the ETA Rotary Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation, please observe the following safety guidelines:

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not immerse the appliance, charger, or battery in water or other liquids.
- This appliance is intended for household use only. Do not use it for commercial or industrial purposes.
- Do not vacuum liquids, hot ashes, sharp objects, or flammable/explosive materials.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust container and filter properly installed.
- Store the appliance in a dry place, out of reach of children.
- Use only the original charger and accessories supplied with the appliance.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- ETA Rotary Handheld Vacuum Cleaner
- Electric Rotary Brush Attachment
- Crevice Nozzle
- Furniture Brush (fine bristles)
- Wall-mounted Charging Station

- Power Adapter for Charging Station
- User Manual



Image 1: Main unit of the ETA Rotary Handheld Vacuum Cleaner with the electric rotary brush attachment.

4. SETUP

4.1 Initial Charging

1. Unpack all components and remove any packaging materials.
2. Mount the charging station to a wall in a convenient location, or place it on a stable, flat surface.
3. Connect the power adapter to the charging station and plug it into a suitable power outlet.
4. Place the handheld vacuum cleaner onto the charging station. Ensure it is correctly seated and the charging indicator light illuminates.
5. Allow the vacuum cleaner to charge completely before first use. A full charge takes approximately 5 hours. The 14.4V Li-Ion battery provides up to 25 minutes of runtime.



Image 2: The ETA Rotary Handheld Vacuum Cleaner positioned on its charging station, ready for charging.

4.2 Attaching Accessories

The electric rotary brush, crevice nozzle, and furniture brush can be easily attached to the main unit's suction opening. Simply push the desired attachment firmly into place until it clicks securely.



Image 3: Close-up view of the electric rotary brush attachment, designed for efficient cleaning.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off. The power button can be locked in the 'on' position for continuous operation, eliminating the need to hold it down during use.



Image 4: A hand demonstrating the ergonomic grip and power button location on the handheld vacuum cleaner.

5.2 Using Attachments

- **Electric Rotary Brush:** Ideal for deep cleaning carpets, rugs, and upholstery, effectively removing dirt and pet hair.
- **Crevice Nozzle:** Perfect for reaching tight spaces, corners, and along edges.
- **Furniture Brush:** Use for delicate surfaces, curtains, and furniture to gently remove dust and cobwebs.

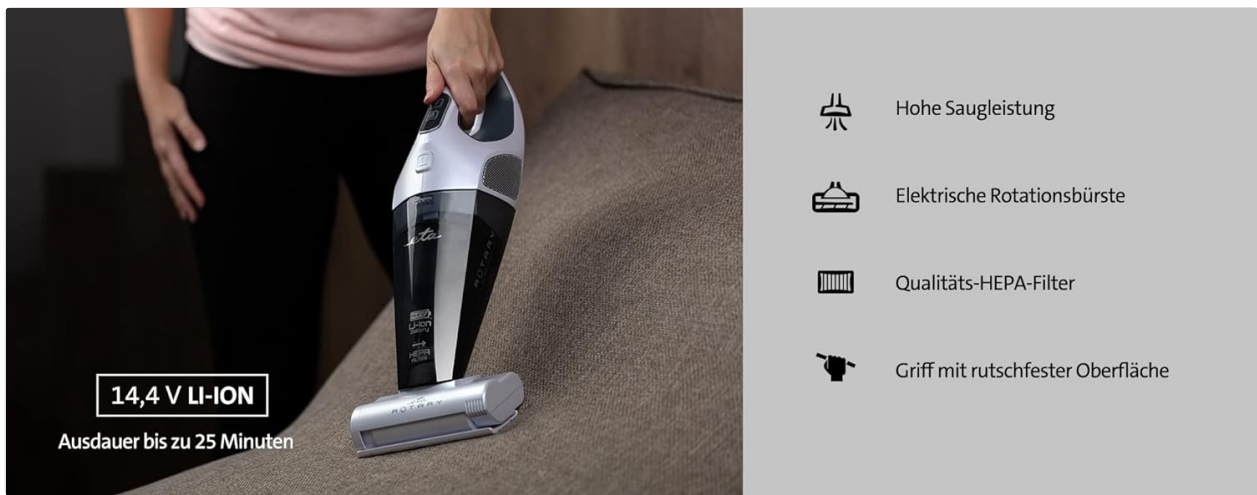


Image 5: The handheld vacuum cleaner being used to clean upholstery, demonstrating its versatility.



Image 6: The lightweight design allows for easy cleaning of various surfaces, including vertical ones like mirrors.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Container

1. Ensure the vacuum cleaner is turned off and disconnected from the charging station.
2. Locate the dust container release button (refer to product diagrams if available).
3. Press the release button and carefully detach the dust container from the main unit.
4. Empty the contents of the dust container into a waste bin.
5. Reattach the dust container securely to the main unit.

6.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly, depending on usage, to maintain suction power.

1. Remove the dust container as described above.
2. Carefully remove the HEPA filter from the dust container.
3. Tap the filter gently over a waste bin to dislodge accumulated dust.
4. If necessary, rinse the filter under cool running water. Ensure the filter is completely dry before reinserting it into the vacuum cleaner. Do not use detergents or hot water.
5. Reinsert the dry HEPA filter into the dust container and reattach the container to the main unit.



Image 7: Regular cleaning of the dust container and filter is essential for maintaining effective suction, as demonstrated by the debris on the rug.

6.3 Cleaning the Electric Rotary Brush

Periodically check the rotary brush for tangled hair or fibers. Use scissors to carefully cut and remove any obstructions.

7. TROUBLESHOOTING

If you encounter any issues with your ETA Rotary Handheld Vacuum Cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully (approx. 5 hours).
Reduced suction power.	Dust container is full. Filter is clogged. Obstruction in nozzle/hose.	Empty the dust container. Clean or replace the HEPA filter. Check and clear any blockages.
Electric rotary brush stops rotating.	Hair or debris tangled in the brush.	Turn off the vacuum, remove the brush, and carefully remove any tangled material.


Problem	Possible Cause	Solution
Charging indicator not lighting up.	Power adapter not connected. Vacuum not properly seated.	Ensure power adapter is securely plugged in. Re-seat the vacuum cleaner firmly on the charging station.

8. SPECIFICATIONS

Feature	Specification
Brand	ETA
Model Number	ETA142590000
Color	White
Product Dimensions (L x W x H)	15 x 17 x 43 cm
Voltage	14.4 Volts
Battery Type	Li-Ion
Runtime	Up to 25 minutes
Charging Time	Approximately 5 hours
Filter Type	HEPA Cartridge
Power Source	Battery Powered
Form Factor	Handheld
Recommended Uses	Upholstery cleaning, general spot cleaning

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official ETA website. If you require technical support or have questions not covered in this manual, please contact ETA customer service through their official channels.

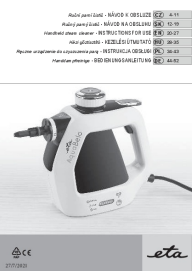	ETA Titanium Cookware - User Manual and Instructions Comprehensive guide for ETA titanium cookware, covering usage, maintenance, safety, and warranty information for models like ETA 6900 series.
	Eta Handy Home 5428: Návod k obsluze a použití Tento návod k obsluze poskytuje podrobné informace o ručním vysavači Eta Handy Home 5428. Obsahuje pokyny pro bezpečné používání, sestavení, čištění, údržbu a technické specifikace produktu.
	ETA Moneto: Návod k obsluze a instrukce pro tyčový vysavač 2v1/3v1 Kompletní návod k obsluze pro tyčový vysavač ETA Moneto (modely ETA3449, ETA4449, ETA5449, ETA6449). Zjistěte, jak efektivně používat, čistit a udržovat váš vysavač pro maximální výkon a dlouhou životnost.
	ETA Super Sonic 2-in-1 Stick Vacuum Cleaner User Manual Comprehensive user manual for the ETA Super Sonic 2-in-1 stick vacuum cleaner, covering safety instructions, assembly, operation, maintenance, and technical specifications. Includes details on charging, filters, and accessories.
	ETA Aquabelo 1264 Ruční parní čistič - Návod k obsluze Kompletní návod k obsluze pro ruční parní čistič ETA Aquabelo 1264. Zjistěte, jak bezpečně používat, čistit a udržovat váš parní čistič pro dosažení nejlepších výsledků v domácnosti.
	Uživatelská příručka k robotickému vysavači ETA Master 2 PRO Tato uživatelská příručka poskytuje komplexní pokyny a návody pro ovládání robotického vysavače ETA Master 2 PRO a související aplikace ETA SMART, včetně instalace, nastavení, funkcí a řešení problémů.

