



Manuals.plus /

› Samsung /

› Samsung WF18T8000GV/ET Large Capacity Front-Load Washing Machine User Manual

Samsung WF18T8000GV/ET

Samsung WF18T8000GV/ET Large Capacity Front-Load Washing Machine User Manual

Model: WF18T8000GV/ET

1. IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance to prevent potential hazards and ensure proper operation. Keep this manual for future reference.

General Safety Precautions

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep flammable materials away from the appliance.
- Do not operate the machine if it is damaged or malfunctioning. Contact authorized service personnel.
- Always unplug the appliance before cleaning or performing maintenance.

Electrical Safety

- Use only a dedicated 220V power outlet.
- Do not use extension cords or adapters.
- Ensure the power cord is not pinched or damaged.

2. PRODUCT OVERVIEW

The Samsung WF18T8000GV/ET is a large capacity front-load washing machine designed for efficient and intelligent laundry care. It features advanced technologies to enhance washing performance and user convenience.

Key Features

- **18 kg Capacity:** Accommodates large loads, reducing the frequency of washes.
- **EcoBubble Technology:** Generates bubbles to penetrate fabrics faster, allowing effective cleaning at lower temperatures and saving energy.

- **Digital Inverter Motor:** Ensures superior energy efficiency, minimal noise, and long-lasting performance with a 20-year warranty.
- **Disinfecting Steam Wash:** Releases powerful steam from the drum bottom to remove stubborn dirt and 99.9% of bacteria and allergens.
- **Smart Check System:** Detects and diagnoses problems, providing simple solutions via a smartphone app.
- **Diamond Drum:** Features a unique design that is gentle on clothes while effectively washing.

SAMSUNG

Lavatrice Grandi Capacità



Capacità Lavaggio

18 KG



EcoBubble™

Lava a freddo come a caldo, risparmiando il 70%¹ di energia



Fine Programmata

Programma il tuo bucato in base alle tue esigenze



Pulizia Cestello

Rimuove i residui di detersivo e le tracce di sporco all'interno del cestello



(1) Testato secondo IEC 60456-2010 / 4kg di carico / programma Ecolavaggio® Rapido (WF80F5E5U4W) vs. Cotone 40° senza Ecobubble™ (WF0702WKU). I singoli risultati possono variare.

Figure 2.1: Front view of the Samsung WF18T8000GV/ET washing machine.

3. INSTALLATION AND SETUP

Proper installation is crucial for the optimal performance and longevity of your washing machine. Follow these steps carefully.

Unpacking

- Remove all packaging materials, including the shipping bolts from the rear of the machine. Keep the bolts for future transport.

- Inspect the machine for any damage.

Location Requirements

- Place the washing machine on a firm, level surface.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.

Dimensions and Leveling



Figure 3.1: Washing machine with key dimensions (Width: 68.6 cm, Depth: 79.6 cm, Height: 98.4 cm).

- **Dimensions (W x D x H):** Approximately 68.6 cm x 79.6 cm x 98.4 cm.
- Adjust the leveling feet to ensure the machine is perfectly stable and level. Use a spirit level to verify.

Water Supply and Drain Connection

- Connect the water inlet hoses to the hot and cold water taps. Ensure connections are tight to prevent leaks.
- Securely attach the drain hose to a standpipe or laundry tub, ensuring it is not kinked or blocked.

Electrical Connection

- Plug the power cord into a grounded 220V electrical outlet.
 - Do not overload the circuit.
-

4. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your Samsung washing machine.

Control Panel Overview

The washing machine features a tactile control panel for easy program selection and setting adjustments.

Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 18 kg.
- Close the door firmly.

Adding Detergent and Softener

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment (single-compartment dispenser).
- Add fabric softener to the designated compartment, if desired.
- Push the dispenser drawer back in completely.

Selecting a Wash Cycle

- Turn the cycle selector knob or use the touch controls to choose the desired wash program (e.g., Cotton, Synthetics, Delicates, Steam, EcoBubble).
- Adjust temperature, spin speed (up to 1100 rpm), and other options as needed.

Starting a Wash Cycle

- Press the Start/Pause button to begin the selected cycle.

Special Functions

EcoBubble Technology

SAMSUNG

Lavatrice Grandi Capacità



**CON ECOBUBBLE™
LAVI A FREDDO
COME A CALDO**

**RISPARMI FINO A
70%
DI ENERGIA***

*Testato secondo IEC 60456-2010 / 4kg di carico / programma Ecolavaggio® Rapido (WF80F5E5U4W) vs. Cotone 40° senza Ecobubble™ (WF0702WKU). I singoli risultati possono variare.

Figure 4.1: EcoBubble technology allows effective cold water washing.

This feature pre-mixes detergent with air and water to create bubbles, which penetrate fabrics 40 times faster than conventional detergent. This allows for effective cleaning even in cold water, saving energy.

Disinfecting Steam Wash

Select a steam cycle to release powerful steam that helps remove stubborn stains, bacteria, and allergens from your laundry.

Delayed End



Figure 4.2: Program your wash cycle to end at a convenient time.

Use the Delayed End function to set a specific time for your wash cycle to finish, allowing you to manage your laundry more flexibly.

5. MAINTENANCE

Regular maintenance ensures your washing machine operates efficiently and extends its lifespan.

Cleaning the Drum (Eco Drum Clean)



Pulizia
Cestello

Rimuove i residui di detersivo

e le tracce di sporco all'interno del cestello.



Figure 5.1: The Eco Drum Clean cycle removes detergent residue and dirt from the drum.

- The machine features an Eco Drum Clean cycle that cleans the drum without the need for chemical detergents.
- The machine will remind you when it's time to run this cycle for optimal maintenance.

Cleaning the Detergent Drawer

- The self-cleaning detergent drawer uses a powerful water jet to automatically remove detergent and softener residue, keeping the drawer clean and hygienic.
- Periodically remove and rinse the drawer manually for thorough cleaning.

Cleaning the Debris Filter

- Locate the debris filter, usually at the bottom front of the machine.
- Place a shallow container under the filter to catch any water.
- Unscrew the filter cap, drain the water, and remove any lint or debris.
- Clean the filter under running water and reinsert it securely.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to this section for common problems and solutions.

Smart Check System

The Smart Check automatic error monitoring system detects and diagnoses problems. It provides simple solutions through a smartphone application, helping you save time and avoid costly service calls.

Common Issues and Solutions

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Start/Pause button not pressed.	Check power connection; Ensure door is latched; Press Start/Pause.
No water supply	Water taps closed; Water inlet hose kinked or blocked.	Open water taps; Straighten hose; Clean filter if necessary.
Water not draining	Drain hose kinked or blocked; Debris filter clogged.	Straighten drain hose; Clean debris filter.
Excessive vibration/noise	Machine not level; Shipping bolts not removed; Uneven load.	Adjust leveling feet; Remove shipping bolts; Redistribute laundry.

7. SPECIFICATIONS

Detailed technical specifications for the Samsung WF18T8000GV/ET washing machine.

Parameter	Value
Model Number	WF18T8000GV/ET
Capacity	18 Kilograms
Maximum Spin Speed	1100 rpm
Dimensions (D x W x H)	79.6 cm x 68.6 cm x 98.4 cm
Weight	169 Kilograms
Voltage	220 Volts
Energy Efficiency Class	C
Annual Energy Consumption	76 Kilowatt-hours
Water Consumption per Cycle (Eco 40-60)	70 Liters
Noise Level (Spinning)	72 dB
Drum Material	Stainless Steel
Control Type	Tactile (Touch)
Access Location	Front-Load

Energy Label Information

The image shows a standard European Energy Label for a Samsung washing machine. At the top left is the European Union flag. To its right, the word "ENERGY" is written in large blue letters with a lightning bolt symbol. Further right is a QR code. Below the flag, the Samsung logo is on the left and the model number "WF18T8000GV" is on the right. A vertical scale of energy efficiency classes (A, B, C, D, E) is shown on the left side, with A being the most efficient (green) and E being the least (orange). A large black arrow points to the class "C" on the right side of the scale.

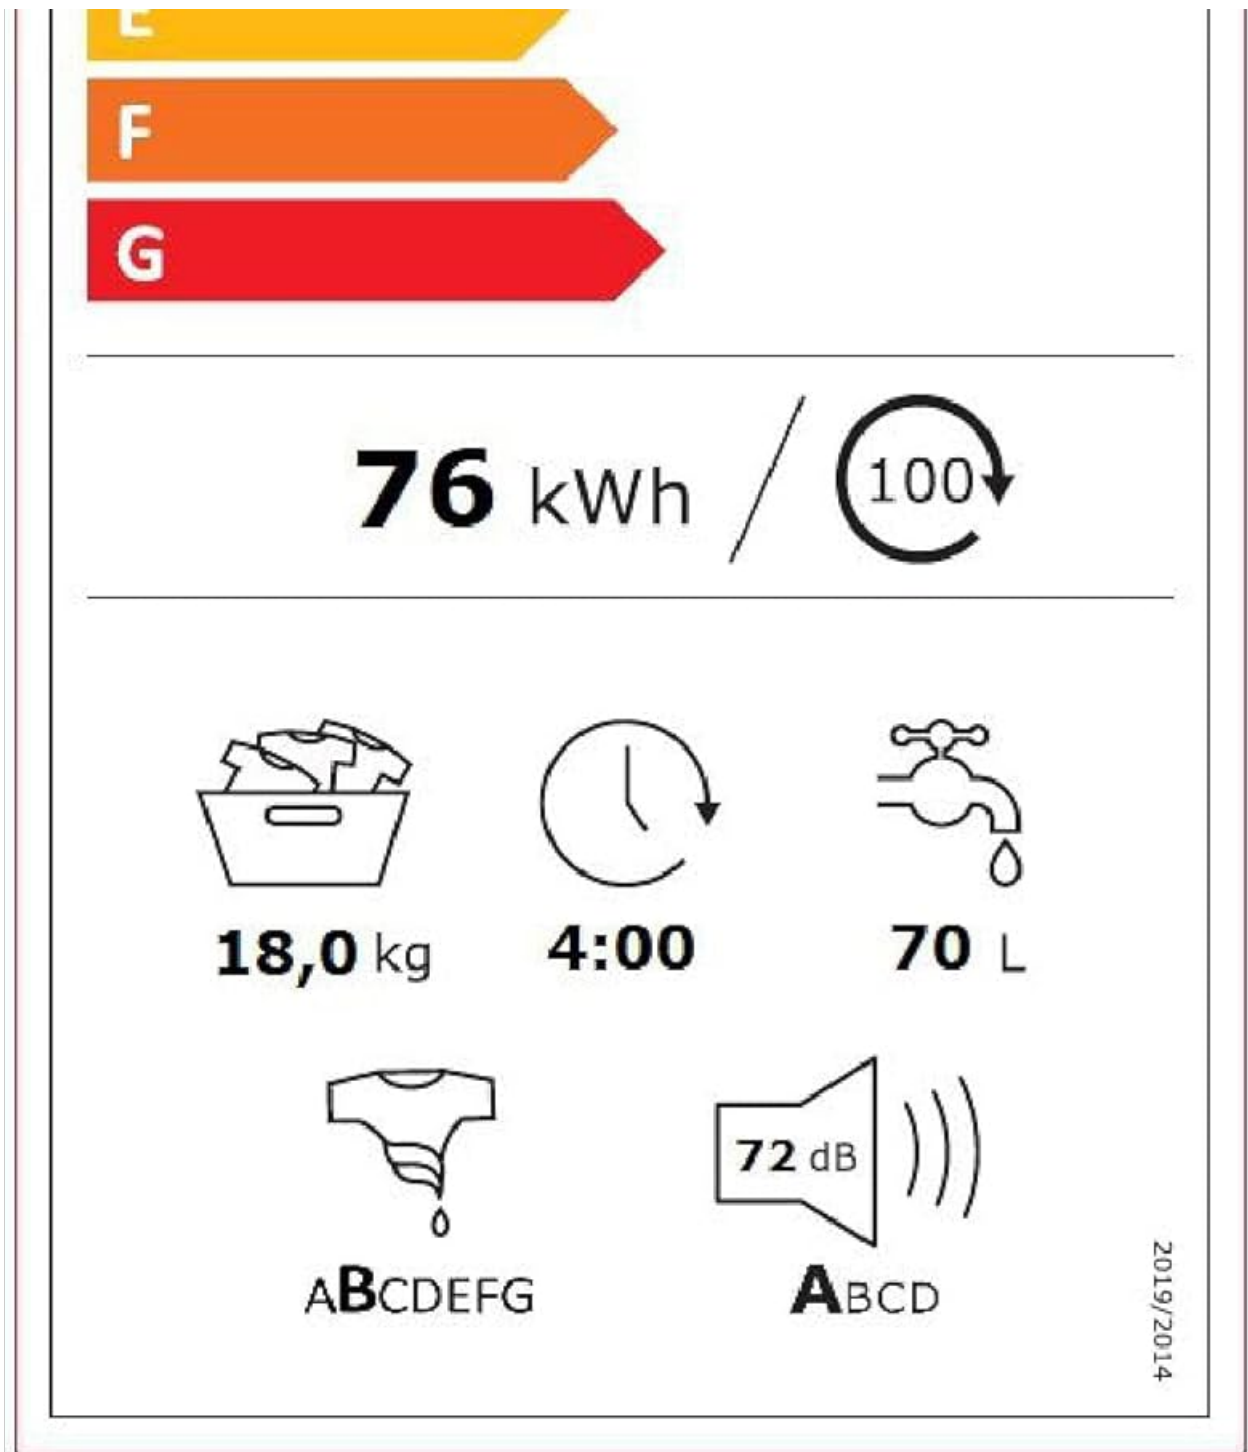


Figure 7.1: Energy label indicating efficiency class C and other consumption details.
 For more detailed information, refer to the EPREL database: <https://eprel.ec.europa.eu/qr/407130>

8. WARRANTY AND SUPPORT

Information regarding your product's warranty and how to obtain support.

Product Warranty

- The product comes with a minimum guarantee period of **24 months** from the date of purchase.
- The Digital Inverter Motor is covered by an extended **20-year warranty**, ensuring long-term reliability.



Figure 8.1: The Digital Inverter Motor is guaranteed for 20 years.

Customer Support

For technical assistance, service requests, or warranty claims, please contact Samsung customer support. Refer to the contact information provided with your purchase documentation or visit the official Samsung website for your region.