

[Manuals.plus](#) /

> [Think kitchen](#) /

> thinkkitchen Pro-Blend Hand Blender User Manual

Think kitchen Pro-Blend 300W

thinkkitchen Pro-Blend Hand Blender User Manual

Model: Pro-Blend 300W

INTRODUCTION

The thinkkitchen Pro-Blend Hand Blender is a versatile kitchen appliance designed for efficient blending, mixing, and pureeing. With its powerful 300W motor and multi-speed control, it is ideal for preparing sauces, soups, dips, smoothies, and more. Its ergonomic design and detachable blending shaft ensure ease of use and cleaning.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the blender from the power outlet before cleaning or when not in use.
- Do not immerse the motor unit in water or any other liquid. Only the blending shaft is submersible.
- Keep hands, hair, clothing, and utensils away from the moving blades during operation to prevent injury.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments recommended or sold by the manufacturer.

PRODUCT OVERVIEW

Familiarize yourself with the components of your thinkkitchen Pro-Blend Hand Blender.



Image: The complete thinkkitchen Pro-Blend Hand Blender, showcasing its sleek design and stainless steel blending shaft.



TURBO
SETTING



ADJUSTABLE
SPEED



300
WATTS



Image: Close-up of the hand blender's control panel, highlighting the Turbo setting button, adjustable speed dial, and indicating its 300 Watts power.



STAINLESS
STEEL BLADE



SOFT TOUCH
HANDLE



EASY TO
CLEAN



Image: View of the hand blender's lower section and handle, emphasizing the durable stainless steel blade, the comfortable soft-touch handle, and its easy-to-clean design.

SETUP

Before first use, ensure all packaging materials are removed. Wash the blending shaft in warm soapy water, rinse, and dry thoroughly. The motor unit can be wiped with a damp cloth.

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place.
3. Ensure the appliance is properly assembled before plugging it into a power outlet.

OPERATING INSTRUCTIONS

The thinkkitchen Pro-Blend Hand Blender offers multi-speed control and a turbo function for optimal blending results.

General Operation:

1. Prepare your ingredients and place them in a suitable container for blending.
2. Plug the hand blender into a standard electrical outlet.
3. Immerse the blending shaft into the ingredients, ensuring the blade guard is fully submerged to prevent splattering.
4. **To Start:** Long-press the power button (usually marked with a power symbol) to turn the unit on.
5. **Adjust Speed:** Rotate the speed control dial on top of the motor unit to select your desired blending speed (12-speed options available).
6. **Turbo Function:** For a quick burst of maximum power, press and hold the "TURBO" button. Release to return to the selected speed or stop.
7. Move the blender gently up and down in the container to ensure even blending.
8. **To Stop:** Short-press the power button to stop the blending action.
9. Unplug the appliance from the power outlet after use.

Tips for Best Results:

- For best results, cut solid ingredients into small pieces before blending.
- Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow it to cool down if used for extended periods.
- When blending hot liquids, use caution and do not fill the container to the brim to avoid spills.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your hand blender.

1. **Always unplug the appliance before cleaning.**
2. **Detaching the Blending Shaft:** Twist the blending shaft counter-clockwise and pull it away from the motor unit.
3. **Cleaning the Blending Shaft:** Wash the detachable blending shaft, including the blade and blade guard, under running water with a mild dish soap. Use a brush if necessary to remove food residue. Be careful around the sharp blades.
4. **Cleaning the Motor Unit:** Wipe the motor unit with a damp cloth. *Never immerse the motor unit in water or any other liquid.*
5. Dry all parts thoroughly before reassembling or storing.
6. Store the hand blender in a dry place. Its compact design makes storage simple.

TROUBLESHOOTING

If you encounter issues with your hand blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to blending shaft.	Ensure the blender is securely plugged into a working outlet. Check if the blending shaft is correctly locked onto the motor unit.

Problem	Possible Cause	Solution
Blender stops during operation.	Overheating due to continuous use; ingredients too thick or hard.	Unplug and let the motor cool down for at least 15 minutes. Reduce the amount or size of ingredients, or add more liquid.
Ingredients are not blending smoothly.	Insufficient liquid; ingredients too large; incorrect speed setting.	Add more liquid. Cut ingredients into smaller pieces. Increase the speed setting or use the Turbo function.
Splattering during blending.	Blade guard not fully submerged; container too full.	Ensure the blade guard is fully immersed in the ingredients. Do not overfill the blending container.

SPECIFICATIONS

Feature	Detail
Brand	Think kitchen
Model	Pro-Blend 300W
Power/Wattage	300 watts
Number of Speeds	12
Material	Plastic, Stainless Steel
Product Dimensions	38.1 x 5.08 x 5.08 cm
Item Weight	1.03 kg
Special Features	Portable, BPA Free, PFOA Free, PTFE Free
Colour	Red (also available in Black, Silver)

WARRANTY

This thinkkitchen Pro-Blend Hand Blender comes with a manufacturer's warranty. Please refer to the product packaging or contact customer support for specific warranty terms and conditions. Typically, the warranty covers defects in materials and workmanship under normal household use.

CUSTOMER SUPPORT

For any questions, assistance, or to report an issue with your thinkkitchen Pro-Blend Hand Blender, please contact thinkkitchen customer support. You can often find contact information on the product packaging, the official brand website, or through the retailer where the product was purchased.

Visit the official [Think kitchen Store on Amazon](#) for more information.

