

Whisker LR3C-1000

Litter-Robot 3 Connect User Manual

Model: LR3C-1000 | Brand: Whisker

INTRODUCTION

Welcome to the Litter-Robot 3 Connect user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your automatic self-cleaning litter box. The Litter-Robot 3 Connect is designed to simplify cat care by automatically sifting waste after each use, providing a clean bed of litter every time and significantly reducing odors.

For more information about Whisker and the Litter-Robot, you can visit the [Whisker Store](#).

Official video from Whisker: Learn about the founder's story and the innovation behind Litter-Robot.

SETUP

Before initial use, ensure the Litter-Robot 3 Connect is placed on a firm, level surface. Avoid placing it against a wall or in a corner, as this can interfere with its operation. The unit requires at least 5 lbs (2.2 kg) of clumping litter to function correctly in Automatic Mode.

1. **Unboxing:** Carefully remove all packaging materials.
2. **Placement:** Position the Litter-Robot in a suitable location, ensuring adequate space around the unit.
3. **Litter Fill:** Add clumping cat litter to the globe, ensuring it reaches the fill line inside the globe. Do not overfill.
4. **Power On:** Plug the unit into a power outlet. The blue light should illuminate, indicating it's ready.



The Litter-Robot 3 Connect, ready for use with its companion app.

OPERATING THE LITTER-ROBOT

The Litter-Robot 3 Connect offers both automatic and manual operation modes, along with smart features accessible via the Whisker app.

Automatic Mode

In Automatic Mode, the Litter-Robot detects when your cat enters and exits the globe. After a preset delay (typically 7 minutes, adjustable via the app), the unit will automatically begin a cleaning cycle. The globe rotates, sifting clean litter from waste, which is then deposited into the waste drawer below.



Never scoop again[®]

- ✦ Automatic sifting technology provides a clean bed of litter with each use.
- ☁ Swift cleaning and carbon filters help drastically reduce unwanted odors.
- 🐈 Multi-cat friendly design provides a comfortable space for up to 4 cats.

The automatic sifting process ensures a clean litter bed after each use.

Manual Controls

The control panel on the front of the unit provides manual control options:

- **Power Button:** Turns the unit on or off.
- **Cycle Button:** Initiates a manual cleaning cycle.
- **Empty Button:** Initiates a cycle that empties all litter from the globe into the waste drawer, useful for full litter changes.
- **Reset Button:** Resets the cat sensor and returns the globe to the Home position.
- **Light Button:** Toggles the night light on/off.
- **Connect Button (Wi-Fi):** Used for connecting the unit to your home Wi-Fi network for app control.

Whisker App Integration

The Whisker app allows you to monitor and control your Litter-Robot from your smartphone. Features include:

- Receiving notifications when the waste drawer is full.
- Viewing real-time activity and control the unit remotely.
- Tracking your cat's litter box habits.

In-app insights

Track your cat's bathroom activity for irregularities and get alerts about waste drawer levels.



litter-robot
by whisker

Monitor your Litter-Robot's status and your cat's usage patterns through the Whisker app.

MAINTENANCE

Regular maintenance ensures optimal performance and odor control for your Litter-Robot.

Emptying the Waste Drawer

The waste drawer should be emptied regularly, typically once a week for one cat, or more frequently for multiple cats. The Whisker app will notify you when the drawer is full. Simply pull out the drawer, tie off the waste bag, and dispose of it. Replace with a new waste drawer liner.

Odor Control

The Litter-Robot utilizes a carbon filter located in the waste drawer to absorb odors. Replace the carbon filter approximately once a month, or as needed, to maintain effective odor control.

Outstanding odor control

Litter-Robot® sifts waste within minutes, and the fully enclosed waste drawer helps reduce unpleasant litter box smells.



The fully enclosed waste drawer and carbon filter help minimize unpleasant odors.

Cleaning the Unit


Periodically, the Litter-Robot globe and base may require cleaning. For routine cleaning, use pet-safe wipes or a damp cloth. For a deeper clean, the globe can be removed and washed with mild soap and water. Ensure all components are completely dry before reassembling the unit.

Stock up on the essentials

Elevate your Litter-Robot® experience with these Whisker accessories for simpler, cleaner cat care.



Fence

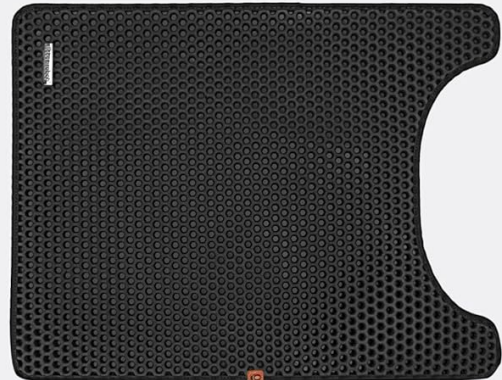

Litter-Robot® Litter Trap™ Mat



Cleaner Wipes



Carbon Filters



Waste Drawer Liners



Ramp

litter-robot
by whisker

Essential accessories like cleaner wipes and carbon filters are available to assist with maintenance.

TROUBLESHOOTING

If you encounter issues with your Litter-Robot 3 Connect, refer to the common problems and solutions below:

-