

JVC TH-S560B

JVC TH-S560B 2.1-Channel Sound Bar System with Subwoofer and Dolby Atmos User Manual

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your JVC TH-S560B 2.1-Channel Sound Bar System with Subwoofer and Dolby Atmos. Please read this manual thoroughly before using the product and retain it for future reference.

The JVC TH-S560B system is designed to enhance your audio experience with a sound bar and a wireless subwoofer, offering multiple connectivity options and sound modes.

2. SAFETY INFORMATION

Electrical Safety:

- Ensure the power supply voltage matches the rating label on the unit.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the casing. Refer all servicing to qualified personnel.
- Unplug the unit during lightning storms or when unused for long periods.

Placement:

- Place the unit on a stable, flat surface.
- Avoid placing near heat sources, direct sunlight, or excessive dust.
- Ensure adequate ventilation around the unit.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- JVC TH-S560B Sound Bar
- Wireless Subwoofer
- Remote Control

- Power Cord(s)
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1. Sound Bar and Subwoofer



This image displays the JVC TH-S560B sound bar and its accompanying wireless subwoofer. The sound bar is a long, slender unit designed to be placed horizontally, typically below a television. The subwoofer is a rectangular unit, providing enhanced bass audio.

4.2. Sound Bar Rear Panel



The rear panel of the sound bar features various input and output ports for connecting to external devices. These include HDMI 1, HDMI 2, HDMI OUT (ARC), Optical, USB, and AUX inputs, along with the AC power input.

4.3. Sound Bar Top Panel Controls



The top panel of the sound bar includes essential control buttons for power, input selection, and volume adjustment, providing direct access to common functions.

4.4. Subwoofer Rear Panel



The rear panel of the subwoofer contains the power input and a label with model information and power specifications. It also includes indicators for wireless pairing status.

4.5. Remote Control



The remote control provides full functionality for the sound bar system, including power, input selection, volume, mute, playback controls, sound modes (Movie, Music, News, 3D), and bass/treble adjustments.

5. SETUP

5.1. Placement

- **Sound Bar:** Place the sound bar on a stable, flat surface directly in front of your television, ensuring it does not obstruct the TV's remote sensor.
- **Subwoofer:** Position the wireless subwoofer on the floor near the sound bar. The wireless connection allows for flexible placement within range.

5.2. Connections

Connect the sound bar to your television or other audio sources using one of the following methods:

- **HDMI ARC (Recommended):** Connect an HDMI cable from the HDMI OUT (ARC) port on the sound bar to the HDMI ARC port on your TV. This allows audio to be sent from the TV to the sound bar and enables TV remote control of the sound bar's volume.
- **Optical:** Connect an optical cable from the OPTICAL port on the sound bar to the optical output port on your TV.
- **AUX:** Connect a 3.5mm audio cable from the AUX port on the sound bar to the audio output port on your TV or other audio device.
- **HDMI 1 / HDMI 2:** Connect external devices (e.g., Blu-ray player, game console) to these HDMI input ports on the sound bar.
- **USB:** Insert a USB drive into the USB port for media playback.

Power Connection:

- Connect the power cord to the AC IN port on the sound bar and then to a power outlet.
- Connect the power cord to the AC IN port on the subwoofer and then to a power outlet. The subwoofer will automatically pair with the sound bar when both are powered on.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

Press the **POWER** button on the remote control or the sound bar's top panel to turn the system on or off.

6.2. Input Selection

Press the **INPUT** button on the remote control or the sound bar's top panel repeatedly to cycle through available input sources: HDMI 1, HDMI 2, HDMI ARC, OPTICAL, AUX, BLUETOOTH, USB.

6.3. Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control or sound bar to adjust the volume. Press the **MUTE** button to temporarily silence the audio.

6.4. Bluetooth Pairing

1. Press the **INPUT** button to select the BLUETOOTH input. The display will show 'BT'.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select 'JVC TH-S560B' from the list to pair. Once connected, the display will show 'PAIRED'.
4. To disconnect, press and hold the **PAIR** button on the remote control.

6.5. Sound Modes

Press the dedicated buttons on the remote control to select different sound modes:

- **MOVIE:** Optimized for cinematic audio.
- **MUSIC:** Optimized for music playback.
- **NEWS:** Enhances vocal clarity.
- **3D:** Provides a wider, more immersive soundstage.

6.6. Bass and Treble Adjustment

Use the **BASS+** / **BASS-** and **TREB+** / **TREB-** buttons on the remote control to adjust the bass and treble levels according to your preference.

7. MAINTENANCE

Cleaning:

- Disconnect the power cord before cleaning.
- Wipe the surfaces of the sound bar and subwoofer with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

8. TROUBLESHOOTING

If you encounter issues with your sound bar system, refer to the following common problems and solutions:







- **No Power:** Ensure both the sound bar and subwoofer are properly connected to a working power outlet. Check the power cords for damage.
- **No Sound:**
 - Verify the correct input source is selected on the sound bar.
 - Check the volume level on both the sound bar and the connected device (e.g., TV).
 - Ensure cables are securely connected.
 - If using Optical or HDMI ARC, check your TV's audio output settings to ensure it's set to external speakers or PCM format.
 - Ensure the subwoofer is paired and its power indicator is on.
- **Bluetooth Connection Issues:**
 - Ensure the sound bar is in Bluetooth pairing mode.
 - Move your Bluetooth device closer to the sound bar.
 - Disconnect and re-pair the device.
 - Clear the Bluetooth pairing list on your device and try again.
- **Remote Control Not Working:**
 - Check the battery orientation and replace batteries if necessary.
 - Ensure there are no obstructions between the remote and the sound bar's sensor.

9. SPECIFICATIONS

- **Model:** TH-S560B
- **Speaker Type:** Soundbar with Wireless Subwoofer
- **Surround Sound Channel Configuration:** 2.1
- **Maximum Output Power:** 500 Watts (Peak)
- **RMS Power:** 160 Watts
- **Frequency Response:** 45 Hz to 20 kHz
- **Connectivity Technology:** Bluetooth, HDMI (ARC), Optical, AUX, USB
- **Special Features:** Dolby Vertical Sound, Bass Boost
- **Control Method:** Remote
- **Power Source:** Corded Electric (AC 110-240V, 50/60Hz)
- **Subwoofer Power Consumption:** 64W
- **Product Dimensions (Sound Bar):** 37.8"D x 4.4"W x 2.9"H
- **Material:** Plastic
- **Color:** Black
- **Item Weight:** 21.2 pounds (total system)

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official JVC website. Contact JVC customer service for assistance with product registration, troubleshooting beyond this manual, or service requests.

 <p>JVC</p> <p>2.1 Channel Soundbar with Wireless Subwoofer TH-E741B</p>	<p>JVC TH-E741B 2.1 Channel Soundbar with Wireless Subwoofer - User Manual</p> <p>Comprehensive user manual for the JVC TH-E741B 2.1 Channel Soundbar with Wireless Subwoofer, covering setup, operation, connections, troubleshooting, and specifications. Learn how to connect, pair, and use various features like Bluetooth and Dolby Atmos.</p>
 <p>JVC</p> <p>2.1ch Dolby Atmos Sound bar with Built-in woofer Model: JVB66223 User Manual</p> <p>Dolby Atmos HDMI Bluetooth</p>	<p>JVC JVB66223 2.1ch Dolby Atmos Soundbar User Manual</p> <p>User manual for the JVC JVB66223 2.1ch Dolby Atmos Soundbar. Provides setup, operation, safety, and troubleshooting guides for enhanced home audio experiences. Learn about Dolby Atmos technology at dolby.com/technologies/dolby-atmos.</p>
 <p>JVC</p> <p>PORTABLE 2.0CH SOUND BAR TH-N120BA</p> <p>User Manual</p>	<p>JVC TH-N120BA Portable 2.0ch Sound Bar User Manual</p> <p>User manual for the JVC TH-N120BA portable 2.0ch sound bar, covering safety precautions, connections, playback, specifications, and troubleshooting.</p>
 <p>JVC</p> <p>2.1 Channel Soundbar with Wireless Subwoofer TH-E631B</p>	<p>JVC TH-E631B 2.1 Channel Soundbar with Wireless Subwoofer Instruction Manual</p> <p>Operating instructions and safety guide for the JVC TH-E631B 2.1 Channel Soundbar with Wireless Subwoofer. Learn about setup, connections, features, and troubleshooting.</p>
 <p>JVC</p> <p>LED TV Users Guide LT-55NQ7165A 55" LED TV</p> <p>HDMI</p>	<p>JVC LT-55NQ7165A 55-inch 4K UHD Smart LED TV User Guide</p> <p>Comprehensive user guide for the JVC LT-55NQ7165A 55-inch 4K UHD Smart LED TV, covering setup, installation, remote control functions, initial setup, settings, channel management, media playback, troubleshooting, and specifications.</p>
 <p>JVC</p> <p>5.1.2 Channel Soundbar with Wireless Subwoofer TH-E874B</p>	<p>JVC TH-E874B 5.1.2 Channel Soundbar User Manual</p> <p>Official instruction manual for the JVC TH-E874B 5.1.2 Channel Soundbar with Wireless Subwoofer. Learn about setup, operation, safety, and troubleshooting.</p>

