



[Manuals.plus](#) /

> [SF](#) /

> SF Quartz Analog Digital Watch NT77118PP01W User Manual

SF NT77118PP01W

SF Quartz Analog Digital Watch NT77118PP01W User Manual

Model: NT77118PP01W

Brand: SF

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your SF Quartz Analog Digital Watch, model NT77118PP01W. Please read this manual thoroughly to ensure proper use and care of your watch.

2. PRODUCT FEATURES

- **Dual Display:** Combines analog hands with a digital display for versatile timekeeping.
- **Durable Construction:** Features a rugged case and a sturdy Polyurethane (PU) strap designed for everyday and outdoor use.
- **Integrated Functions:** Includes an alarm, stopwatch, and backlight for enhanced utility.
- **Water Resistance:** Water resistant up to 30 meters (3 ATM), suitable for splashes or brief immersion, but not for swimming or diving.

3. WATCH COMPONENTS

Familiarize yourself with the main components of your watch:



Figure 3.1: Side view of the watch, highlighting the 'LIGHT', 'MODE', 'ADJUST', and 'RESET' buttons, along with the analog crown.

- **Analog Crown:** Used for setting the analog time.
- **LIGHT Button:** Activates the backlight for the digital display.
- **MODE Button:** Cycles through different digital modes (Time, Alarm, Stopwatch).
- **ADJUST Button:** Used to enter and confirm settings in various modes.
- **RESET Button:** Used to change values or reset functions within settings.

4. SETUP INSTRUCTIONS

4.1 Setting Analog Time

1. Pull the analog crown (located on the right side of the watch) outwards.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back in to secure the analog time setting.

4.2 Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display flashes, indicating it is in setting mode.
2. Press the **RESET** button to cycle through the values (seconds, minutes, hours, date, month, day).
3. Use the **ADJUST** button to increase the selected value. Hold **ADJUST** to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

5. OPERATING INSTRUCTIONS

5.1 Using the Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds. This is useful in low-light conditions.

5.2 Using the Alarm Function

1. Press the **MODE** button until the alarm time is displayed.

2. Press the **ADJUST** button to enter alarm setting mode (the hour digits will flash).
3. Use the **RESET** button to select between hour and minute settings.
4. Use the **ADJUST** button to set the desired alarm hour and minute.
5. Press the **MODE** button to exit alarm setting.
6. To activate/deactivate the alarm, press the **ADJUST** and **RESET** buttons simultaneously in alarm mode. An alarm icon will appear/disappear.

5.3 Using the Stopwatch

1. Press the **MODE** button until the stopwatch display appears (usually showing 00:00:00).
2. Press the **ADJUST** button to start the stopwatch.
3. Press the **ADJUST** button again to pause the stopwatch.
4. Press the **RESET** button while paused to reset the stopwatch to zero.
5. To resume from a paused state, press the **ADJUST** button.

6. MAINTENANCE

6.1 Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents, as these can damage the watch materials.

6.2 Water Resistance

Your watch is water resistant up to 30 meters (3 ATM). This means it can withstand splashes, rain, or brief immersion in water. However, it is **not** suitable for showering, swimming, diving, or any activities involving high water pressure or prolonged submersion. Do not operate any buttons while the watch is wet or submerged.

6.3 Battery Replacement

The watch is powered by a Lithium Polymer battery. When the digital display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.



Figure 6.1: Rear view of the watch, showing the stainless steel case back. This area should only be opened by a professional for battery replacement or service.

7. TROUBLESHOOTING

- **Analog hands not moving:** Check if the analog crown is pushed in completely. If it is, the battery may be low or depleted.
- **Digital display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Incorrect time displayed:** Refer to Section 4.1 and 4.2 to reset the analog and digital time.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open it yourself.

8. SPECIFICATIONS



Figure 8.1: Front view of the SF Quartz Analog Digital Watch, model NT77118PP01W.

Feature	Detail
Model Number	NT77118PP01W
Display Type	Analog-Digital
Movement Type	Quartz
Case Diameter	54.4 Millimetres
Case Thickness	19.5 Millimetres
Band Material Type	Polyurethane
Band Colour	Black
Dial Colour	Black
Water Resistance Depth	30 Metres (3 ATM)

Special Features	Alarm, Second Hand, Backlight, Stopwatch
Power Source Type	Battery Powered (1 Lithium Polymer battery included)
Item Weight	113.97 Grams
Product Dimensions	14 x 7 x 10 cm

9. WARRANTY AND SUPPORT

9.1 Warranty Policy

This SF watch comes with a **6-month manufacturer warranty** on manufacturing defects. To avail warranty service, you must present your original purchase invoice at any authorized Titan Service Center. No separate warranty card is required.

9.2 Contact Information

For further details or service-related inquiries, please contact Titan India customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** customercare@titan.co.in
- **Manufacturer:** Titan Company Limited, Sipcot Industrial Complex, Hosur, Tamil Nadu - 635129