

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Toshiba Air Conditioners (Models RG57H4(B)BGEFU1, RAC-PD1412CRU, and others)

Easytry123 RG57H4(B)BGEFU1

Easytry123 Replacement Remote Control User Manual

For Toshiba Room Air Conditioners (Compatible Models: RG57H4(B)BGEFU1, RG57HBGEU1, RG57HBBGEU1, RG57HBGCEU1, RG57HBBGCEU1, RAC-PD1412CRU, RAC-PD1411CWU, RAC-PD1411HRU)

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Easytry123 replacement remote control for Toshiba Room Air Conditioners. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the remote control or injury to yourself:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Keep batteries out of reach of children.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

The remote control is now ready for use. No programming is typically required for this replacement unit.



Figure 1: Front view of the Easytry123 replacement remote control, showing various function buttons and the display screen.

4. OPERATING INSTRUCTIONS

This section describes the functions of the buttons on your remote control. Please note that some buttons

or functions may vary slightly depending on the specific model of your Toshiba Air Conditioner.

ON/OFF (Yellow Button): Press to turn the air conditioner unit on or off.

MODE: Cycles through operating modes: Auto, Cool, Dry, Fan, Heat (if applicable to your AC unit).

FAN: Adjusts the fan speed: Auto, Low, Medium, High.

SLEEP: Activates Sleep Mode, which automatically adjusts the temperature for comfortable sleeping and energy saving.

FRESH: Activates the fresh air or air purification function (if available on your AC unit).

TURBO: Initiates rapid cooling or heating to reach the desired temperature quickly.

CLEAN: Activates the self-cleaning function for the indoor unit (if available on your AC unit).

TEMP ▲ / ▼: Increases or decreases the set temperature.

SHORT CUT: Recalls your preferred operating settings.

TIMER ON: Sets a timer for the air conditioner to turn on automatically.

TIMER OFF: Sets a timer for the air conditioner to turn off automatically.

LED: Turns the display light on the air conditioner unit on or off.

FOLLOW (or FOLLOW ME): Activates the 'Follow Me' function, where the remote control acts as a temperature sensor to maintain comfort around its location.

SWING (Note: This button may appear on some remote variations, such as the one shown in Figure 2) Controls the vertical louver swing of the air conditioner.



Figure 2: A variation of the Easytry123 replacement remote control, showing a slightly different button layout, including a 'SWING' button.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the surface or internal components.

5.2 Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries before long-term storage to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:** Check if the batteries are inserted correctly with the correct polarity. Replace batteries if they are old or depleted. Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- **Limited range:** Ensure the remote control is pointed directly at the air conditioner's receiver. Replace batteries if the range is significantly reduced.
- **Specific functions not working:** As a replacement remote, some advanced or unique functions of your original air conditioner remote may not be supported. Refer to your air conditioner's original manual for specific function compatibility.

7. SPECIFICATIONS

- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Toshiba Room Air Conditioners (specific models listed in title)

- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information or technical support, please contact the seller or refer to the original product documentation provided with your air conditioner unit. As a replacement item, it may not offer all functions identical to the original remote.