



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control for Carrier Portable Air Conditioners User Manual

Easytry123 Universal Replacement Remote

Easytry123 Replacement Remote Control for Carrier Portable Air Conditioners User Manual

Model Compatibility: OG-40MHHC, 40MHHQ12, 40MHHQ093, 40MHHQ123, 40MHHQ183, 40MHHC12, 40MHHC18, 40MHHC24, 40MHHQ09, 40MHHQ12, 40MHHQ18

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Carrier portable air conditioner models. This remote offers essential functions for operating your air conditioning unit. Please note that as a replacement unit, some advanced functions present on the original remote may not be available.

Before use, ensure your specific Carrier air conditioner model is listed in the compatibility section to guarantee proper functionality.

2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Important: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the remote control's buttons and their functions. The layout is designed for intuitive operation of your Carrier portable air conditioner.



Image 1: Front view of the Easytry123 replacement remote control, displaying all primary function buttons and the LCD screen.

Button Functions:

- **ON/OFF** (Yellow Button): Press to turn the air conditioner unit on or off.
- **MODE**: Cycles through operating modes such as Cool, Heat, Fan, Dry, Auto.
- **FAN**: Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TEMP** ▲ / ▼: Increases or decreases the set temperature.
- **SHORT CUT**: Activates a pre-set favorite setting for quick operation.
- **TIMER ON**: Sets a timer for the unit to turn on automatically.
- **TIMER OFF**: Sets a timer for the unit to turn off automatically.
- **SLEEP**: Activates sleep mode, which adjusts temperature for comfortable sleep and energy saving.
- **SWING**: Controls the vertical louver swing for air direction. (Note: Some remotes may have a separate horizontal swing button or combined function).
- **LED**: Turns the display light on the air conditioner unit on or off.
- **FRESH**: Activates the fresh air or air purification function (if available on the AC unit).

- **CLEAN:** Initiates a self-clean function for the indoor unit (if available on the AC unit).
- **TURBO:** Provides maximum cooling or heating power for rapid temperature change.
- **FOLLOW ME:** Activates a sensor in the remote to measure the temperature at its location and adjust the AC accordingly (if available on the AC unit).

Note: The availability and exact functionality of certain features (e.g., FRESH, CLEAN, TURBO, FOLLOW ME) depend on the specific Carrier air conditioner model you are operating. If your AC unit does not support a particular function, pressing the corresponding button on the remote will have no effect.

4. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the display becomes dim. Refer to the "Setup: Battery Installation" section for instructions.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	<ul style="list-style-type: none"> • Dead or incorrectly installed batteries. • Obstruction between remote and AC unit. • Remote out of range. 	<ul style="list-style-type: none"> • Replace batteries, ensuring correct polarity. • Remove any objects blocking the signal path. • Move closer to the AC unit.
Certain functions do not work.	<ul style="list-style-type: none"> • AC unit does not support the function. • Replacement remote may not support all original functions. 	<ul style="list-style-type: none"> • Refer to your AC unit's original manual for supported features. • Understand that this is a replacement remote and may have limited functionality compared to the original.
Display is dim or blank.	Low battery power.	Replace batteries.

6. SPECIFICATIONS

- **Product Type:** Replacement Remote Control
- **Brand:** Easytry123
- **Compatibility:** Various Carrier Portable Air Conditioner Models (e.g., OG-40MHHC, 40MHHQ12, 40MHHQ093, 40MHHQ123, 40MHHQ183, 40MHHC12, 40MHHC18, 40MHHC24, 40MHHQ09, 40MHHQ12, 40MHHQ18)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (per remote)

7. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty information may vary. Please refer to the retailer or seller (Easytry123) for details regarding purchase warranty and customer support. This manual does not imply a warranty from the original equipment manufacturer (Carrier).

For further assistance, please contact the seller directly through your purchase platform.