

[Manuals.plus](#) /

› [Tek Styz](#) /

› Tek Styz Portable Bluetooth Speaker TS-1937 User Manual

Tek Styz TS-1937

Tek Styz Portable Bluetooth Speaker TS-1937 User Manual

Model: TS-1937 | Brand: Tek Styz

1. INTRODUCTION

Thank you for purchasing the Tek Styz Portable Bluetooth Speaker, model TS-1937. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Tek Styz Portable Bluetooth 5.3 Speaker (Model TS-1937)
- USB Type-C Charging Cable
- User Manual (This document)

Note: A charger block/adaptor is not included. Please use an existing cell/mobile phone charger for power.

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 3.1: Front view of the Tek Styz TS-1937 Portable Bluetooth Speaker, showing the speaker grille and control buttons.

3.1. Controls and Indicators

Bluetooth Hands-free Calling

Full-duplex communication



Figure 3.2: Detailed view of the speaker's control buttons and their functions.

- **Power Button / Multi-function Button:**

- Long press for 3 seconds: Power On / Power Off
- Short press: Answer / End Call

- **"+" Button:**

- Short press: Volume Up
- Long press: Previous Song

- **"-" Button:**

- Short press: Volume Down
- Long press: Next Song

- **LED Indicator:** Displays power status, charging status, and Bluetooth connection status.
- **Microphone:** For hands-free calling.
- **USB-C Charging Port:** For charging the speaker.

3.2. Mounting Options

The speaker offers versatile mounting options for various uses:

Enjoy music anytime, anywhere

MINI Wearable Bluetooth Speaker

A great partner for travelling and fitness

WS11



Figure 3.3: Illustration of the three primary ways to wear or mount the speaker: double-sided magnet, built-in magnet, and spring clip.

- **Double-sided Magnet:** Allows for secure attachment to clothing or other magnetic surfaces, maintaining situational

awareness.

- **Built-in Magnet:** Provides secure placement with the integrated magnet clip, suitable for attaching to metal objects.
- **Spring Clip:** Offers free movement and secure attachment to clothing, bags, or other items without bouncing.

4. SETUP

4.1. Initial Charging

Before first use, fully charge the speaker. Connect the provided USB Type-C charging cable to the speaker's charging port and the other end to a USB power source (e.g., a computer USB port or a 5V/1A USB wall adapter). The LED indicator will show charging status and turn off or change color when fully charged. A full charge takes approximately 1 hour.

4.2. Powering On/Off

- **To Power On:** Long press the Power button for 3 seconds. The LED indicator will flash, indicating it's ready for pairing.
- **To Power Off:** Long press the Power button for 3 seconds. The LED indicator will turn off.

5. OPERATING INSTRUCTIONS

5.1. Bluetooth Pairing

To connect the speaker to your device:

1. Ensure the speaker is powered on and the LED indicator is flashing, indicating it's in pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "TS-1937" or a similar name from the list of found devices.
4. Once connected, the LED indicator will stop flashing and remain solid, and you will hear a confirmation tone.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

The speaker supports Bluetooth 5.3 for a stable connection up to 33 feet (10 meters).

5.2. Audio Playback

- **Play/Pause:** Use the controls on your connected device.
- **Volume Adjustment:** Short press the "+" button to increase volume, short press the "-" button to decrease volume.
- **Next Track:** Long press the "-" button.
- **Previous Track:** Long press the "+" button.

5.3. Hands-Free Calling

The built-in microphone allows for hands-free calls when connected to a smartphone.

HD SOUND QUALITY

Pure sound and natural sound quality



Figure 5.1: Example of using the speaker for hands-free communication.

- **Answer Call:** Short press the Power button when an incoming call is received.

- **End Call:** Short press the Power button during a call.
- **Reject Call:** Long press the Power button when an incoming call is received.

5.4. Dual Stereo Mode (TWS Pairing)

You can pair two TS-1937 speakers together for a true wireless stereo experience.

1. Ensure both speakers are powered off.
2. Power on both speakers simultaneously. They will enter pairing mode.
3. Double-click the Power button on one of the speakers. It will search for the other speaker.
4. Once paired, you will hear a confirmation tone, and the LED indicators on both speakers will change to a solid color.
5. Connect your device to one of the paired speakers via Bluetooth. Audio will now play through both speakers in stereo.

6. CHARGING

The speaker is equipped with a 600mAh rechargeable battery, providing up to 18 hours of playback at medium volume. When the battery is low, the speaker will indicate this with an audible alert or a flashing LED.

- Connect the USB Type-C charging cable to the speaker's charging port and a 5V/1A USB power source.
- The LED indicator will illuminate during charging.
- Once fully charged (approximately 1 hour), the LED indicator will change or turn off.

Note: Do not use chargers with voltage exceeding 5V or current exceeding 1A, as this may damage the speaker.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is IPX5 water-resistant, meaning it can withstand splashes and light rain. Do not submerge the speaker in water. Ensure the charging port cover is securely closed when exposed to moisture.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in frequent use. Avoid fully depleting the battery for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker for at least 15 minutes, then try again.
Cannot pair with device.	Bluetooth is off on device; speaker not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Power cycle the speaker to enter pairing mode. Move speaker closer to your device (within 33 feet).
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both the speaker and your connected device. Re-establish Bluetooth connection.
Sound distortion.	Volume too high; device too far; interference.	Reduce volume. Move speaker closer to your device. Avoid sources of strong electromagnetic interference.

Problem	Possible Cause	Solution
Microphone not working.	Speaker not selected as audio input on device.	Check your device's audio settings and ensure the speaker is selected for calls.

9. SPECIFICATIONS

Feature	Detail
Model Name	TS-1937
Bluetooth Version	5.3
Bluetooth Range	Up to 33 feet (10 meters)
Speaker Output Power	3 Watts
Audio Driver Size	72 mm
Battery Capacity	600 mAh
Playback Time	Up to 18 hours (at medium volume)
Charging Time	Approximately 1 hour
Water Resistance	IPX5
Dimensions (L x W x H)	2.87"D x 1.11"W x 1.68"H
Weight	4 ounces
Control Method	Touch buttons
Material	Aluminum, High Strength Plastic, Metal

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Tek Styz customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Tek Styz

ASIN: B0936FR6LK

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question