

Tek Styz TS-1951

PRO Bluetooth 5.3 IPX7 Speaker User Manual

Model: TS-1951

INTRODUCTION

Thank you for choosing the Tek Styz PRO Bluetooth 5.3 IPX7 Speaker. This portable and durable speaker is designed to provide high-quality audio for various environments, including indoor, outdoor, beach, and travel use. Featuring IPX7 waterproofing, extended battery life, and versatile connectivity options, it ensures your music accompanies you wherever you go.

Please read this manual carefully before using the speaker to ensure proper operation and to maximize its performance and lifespan.

PRODUCT OVERVIEW

The PRO Bluetooth 5.3 IPX7 Speaker is built for durability and ease of use. It features a robust design with intuitive controls and multiple playback options.

Components and Controls



The speaker features clearly marked buttons for power, volume control, and mode selection. It includes a MicroUSB charging port, a TF/SD card slot, and a USB port for various playback methods, including Bluetooth (compatible with Bluetooth 4.2 and newer versions like 5.3). The top dial button allows for quick volume adjustments and pause/play functions.

Key Features

- **IPX7 Waterproof Rating:** Designed to withstand immersion in water up to 1 meter for 30 minutes, making it ideal for

outdoor and wet environments.

- **Bluetooth 5.3 Connectivity:** Ensures stable and efficient wireless connection with your devices up to 33 feet.
- **Extended Playtime:** Up to 13-18 hours of continuous music playback on a single charge.
- **Built-in Microphone:** Allows for hands-free calling.



The integrated microphone enables clear hands-free communication. Please note that while the speaker is waterproof, the microphone's performance may be affected in extremely windy conditions and does not work underwater.

- **True Wireless Stereo (TWS) Function:** Pair two PRO speakers together for an immersive stereo sound experience.



Enhance your audio experience by connecting two PRO speakers wirelessly to create a wider soundstage and more powerful audio output.

- **Multi-functional Playback:** Supports Bluetooth, TF/SD card, USB, FM radio, and line-in audio input.

SETUP

1. Initial Charging

Before first use, fully charge the speaker. Connect the included MicroUSB charging cable to the speaker's MicroUSB port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes 2-3 hours.

Note: A USB wall adapter is not included. It is recommended to use your mobile phone's charger for optimal charging.

2. Power On/Off

- **Power On:** Press and hold the "ON/OFF" button for approximately 3 seconds until you hear an audible prompt.
- **Power Off:** Press and hold the "ON/OFF" button for approximately 3 seconds until you hear an audible prompt.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED light).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "PRO Speaker" (or similar name) from the list of found devices.
4. Once connected, the speaker will provide an audible confirmation, and the LED light will stop flashing.

4. True Wireless Stereo (TWS) Pairing (Optional)

To pair two PRO Bluetooth speakers for stereo sound:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the "Mode" button. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second speaker.
4. Once successfully paired, both speakers will provide an audible confirmation. You can then connect your device to the primary speaker via Bluetooth as described above.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Short press the "Pause" button (often integrated with the top dial or a dedicated play/pause button).
- **Volume Up:** Rotate the top dial clockwise or short press the "V+" button.
- **Volume Down:** Rotate the top dial counter-clockwise or short press the "V-" button.
- **Next Track:** Long press the "V+" button.
- **Previous Track:** Long press the "V-" button.

Hands-Free Calling

- **Answer Call:** Short press the "Pause" button when an incoming call rings.
- **End Call:** Short press the "Pause" button during a call.
- **Reject Call:** Long press the "Pause" button when an incoming call rings.
- **Redial Last Number:** Double-press the "Pause" button.

Mode Switching

Short press the "Mode" button to cycle through available playback modes: Bluetooth, TF/SD Card, USB, FM Radio, and Line-in (if applicable).

MAINTENANCE

Proper care and maintenance will ensure the longevity of your PRO Bluetooth Speaker.

- **Cleaning:** Due to its IPX7 rating, the speaker can be rinsed under tap water to clean off dirt or sand. Do not use harsh chemicals or abrasive cleaners. Ensure all ports are closed before rinsing.
- **Drying:** After exposure to water, ensure the speaker is thoroughly dry before charging or opening any port covers.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.



The IPX7 waterproof design allows for worry-free use near water. However, always ensure port covers are securely sealed before exposing the speaker to liquids.


TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed long enough.	Charge the speaker; Press and hold the power button for 3 seconds.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device Bluetooth off; Speaker too far from device; Interference.	Ensure speaker is in pairing mode (flashing LED); Turn on device Bluetooth; Move speaker closer to device; Turn off other Bluetooth devices.
No sound or low volume.	Volume too low on speaker or device; Speaker not connected; Incorrect mode.	Increase volume on both speaker and device; Re-pair Bluetooth; Switch to correct playback mode.
TWS pairing fails.	Speakers too far apart; One speaker already connected to another device.	Ensure speakers are within 1 meter of each other; Disconnect both speakers from other devices before TWS pairing.
Charging issue.	Faulty cable or adapter; Port damage.	Try a different MicroUSB cable and USB adapter; Inspect charging port for damage.

SPECIFICATIONS

Feature	Detail
Model Name	TS-1951
Bluetooth Version	5.3
Waterproof Rating	IPX7
Speaker Output Power	5 Watts (up to 7 Watts peak)
Battery Life	Up to 13-18 Hours (depending on usage)
Connectivity Range	Up to 33 feet / 10 meters

Feature	Detail
Dimensions (D x W x H)	1.6"D x 4.1"W x 3.7"H
Item Weight	7 Ounces
Power Source	Battery Powered (1 Lithium Ion battery included)
Material	Stainless Steel, Plastic
UPC	647010063580

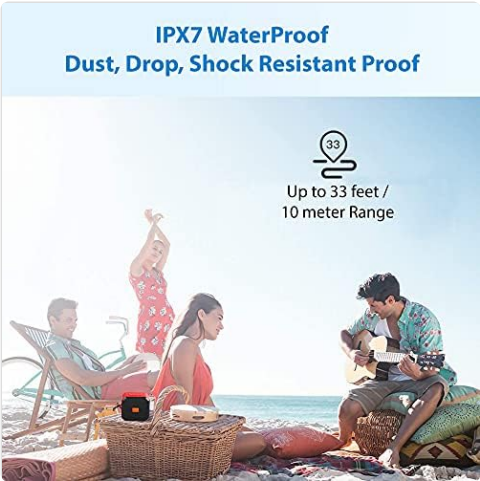

The speaker's robust construction provides protection against water, dust, drops, and shocks, ensuring durability in various environments.

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a standard return policy, typically allowing for returns or replacements within 30 days of purchase. Please refer to your purchase platform's specific return policy for detailed terms and conditions.

Customer Support

For any questions, technical assistance, or support regarding your PRO Bluetooth Speaker, please contact Tek Styz customer service through the platform where you purchased the product. Provide your model number (TS-1951) and a detailed description of your issue for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0936L6CD6>

More documents and user manuals: <https://manuals.plus/>