

[Manuals.plus](#) /

› [Tek Styz](#) /

› PRO Bluetooth Speaker User Manual

Tek Styz TS-1950

PRO Bluetooth Speaker User Manual

Model: TS-1950

INTRODUCTION

Thank you for purchasing the Tek Styz PRO Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

This speaker is designed for versatile use, offering robust sound quality and durability with its IPX7 waterproof rating. It features Bluetooth 5.3 connectivity, extended playtime, and a built-in microphone for hands-free calls.

PACKAGE CONTENTS

- PRO Bluetooth Speaker (Model: TS-1950)
- MicroUSB Charging Cable
- User Manual (this document)

Note: A USB wall adapter is not included. Please use a compatible USB charger from your mobile phone or other devices.

PRODUCT OVERVIEW



The Tek Styz PRO Bluetooth Speaker, showcasing its IPX7 waterproof design with water splashing over its blue and black exterior.



Overview of the speaker's multi-functional playback options and control buttons, including FM Radio, TF/SD Card, Bluetooth 4.2, Pause, Volume controls, Mode button, ON/OFF switch, MicroUSB Charging port, USB port, and TF/SD Card Slot.

The PRO Bluetooth Speaker features a compact and durable design. Key components include the control panel with various buttons for playback and volume, and ports for charging and external media. It is equipped with an IPX7 waterproof rating, making it suitable for various environments.

SETUP

Charging the Speaker

1. Locate the MicroUSB charging port on the speaker.

2. Connect the provided MicroUSB charging cable to the speaker's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., USB wall adapter, computer USB port).
4. The charging indicator light will illuminate during charging and turn off when fully charged. A full charge provides up to 18 hours of playtime.

Powering On/Off

- To power on, press and hold the **ON/OFF** button until you hear an audible prompt.
- To power off, press and hold the **ON/OFF** button again until the speaker shuts down.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED or audible prompt).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "**TS-1950**" or similar from the list of found devices.
4. Once paired, the speaker will indicate a successful connection, and the LED indicator will become solid.



The Dual/Stereo Function allows two speakers to be paired together for an enhanced 360° surround sound experience.

Dual Speaker Pairing (TWS Function)

For an immersive stereo sound experience, you can pair two PRO Bluetooth Speakers together:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the **MODE** button (or a dedicated TWS button if available) until you hear a pairing prompt.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to one of the speakers via Bluetooth as described in the "Bluetooth Pairing" section. Both

speakers will play audio in stereo.

Playback Modes

The speaker supports multiple playback modes:

- **Bluetooth Mode:** Connect wirelessly to your device.
- **TF/SD Card Mode:** Insert a TF (microSD) card with audio files into the designated slot. The speaker will automatically play content from the card.
- **USB Mode:** Insert a USB flash drive with audio files into the USB port. The speaker will automatically play content from the drive.
- **FM Radio Mode:** Press the **MODE** button to switch to FM Radio. Use the volume buttons to scan for stations.
- **Line-in Mode:** (If applicable, not explicitly mentioned but common for "multiple playback modes") Connect an audio device via a 3.5mm AUX cable (not included) to the speaker's AUX input.

Controls

Button/Port	Function
ON/OFF	Press and hold to power on/off.
MODE	Short press to switch between Bluetooth, TF/SD Card, USB, and FM Radio modes. Long press for TWS pairing (if applicable).
V+ / Next Track	Short press for Volume Up. Long press for Next Track.
V- / Previous Track	Short press for Volume Down. Long press for Previous Track.
Play/Pause / Call	Short press to Play/Pause audio. Short press to Answer/End calls. Long press to Reject calls.
MicroUSB Charging Port	For charging the speaker's internal battery.
TF/SD Card Slot	Insert TF (microSD) card for direct audio playback.
USB Port	Insert USB flash drive for direct audio playback.

Hands-Free Calling



The speaker features an embedded waterproof microphone for hands-free calls, offering voice isolation for windy conditions. Note: Does not work underwater.

When connected to your smartphone via Bluetooth, the speaker's built-in microphone allows for hands-free calling:

- **Answer Call:** Short press the **Play/Pause** button.
- **End Call:** Short press the **Play/Pause** button during a call.
- **Reject Call:** Long press the **Play/Pause** button when an incoming call rings.

MAINTENANCE

- Clean the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the charging port cover is securely closed when not charging, especially when exposed to water, to maintain IPX7 waterproofing.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Avoid exposing the speaker to extreme temperatures or direct sunlight for prolonged durations.

IPX7 WaterProof Dust, Drop, Shock Resistant Proof



33
Up to 33 feet /
10 meter Range

The speaker's IPX7 rating ensures it is waterproof, dust, drop, and shock resistant, making it ideal for outdoor activities.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn device Bluetooth off/on. Move device closer to speaker (within 33ft/10m).
No sound or low volume.	Volume too low on speaker or device; incorrect mode selected.	Increase volume on both speaker and device. Press MODE button to select correct playback mode.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge speaker. Move speaker away from other electronic devices.
TWS pairing fails.	Speakers already connected to other devices; too far apart.	Disconnect speakers from other devices. Ensure speakers are close to each other during TWS pairing.

SPECIFICATIONS

Feature	Detail
Model Name	TS-1950
Brand	Tek Styz
Speaker Type	Bluetooth Speaker
Connectivity Technology	Bluetooth 5.3, Wireless up to 33ft (10m)

Feature	Detail
Waterproof Rating	IPX7
Power Output	7 Watts
Battery Life	Up to 18 Hours
Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Port	MicroUSB
Product Dimensions (D x W x H)	1.6" x 4.1" x 3.7"
Item Weight	7 Ounces
Material	Stainless Steel, Plastic
Special Features	Digital IC Chip, Heavy Duty, Lightweight, Tangle Free Cord, Water Resistant, Built-in Microphone, TWS Pairing
Supported Playback Modes	Bluetooth, TF/SD Card, USB, FM Radio
UPC	647010001957

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Tek Styz website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact the seller, Essential Contraptions, through the Amazon platform.

© 2024 Tek Styz. All rights reserved.
Model: TS-1950

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question