

[Manuals.plus](#) /

> [SEBRUANC](#) /

> SEBRUANC Mini LED Party Lights Disco Ball (Model ZQ04001) User Manual

## SEBRUANC ZQ04001

# SEBRUANC Mini LED Party Lights Disco Ball Instruction Manual

Model: ZQ04001 | Brand: SEBRUANC

## 1. INTRODUCTION

---

Thank you for choosing the SEBRUANC Mini LED Party Lights Disco Ball. This device is designed to create a vibrant and dynamic atmosphere for various occasions, including home parties, birthdays, holidays, and more. Featuring RGB LED lights, music control, and a convenient remote, this disco ball is easy to set up and operate. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.

## 2. PACKAGE CONTENTS

---

Upon opening the package, please verify that all the following items are included:

- 1 x SEBRUANC Mini LED Party Lights Disco Ball
- 1 x Remote Control (battery included)
- 1 x Mounting Bracket
- 2 x Screws
- 1 x User Manual

# Zubehör



Image: Contents of the SEBRUANC Disco Ball package, showing the light, remote, mounting bracket, screws, and user manual.

## 3. PRODUCT OVERVIEW

The SEBRUANC Mini LED Party Lights Disco Ball is a compact and versatile lighting solution. It features multiple operating modes and is designed for energy efficiency and long-lasting performance.

- **LED Lifespan:** Over 20,000 hours.
- **Coverage Area:** Approximately 15 square meters.
- **Material:** Durable Acrylonitrile Butadiene Styrene (ABS) plastic shell.
- **Power Source:** Corded Electric (240 Volts).
- **Light Source:** 3 RGB LED diodes (3 Watts total, max 9 Watts).
- **Control:** Remote control for mode selection and speed adjustment.
- **Mounting:** Tabletop, ceiling, or wall mountable.

# Produktdetails



ABS-Schale



Einstellbare Schrauben



Effiziente Wärmeableitung



einfache Installation

Image: Close-up details of the disco ball, highlighting its ABS shell, adjustable screws for positioning, and efficient heat dissipation design.

## 4. SETUP INSTRUCTIONS

The disco ball is designed for easy plug-and-play setup. Follow these steps to get started:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Mounting (Optional):**
  - For tabletop use, simply place the disco ball on a stable surface.
  - For ceiling or wall mounting, use the provided mounting bracket and screws. Secure the bracket to your desired location, then attach the disco ball to the bracket using the adjustable screws on the sides of the unit. Ensure the mounting surface is sturdy enough to support the device.
3. **Power Connection:** Plug the power cable into a standard electrical outlet (240V).
4. **Remote Control:** The remote control comes with a pre-installed battery. If needed, replace with a C-type battery.



Image: The SEBRUANC Disco Ball shown with its remote control and power plug, illustrating its readiness for use.


## 5. OPERATING INSTRUCTIONS

---

The disco ball offers multiple operating modes controlled via the included remote.

### Remote Control Functions:

- **ON/OFF:** Power the unit on or off.
- **MODE Selection:**
  - **Music Control Mode:** The lights will change and flash in sync with the rhythm of the music. This mode is highly sensitive, activating with sounds as low as 7dB, so it does not need to be placed directly next to a speaker.
  - **Automatic Mode:** The lights will cycle through various patterns and colors automatically.
  - **Remote Control Mode:** Allows manual selection of colors and patterns.
- **Brightness Adjustment:** Use the '+' and '-' buttons to adjust the light's brightness.
- **Speed Adjustment:** Use the '+' and '-' buttons to adjust the movement speed of the light patterns.
- **Flash Mode:** Activates a strobe effect.
- **Color Selection (A1-A6, A7+):** Select specific color combinations or a mix of all colors.

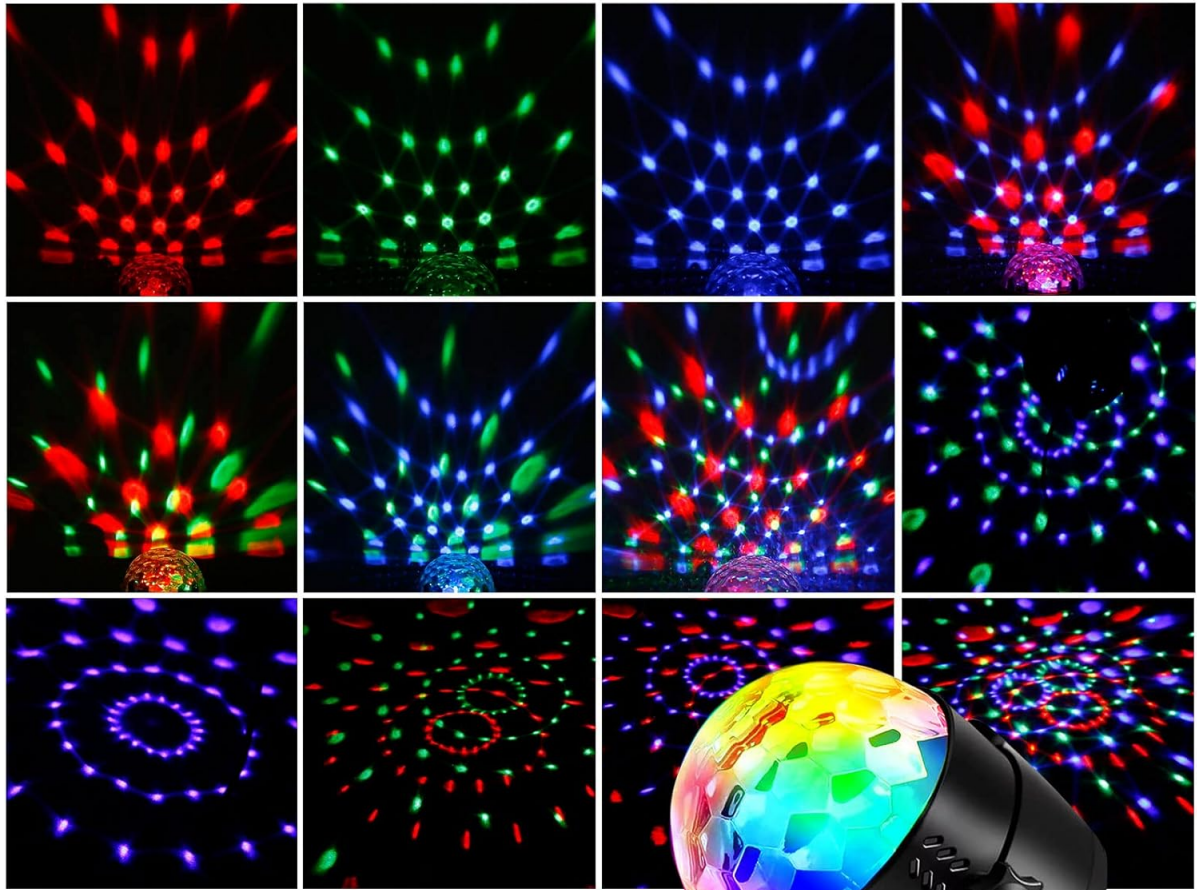

## Musikaktivierungsmodus



Image: A display of various colorful light patterns projected by the disco ball, along with the remote control, emphasizing the music activation mode.



Image: The disco ball projecting lights that synchronize with music, depicted alongside a smartphone playing music and a DJ mixer, illustrating its sound-activated feature.

# SEBRUANC Disco Ball



Image: A group of people enjoying a lively party atmosphere, illuminated by the colorful and dynamic lights projected by the SEBRUANC Disco Ball.

Your browser does not support the video tag.

Video: A demonstration of the SEBRUANC Disco Ball's light effects in various colors and patterns, showcasing its dynamic capabilities for parties and events.

## 6. MAINTENANCE

---

To ensure the longevity and optimal performance of your disco ball, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the disco ball in a cool, dry place away from direct sunlight and extreme temperatures.
- **Remote Battery:** Replace the remote control battery (C-type) as needed.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your SEBRUANC Mini LED Party Lights Disco Ball, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power, faulty outlet, or damaged cable.	Check if the power cable is securely plugged in. Test the outlet with another device. Inspect the power cable for any visible damage.
Remote control is not working.	Dead battery, remote out of range, or obstruction.	Replace the remote control battery. Ensure you are within range and pointing the remote directly at the disco ball's sensor. Remove any obstructions.

Problem	Possible Cause	Solution
Lights are not reacting to music.	Music control mode not activated, or music volume is too low.	Ensure the disco ball is set to Music Control Mode using the remote. Increase the music volume.
Light patterns are not rotating.	Motor stopped or in a static mode.	Check remote settings to ensure the motor is active and not paused. Adjust speed settings.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	ZQ04001
Dimensions (L x W x H)	11 x 10 x 11.5 cm (4.3 x 3.9 x 4.5 inches)
Weight	240 grams (0.53 lbs)
Brand	SEBRUANC
Material	Acrylonitrile Butadiene Styrene (ABS) Plastic
Light Source Type	LED (Diode Électroluminescente)
Number of Bulbs	3
Wattage	3 Watts (Max 9 Watts)
Voltage	240 Volts
Power Source	Corded Electric
Mounting Type	Tabletop, Ceiling, Wall Mount
Remote Control Battery	1 C-type battery (included)
Special Features	Energy Saving, Long Lifespan, Bright Colors, Music Control
Certifications	CE, FCC, RoHS, American UL, Australia SAA, UK BSI

## 9. SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the device to water or moisture.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from heat sources and open flames.
- Ensure proper ventilation to prevent overheating.
- This product is not a toy. Keep out of reach of small children.
- Avoid direct eye exposure to the LED light for prolonged periods.

## 10. WARRANTY AND SUPPORT

SEBRUANC is committed to providing high-quality products and customer satisfaction. If you encounter any

quality issues after receiving the product or during use, please contact the seller directly for assistance. We offer free replacement for quality-related problems, with the cost covered by the seller.

For further support or inquiries, please refer to the contact information provided with your purchase or on the official SEBRUANC website.