

[Manuals.plus](#) /

› [SIMPLE HOUSEWARE](#) /

› Simple Houseware 3 Bags Laundry Sorter with Extensible Clothes Hanging Rod User Manual

SIMPLE HOUSEWARE BO-12B-G

Simple Houseware 3 Bags Laundry Sorter with Extensible Clothes Hanging Rod

Model: BO-12B-G

Brand: SIMPLE HOUSEWARE

INTRODUCTION

This user manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Simple Houseware 3 Bags Laundry Sorter with Extensible Clothes Hanging Rod. Please read this manual thoroughly before use to ensure proper setup and safe operation of the product.



Image: The laundry sorter positioned in a functional laundry room, demonstrating its practical use next to a washing machine.

PRODUCT OVERVIEW

The Simple Houseware 3 Bags Laundry Sorter is designed to streamline your laundry routine by providing dedicated sorting compartments and an integrated clothes hanging rod. Its mobile design allows for easy relocation within your home.

Key Features:

- **Clothes Rack & Laundry Sorter:** Features an extensible hanging bar that extends from 30 inches to 48 inches.
- **3 Laundry Bags:** Includes three gray laundry bags, each with dimensions of 15.5 inches W x 8.5 inches D x 23 inches H and a capacity of 13 gallons.
- **4 Sturdy Casters:** Equipped with swiveling casters for smooth and effortless movement.
- **Modern Design:** Silver alloy steel frame complements various interior spaces.

Components:

The product consists of a durable alloy steel frame, three removable fabric laundry bags, an extensible hanging rod, and four swivel casters.



Image: A detailed view showing the top of the three laundry bags, highlighting the handles and how they attach to the frame for easy removal and sorting.



Image: A close-up of a caster wheel, illustrating its robust construction and attachment to the base frame, designed for smooth mobility.

SAFETY INFORMATION

- Ensure all parts are securely fastened during assembly and before use.
- Do not exceed the maximum weight recommendation of 25 pounds on the hanging rod.
- Distribute weight evenly across the hanging rod and within the laundry bags to prevent tipping.
- Keep hands and fingers clear of moving parts, especially when extending or retracting the hanging rod.
- Do not allow children to climb on or play with the unit.
- Use on a flat, stable surface. Engage wheel locks if available and when stationary.

SETUP AND ASSEMBLY

Assembly is required for this product. While specific tools are generally not needed for this type of unit, it is recommended to have a Phillips head screwdriver on hand for any potential screw fastenings. Please follow the detailed assembly instructions provided in the product packaging for step-by-step guidance.

General Assembly Steps:

1. Unpack all components and verify against the parts list in your product's instruction sheet.
2. Assemble the base frame, ensuring all connections are secure.
3. Attach the four swivel casters to the designated points on the base frame.
4. Install the vertical support poles for the hanging rod.
5. Attach the extensible hanging rod to the top of the vertical supports.
6. Insert the three laundry bags into their respective compartments on the frame.
7. Confirm all connections are tight and the unit is stable before use.

OPERATING INSTRUCTIONS

Using the Laundry Sorter:

- Utilize the three separate bags to sort laundry by color, fabric type, or washing requirements (e.g., lights, darks, delicates).
- To empty a bag, simply lift it by its handles from the frame. The bags are designed for easy removal and transport to your washing machine.

Using the Extensible Hanging Rod:

- The hanging rod can be extended from 30 inches to 48 inches to accommodate more garments or wider items.
- Gently pull the ends of the rod outwards to extend it to the desired length. Ensure it is securely locked in place if a locking mechanism is present.
- Hang clothes directly on the rod using hangers for air drying, temporary storage, or organizing freshly ironed garments.

Mobility:

- The four swiveling casters allow you to easily move the laundry sorter between rooms, to the laundry area, or within a closet.
- To keep the unit stationary, engage the locks on the casters (if equipped) by pressing down on the lever located on each wheel.



Image: The laundry sorter in full use, showcasing clothes neatly hung on the extensible rod and sorted laundry within the three compartments.



Image: The laundry sorter integrated into a closet space, demonstrating its utility for organizing clothes and laundry within a wardrobe system.

MAINTENANCE AND CARE

- **Frame Cleaning:** Wipe the alloy steel frame with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by drying thoroughly. Avoid abrasive cleaners.
- **Bag Cleaning:** The heavy-duty 600D polyester fabric bags are waterproof and easy to clean. They can be wiped down with a damp cloth and mild detergent. Allow them to air dry completely before reinserting into the frame. Do not machine wash or tumble dry the bags.
- **Caster Maintenance:** Periodically check the casters for lint, hair, or debris that may impede smooth rolling. Clean as necessary.
- **Regular Inspection:** Routinely check all screws and connections to ensure they remain tight and secure. Tighten any loose fittings to maintain stability.



Image: A visual representation of the laundry bag material's waterproof and easy-to-clean properties, showing water beading on the surface and a hand wiping it away.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit feels wobbly or unstable.	Loose connections or uneven weight distribution.	Ensure all screws and connections are tightened. Redistribute items on the hanging rod and in bags evenly.
Casters are not rolling smoothly.	Debris caught in wheels or caster locks engaged.	Check wheels for lint, hair, or other obstructions and remove them. Ensure caster locks are disengaged.
Laundry bags appear droopy or lose shape.	Overfilled bags or lack of internal support.	Avoid overfilling bags. Ensure the bag handles are properly seated on the frame supports.
Hanging rod does not extend or retract smoothly.	Obstruction or misalignment.	Check for any foreign objects in the extension mechanism. Ensure the rod is aligned properly within its guides.

SPECIFICATIONS

Attribute	Detail
Model Number	BO-12B-G
Product Dimensions	30.8" L x 18.6" W x 68" H
Extensible Hanging Rod Length	30" (retracted) to 48" (extended)
Laundry Bag Dimensions (each)	15.5" W x 8.5" D x 23" H
Laundry Bag Capacity (each)	13 Gallons
Material	Alloy Steel (Frame), Heavy Duty 600D Polyester Fabric (Bags)
Color	Silver (Frame), Gray (Bags)
Load Capacity (Hanging Rod)	25 Pounds
Item Weight	10.89 pounds
Installation Type	Free Standing
Assembly Required	Yes

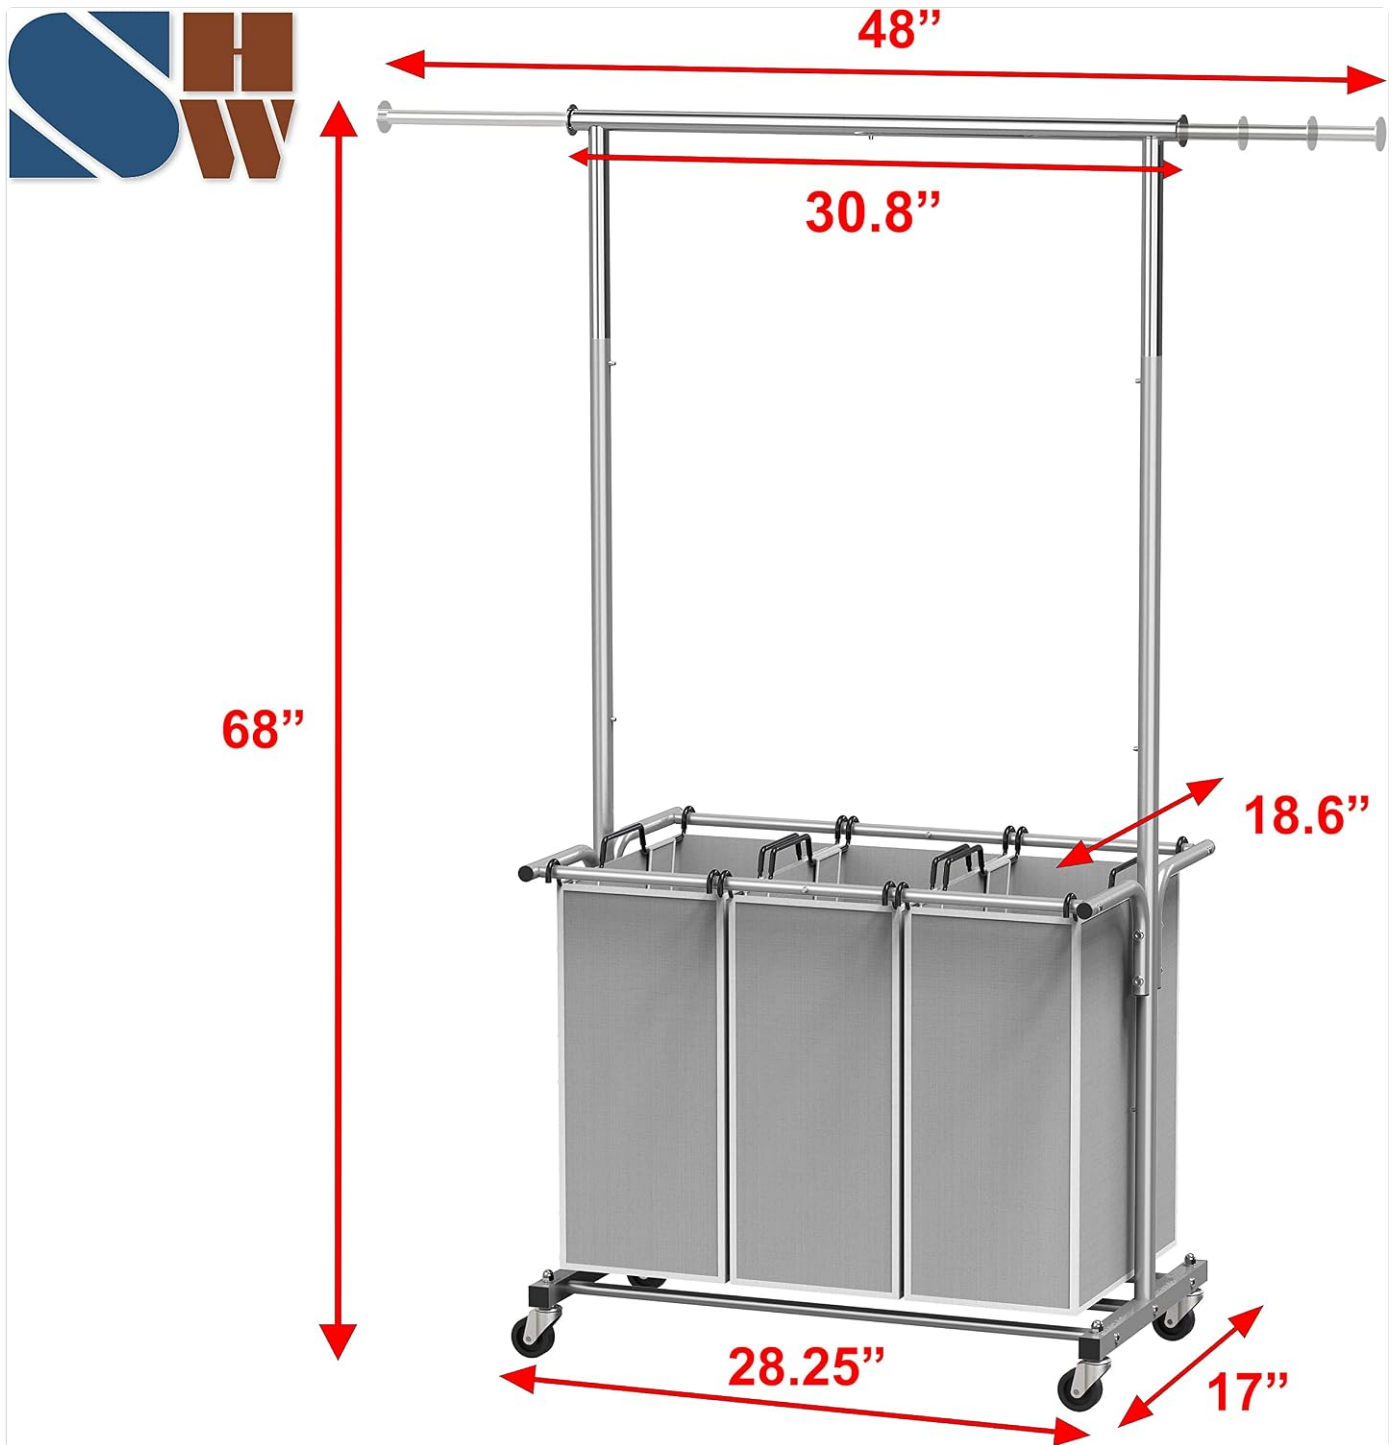


Image: A technical diagram illustrating the overall dimensions of the laundry sorter, including height, width, and depth, as well as the extensible rod's range.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official Simple Houseware website. You may also contact their customer service directly for assistance.

Contact Information:

Please refer to the manufacturer's website or product packaging for the most current contact details.

Note: No specific warranty details or direct support contact information were provided in the product data.

OFFICIAL PRODUCT VIDEOS

No official product videos with verified seller creator type and accessible URLs were found in the provided product data to

embed in this manual.

© 2023 SIMPLE HOUSEWARE. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question