

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 2-Seater Hanging Porch Swing Outdoor Patio Swing Chair Seat Instruction Manual

Outsunny 84A-154WT

Outsunny 2-Seater Hanging Porch Swing Instruction Manual

Model: 84A-154WT

Brand: Outsunny



INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Outsunny 2-Seater Hanging Porch Swing. Please read this manual thoroughly before assembly and use to ensure safe and proper operation. Keep this manual for future reference.



Image: The Outsunny 2-Seater Hanging Porch Swing in white, suspended by chains.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury.

- Ensure all parts are present and in good condition before assembly. Do not use if any parts are damaged.
- Assemble the swing on a flat, stable surface.
- Ensure the hanging structure (e.g., porch beam, swing stand) is strong enough to support the swing and its occupants. The swing has a maximum weight capacity of 440 lbs (200 kg).
- Regularly inspect the chains, connections, and wooden components for wear, corrosion, or damage. Replace worn or damaged parts immediately.
- Do not stand on the swing or use it for purposes other than seating.
- Keep children and pets away from the assembly area.

- This product is designed for outdoor use. However, prolonged exposure to extreme weather conditions may reduce its lifespan.

PARTS LIST

Before beginning assembly, ensure all the following components are included in your package:

1. Swing Seat Frame (Pre-assembled sections)
2. Backrest Slats
3. Armrests (2)
4. Galvanized Steel Hanging Chains (2 sets)
5. Hardware Pack (Bolts, Nuts, Washers, Wrenches)
6. Instruction Manual

SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that two adults assemble the swing.

- 1. Step 1: Prepare the Components**

Unpack all components and lay them out on a clean, soft surface to prevent scratching. Identify each part according to the parts list.



Image: The assembled porch swing positioned on a patio, demonstrating its intended use.

2. **Step 2: Assemble the Seat and Backrest**

Attach the backrest slats to the seat frame using the provided bolts and nuts. Ensure all connections are secure but do not fully tighten until all components are aligned.



Image: A close-up view of the slatted seat and backrest design, highlighting the smooth finish.

3. **Step 3: Attach the Armrests**

Secure the armrests to the assembled seat and backrest using the appropriate hardware. Ensure the armrests are oriented correctly.

MORE DETAILS



SMOOTH SURFACE WITH OUTDOOR PAINT

provides effective protection

SEAT WITH SLAT DESIGN

prevents rainwater
from accumulating



WIDE ARMRESTS

bring a more
comfortable experience

Image: A composite image showing details of the swing's smooth painted surface, the slatted seat design for drainage, and the wide armrests for comfort.

4. Step 4: Attach Hanging Chains

Connect the galvanized steel hanging chains to the designated attachment points on the swing's armrests and base. Ensure the chains are securely fastened with the provided hardware.



Image: A close-up view of the chain attachment point on the swing's armrest, showing the secure bolt connection.


5. Step 5: Final Tightening

Once all components are loosely assembled, carefully place the swing upright. Systematically tighten all bolts and nuts using the provided wrenches. Do not overtighten.

6. Step 6: Hanging the Swing

Hang the swing from a sturdy, load-bearing structure using appropriate hanging hardware (not included). Ensure the hanging points are level and capable of supporting the swing's weight capacity. The chains are adjustable to customize the swing's height and angle.

SAFE HANGING CHAINS

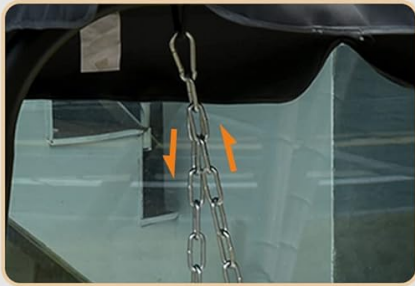

The height of the chair can be changed by changing the position of the hanging chains

Image: The swing with its hanging chains, illustrating how the height can be adjusted by changing the position of the chains.

OPERATING INSTRUCTIONS

The Outsunny 2-Seater Hanging Porch Swing is designed for comfortable outdoor seating.

- **Seating Capacity:** The swing is designed to comfortably seat up to two individuals, with a maximum weight capacity of 440 lbs (200 kg). Do not exceed this weight limit.
- **Gentle Swinging:** Use the swing with a gentle, controlled motion. Avoid excessive force or aggressive swinging, which could compromise stability or cause damage.
- **Placement:** Ideal for porches, patios, gardens, and backyards. Ensure adequate clearance around the swing for safe movement.

VERSATILE SEATING

Enjoy a stylish addition to any outdoor space with comfort.



Patio



Porch



Backyard

Image: A collage showing the swing's suitability for various outdoor settings such as a patio, a covered porch, and a backyard.

MAINTENANCE

Regular maintenance will extend the life and appearance of your porch swing.

- **Cleaning:** Clean the swing regularly with a soft cloth and mild soap and water. Rinse thoroughly and dry completely. Avoid harsh chemicals or abrasive cleaners.
- **Wood Care:** The fir wood is treated with a water-fighting varnish. To maintain its finish and protect against weather, consider reapplying a suitable outdoor wood sealant annually or as needed, especially if the swing is exposed to direct sunlight and rain.
- **Hardware Inspection:** Periodically check all bolts, nuts, and chain connections to ensure they remain tight and secure. Tighten any loose hardware.
- **Storage:** During prolonged periods of non-use or severe weather (e.g., winter, heavy storms), it is recommended to store the swing indoors or cover it with a protective outdoor furniture cover to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose hardware; uneven hanging points.	Check and tighten all bolts and nuts. Ensure the hanging structure is level and secure.
Squeaking noise during use.	Friction at chain connections or wood joints.	Apply a small amount of silicone lubricant to chain links and pivot points.
Wood appears faded or worn.	Exposure to sun and weather; varnish wearing off.	Clean the wood surface and reapply an outdoor wood sealant or varnish.

SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	84A-154WT
Color	White
Overall Dimensions (L x W x H)	46.75" x 25.5" x 24" (Swing body only, excluding chains)
Seat Depth	20 inches
Frame Material	Fir Wood
Finish Type	Lacquered
Weight Capacity	440 lbs (200 kg)
Item Weight	26.2 pounds
Assembly Required	Yes
Manufacturer	Aosom LLC
UPC	196393122440



Image: A diagram illustrating the key dimensions of the Outsunny 2-Seater Hanging Porch Swing.

WARRANTY AND SUPPORT

Outsunny products are manufactured by Aosom LLC. For warranty information, product support, or to order replacement parts, please contact Aosom LLC customer service directly.

- **Manufacturer:** Aosom LLC
- **Website:** www.aosom.com (Please check their website for contact details and specific warranty terms.)
- **Customer Service:** Refer to the contact information provided on the Aosom LLC website or the original product packaging for the most up-to-date support channels.

Please have your model number (84A-154WT) and purchase date ready when contacting support.



