

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY Replacement Remote Control for Sanyo Roku TV Models

**VINABTY 73aba75c-b03f-4f68-ae3d-2884b4433bc6**

# VINABTY Replacement Remote Control for Sanyo Roku TV

Model: 73aba75c-b03f-4f68-ae3d-2884b4433bc6

## 1. INTRODUCTION

This manual provides instructions for the VINABTY replacement remote control designed for various Sanyo Roku TV models. This remote control requires no programming; simply insert batteries to begin operation.

## 2. COMPATIBLE TV MODELS

This remote control is compatible with the following Sanyo Roku TV models:

- FW65R70F
- FW32R19F
- FW55R79FC
- FW40R48FC
- FW32R18FC
- FW40R49FC
- FW65R79FC
- FW55R70F
- FW65C78F
- FWBP505F
- FW32R19FC
- FW55C78F

## 3. SETUP

### 3.1 Battery Installation

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.




This image shows the back of the remote control with the battery cover slid open. The compartment is designed to hold two AAA batteries, indicating the correct orientation for insertion with positive and negative terminals.

Once batteries are installed, the remote is ready for use with your compatible Sanyo Roku TV.

#### 4. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Sanyo Roku TV.

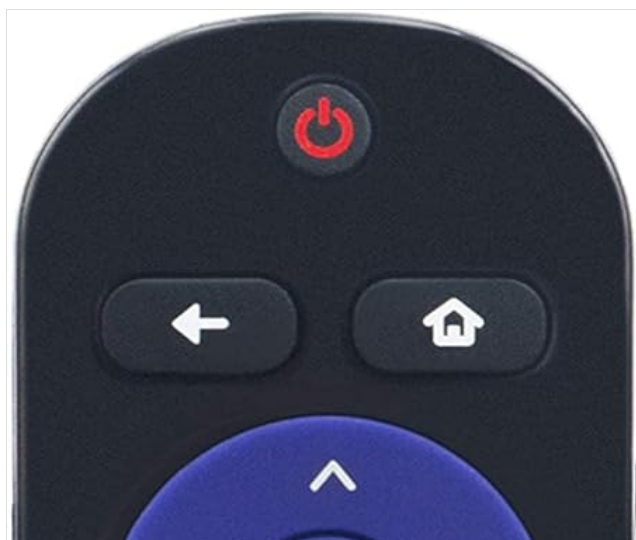



This image displays the front of the VINABTY replacement remote control. It features a black finish with clearly labeled buttons. Key buttons include the red power button at the top, a purple directional pad with an 'OK' button, playback controls (rewind, play/pause, fast forward), and dedicated quick-access buttons for streaming services like Netflix, Hulu, Vudu, and Sling.

#### 4.1 Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Directional Pad (Up, Down, Left, Right)**: Navigates menus and selects options.
- **OK Button**: Confirms selections.

- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (🏠): Returns to the Roku home screen.
- **Volume Up/Down**: Adjusts the TV volume.
- **Mute Button**: Mutes or unmutes the TV audio.


## 4.2 Playback Controls

- **Rewind** (⏮): Rewinds media playback.
- **Play/Pause** (⏸): Plays or pauses media playback.
- **Fast Forward** (⏭): Fast forwards media playback.

## 4.3 Dedicated App Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **Netflix**
- **Hulu**
- **Vudu**
- **Sling**

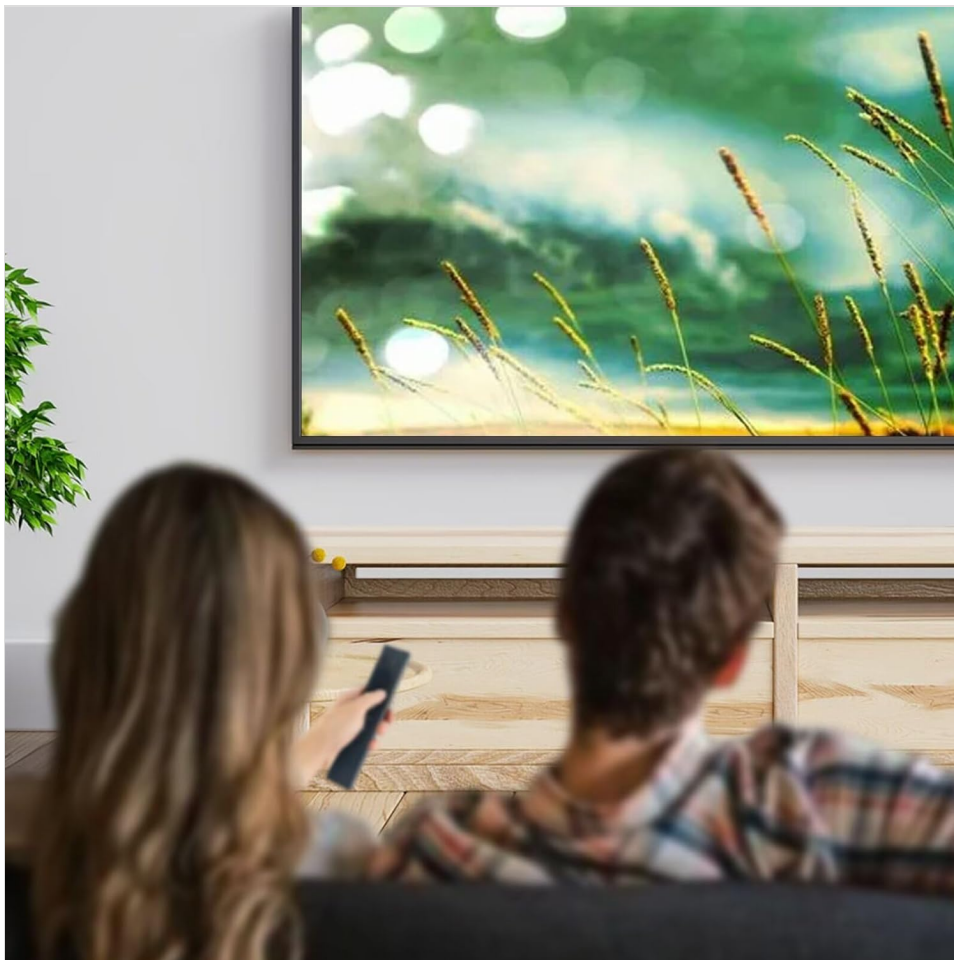

This image illustrates the remote control in use, with two individuals watching television. It demonstrates the typical usage scenario of the remote for controlling a Sanyo Roku TV.

## 5. MAINTENANCE

### 5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.

## 5.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

## 6. TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Confirm the remote is pointed directly at the TV.
- **Specific buttons not working:**
  - Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris.
  - If the issue persists after replacing batteries and cleaning, the remote may require replacement.

## 7. SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	73aba75c-b03f-4f68-ae3d-2884b4433bc6
Product Dimensions	14.73 x 4.19 x 1.78 cm
Item Weight	10 g
Color	Black
Special Feature	Ergonomic
Compatible Devices	Television (Sanyo Roku TV)
Connectivity Technology	Infrared
Button Quantity	30
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	2 x AAA (not included)

## 8. WARRANTY INFORMATION

This VINABTY remote control comes with a 1-year warranty from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

## 9. SUPPORT

For further assistance or if you encounter issues not covered in this manual, please contact the retailer or VINABTY customer support. Refer to your product packaging or the retailer's website for specific contact details.