

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [De'Longhi](#) /

› [De'Longhi NESCAFÉ Dolce Gusto Mini Me EDG155.BG Coffee Machine User Manual](#)

## De'Longhi EDG155.BG

# De'Longhi NESCAFÉ Dolce Gusto Mini Me EDG155.BG Coffee Machine User Manual

Model: EDG155.BG

## INTRODUCTION

---

Welcome to the De'Longhi NESCAFÉ Dolce Gusto Mini Me EDG155.BG coffee machine user manual. This compact and automatic capsule coffee machine is designed to prepare a variety of hot and cold beverages with ease. Featuring a 15-bar pump pressure system and an intuitive LED interface, it ensures perfect results every time. Please read this manual thoroughly before operating your machine to ensure safe and efficient use.

## IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Keep the appliance out of reach of children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the drip tray is correctly positioned during operation.
- Never touch the hot surfaces of the machine during or immediately after operation.

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your De'Longhi Mini Me coffee machine.



**Figure 1:** Side view of the De'Longhi Mini Me coffee machine, showcasing its compact design and a prepared latte macchiato in a glass. The water tank is visible on the right side.

- **Water Tank:** Removable 0.8-liter capacity for water.
- **Capsule Holder:** Where the NESCAFÉ Dolce Gusto capsule is inserted.
- **Control Lever:** Used to select hot or cold water and start/stop flow.
- **LED Interface:** For selecting beverage volume.
- **Drip Tray:** Adjustable to 3 positions for different cup sizes.
- **Power Button:** On/Off switch.



**Figure 2:** Top view of the De'Longhi Mini Me coffee machine with the capsule tray open, ready for capsule insertion. This view highlights the intuitive design for easy loading.

## SETUP

---

### 1. Unpacking and Initial Cleaning

1. Remove all packaging materials and stickers from the machine.
2. Clean the water tank, capsule holder, and drip tray with warm water and a mild detergent. Rinse thoroughly.
3. Wipe the exterior of the machine with a damp cloth.

### 2. First Use (Rinsing)

1. Fill the water tank with fresh drinking water and place it back on the machine.
2. Plug the machine into a grounded power outlet. The power button will flash red.

3. Press the power button. It will flash red and then turn solid green when ready.
4. Place an empty cup under the dispenser.
5. Without inserting a capsule, move the control lever to the hot water position (red). Let water flow until the tank is almost empty.
6. Repeat the process with cold water (blue lever position).
7. Your machine is now rinsed and ready for use.

## OPERATING INSTRUCTIONS

---

### Making a Beverage

1. Ensure the water tank is filled with fresh water.
2. Turn on the machine by pressing the power button. Wait for the light to turn solid green.
3. Adjust the drip tray height according to your cup size.
4. Open the locking handle and pull out the capsule holder.
5. Insert a NESCAFÉ Dolce Gusto capsule into the holder. Close the capsule holder and lock the handle.
6. Refer to the recommended water level indicated on the capsule packaging. Use the LED interface to select the corresponding water volume.
7. Place your cup under the dispenser.
8. Move the control lever to the hot (red) or cold (blue) position, depending on your beverage. The machine will start dispensing.
9. The machine will automatically stop when the selected volume is reached. You can manually stop the flow at any time by returning the lever to the center position.
10. Once dispensing is complete, wait a few seconds, then open the locking handle and remove the used capsule. Dispose of the capsule responsibly.

**Tip:** For optimal taste, always use fresh, cold water. The machine will automatically shut off after 5 minutes of inactivity to save energy.

## MAINTENANCE

---

### Daily Cleaning

- After each use, remove and empty the drip tray. Clean it with warm, soapy water and rinse.
- Clean the capsule holder after each use to remove any coffee residue.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.
- Empty and rinse the water tank daily.

### Descaling

Descaling is essential to maintain your machine's performance and extend its lifespan. The frequency depends on water hardness and usage. It is recommended to descale every 3-4 months or when you notice reduced flow or temperature.

1. Use a descaling solution specifically designed for coffee machines. Follow the instructions on the descaling product.
2. Empty the water tank and fill it with the descaling solution mixed with water as per the product instructions.
3. Place a large container (at least 1 liter) under the dispenser.
4. Start the descaling process by running the entire tank of solution through the machine (without a capsule), alternating between hot and cold water if instructed by the descaler.
5. After the solution has run through, rinse the water tank thoroughly and fill it with fresh water.
6. Run two full tanks of fresh water through the machine to rinse out any remaining descaling solution.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet faulty.	Check power cord connection; try a different outlet.
No water flow.	Water tank empty; machine needs descaling; air bubble in pump.	Fill water tank; perform descaling; run water without capsule to clear air.
Coffee is not hot enough.	Machine needs descaling; pre-heating not complete.	Perform descaling; wait for the power button light to turn solid green before brewing.
Water leaks from machine.	Drip tray not correctly positioned; water tank not properly seated.	Ensure drip tray is secure; re-seat water tank firmly.

## SPECIFICATIONS

---

**Brand:** De'Longhi

**Model Number:** EDG155.BG

**Color:** Grey/Black

**Product Dimensions (L x W x H):** 24 x 16 x 31 cm

**Weight:** 4.08 Kilograms

**Power:** 1600 Watts

**Voltage:** 230 Volts

**Material:** Aluminum

**Water Tank Capacity:** 0.8 Liters

**Pump Pressure:** 15 Bar

**Features:** Timer, Removable Water Tank, Thermal Block Heating System, Automatic Shut-off (5 minutes)

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided with your purchase or visit the official De'Longhi website. If you encounter any issues not covered in this manual or require further assistance, please contact De'Longhi customer support.

You can often find support contact details on the manufacturer's website or on your purchase receipt.