

[Manuals.plus](#) /

> [Karinear](#) /

> Karinear 30 Inch Electric Cooktop 30 Inch 5 Burners Electric Stove Ceramic Cooktop, Drop-in Electric Radiant Cooktop with Front and Back Metal Frame, Lock, Timer, 8400W, 220-240V, Hard Wire, No Plug 30 inch/5 burner/220V/sensor touch User Manual

Karinear KNC-D58404

Karinear 30 Inch Electric Cooktop User Manual

Model: KNC-D58404 | Brand: Karinear

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Karinear 30 Inch Electric Cooktop. Please read this manual thoroughly before using the appliance and retain it for future reference.

SAFETY INFORMATION

Always prioritize safety when operating electrical appliances. This cooktop is designed for household use. Improper installation, maintenance, or use can result in fire, electric shock, or injury.


- Ensure the appliance is connected to a 220-240V hard-wired electrical supply by a qualified electrician. No plug is included.
- Do not clean the cooktop surface when it is hot, as this can cause cracking.
- Utilize the child lock feature to prevent accidental operation, especially when children are present.
- Be aware of the residual heat indicator ('H' display) after use; the surface remains hot.
- Do not place flammable materials on or near the cooktop.
- Use only cookware with flat bottoms suitable for ceramic cooktops.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your cooktop. It is recommended that installation be performed by a qualified professional.

Dimensions and Cut-out Size

The Karinear 30-inch electric cooktop is designed for drop-in installation. Refer to the diagram below for precise measurements.

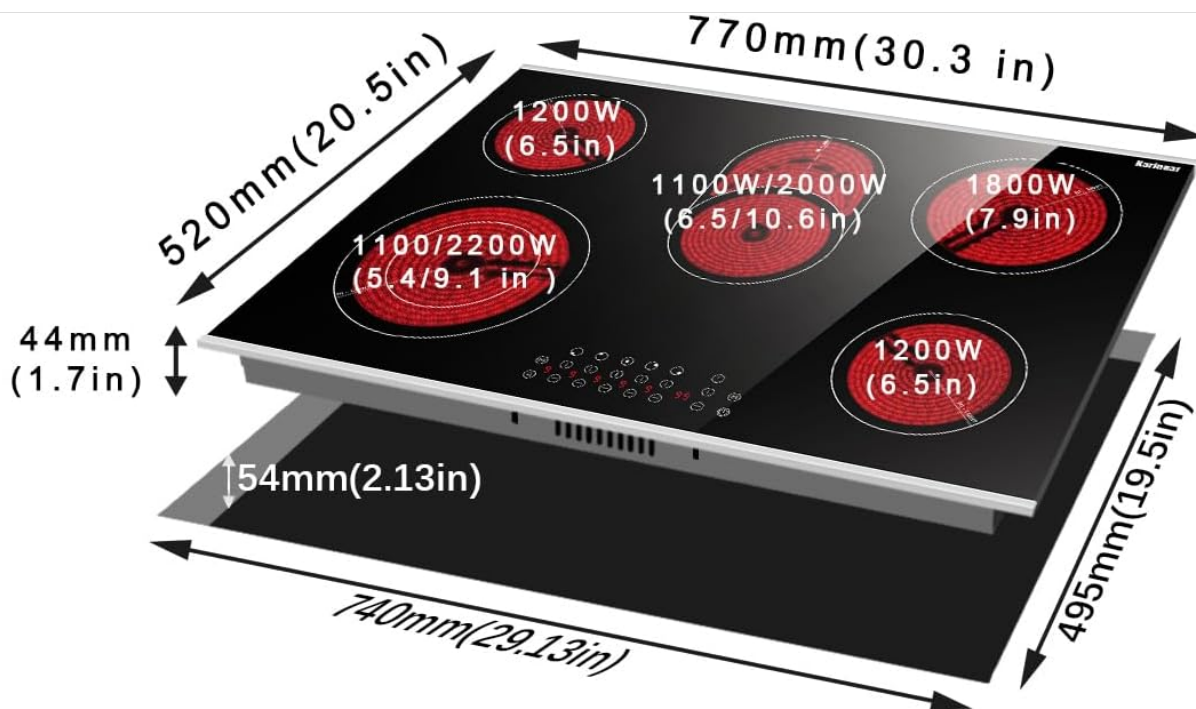

Wiring Diagram

Four-head electric pottery furnace
For 4-wire cable from home power supply

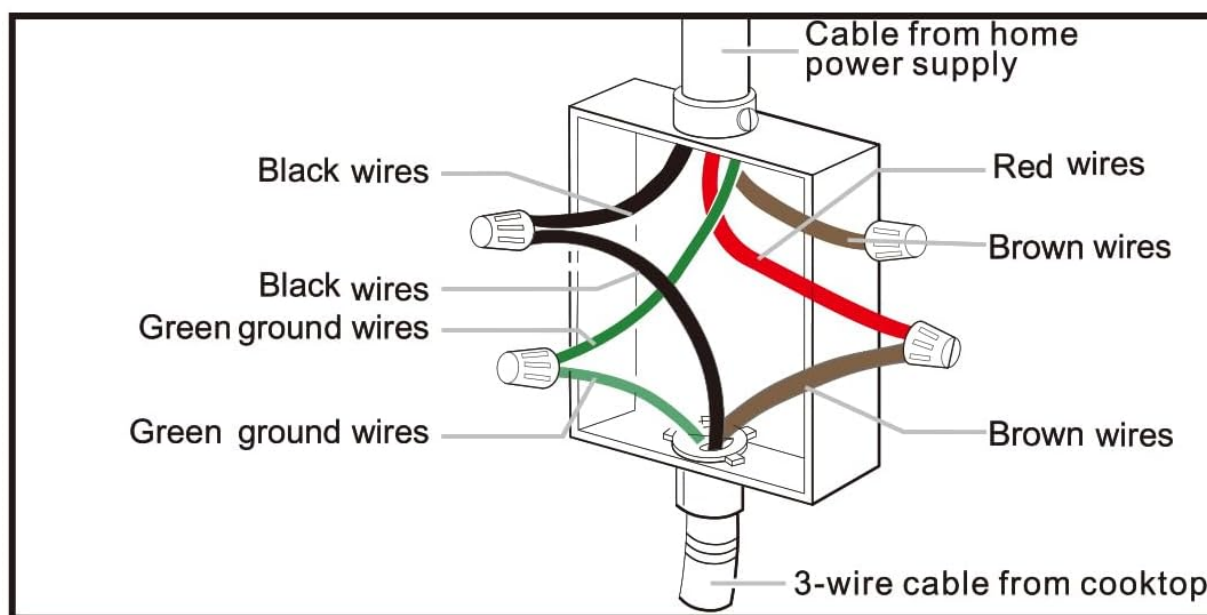


Figure 1: Product Dimensions and Cut-out Size. Stovetop size: 30.3in (770mm) x 20.5in (520mm). Cut-out size: 29.2in (740mm) x 19.7in (500mm) x 1.7in (44mm).

Electrical Connection

This appliance requires a 220-240V hard-wired connection. It does not come with a plug. A professional electrician must perform the wiring according to local electrical codes.

Vitro Ceramic Glass, Easy to Clean

With Front and Back
Two Metal Frame Protection



Figure 2: Wiring Diagram for 4-wire cable from home power supply. Ensure proper connection of L1, L2, and ground wires.

For 5-wire cable from home power supply, refer to the official product video for wiring instructions.

Your browser does not support the video tag.

Video 1: Karinear 30 inch electric ceramic cooktop, built in 220-240v. This video demonstrates the physical appearance, features, and wiring connection for the cooktop, including a diagram for 5-wire cable setup.

OPERATING INSTRUCTIONS

Your Karinear electric cooktop features intuitive touch controls for easy operation.

Control Panel Overview

Multifunctional Electric Cooktop



Figure 3: Multifunctional Electric Cooktop Control Panel. Icons indicate features such as Pause Function, Auto Switch Off, Child Lock, Residual Heat Indicator, Touch Control, Dual Rings Burner, Timer, Overheating Protection, compatibility with All Cookwares, and 9 Power Levels.

Power Levels

The cooktop offers 9 power levels, ranging from low to high, suitable for various cooking needs. Use the '+' and '-' buttons corresponding to each burner to adjust the heat.



Figure 4: Adjusting Heating Range. First press '+' or '-' on the corresponding burner, then press the specific burner button to confirm.

Timer Function

Set a cooking timer from 1 to 99 minutes. The cooktop will automatically shut down when the countdown is complete, providing convenience and safety.

Timer Range From **1-99** Minutes

Compatible with All Kinds of Cookwares



Figure 5: Timer Function. The timer can be set from 1 to 99 minutes for automatic shutdown.

Child Lock

Activate the child lock to disable the control panel and prevent accidental changes to settings or activation by children.

Child Safety Lock

Protect your children, enjoy your cooking time with your family



Figure 6: Child Safety Lock. Protects children by locking the control panel.



Figure 7: How to Turn On and Off the Child Safety Lock. Touch the lock button to activate and display 'Lo'. Press and hold the lock button for 5 seconds to unlock.

Pause Function

The pause function allows you to temporarily halt cooking without losing your current settings. Simply press the pause button to activate and deactivate.

Dual Rings Burner

Two burners feature expandable heating elements (dual rings) to accommodate larger cookware. To activate or deactivate the outer ring, first select the burner, then press the dual ring button.

Your browser does not support the video tag.

Video 2: Dual Rings Burner Operation. This video demonstrates how to activate and deactivate the outer ring of the dual burner for larger pots and pans.


MAINTENANCE AND CARE

Regular cleaning and proper care will ensure the longevity and optimal performance of your cooktop.

Cleaning the Ceramic Glass Surface

The durable, scratch-resistant vitro ceramic glass surface is easy to clean. Always allow the cooktop to cool down completely before cleaning.

- Use a soft cloth and a mild detergent or specialized ceramic cooktop cleaner.
- For stubborn stains or burnt-on food, use the provided scraper.
- Wipe dry with a clean cloth to prevent water spots.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.

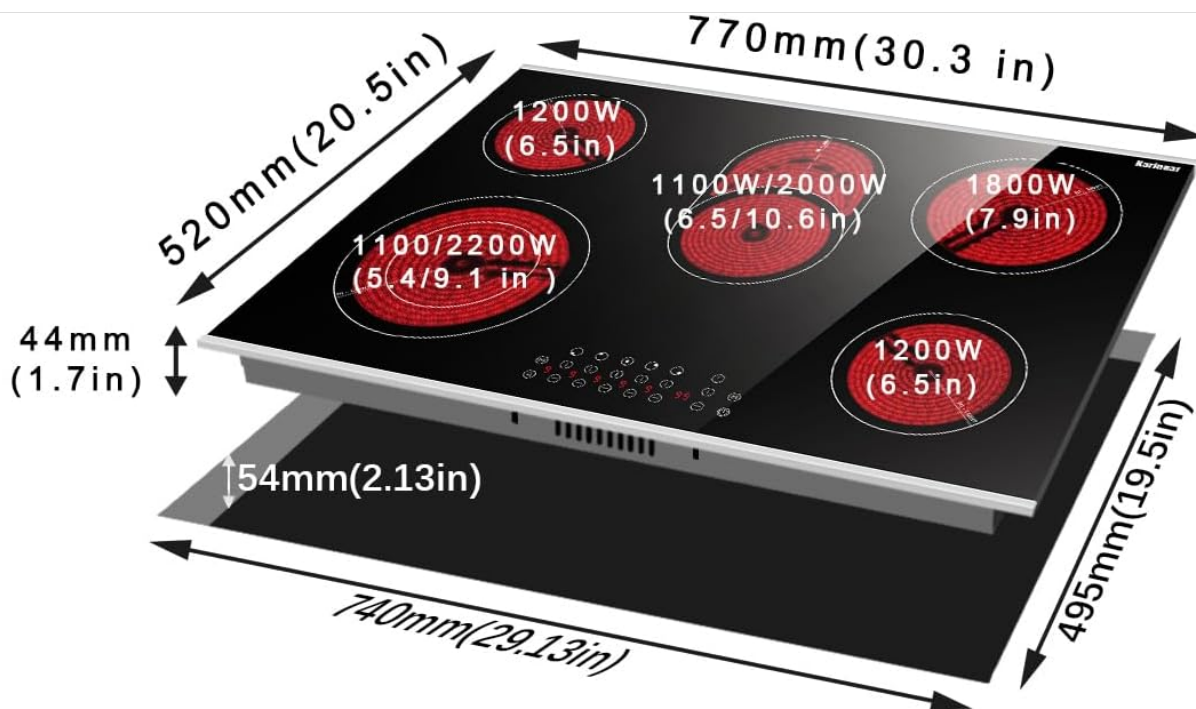

Wiring Diagram

Four-head electric pottery furnace For 4-wire cable from home power supply

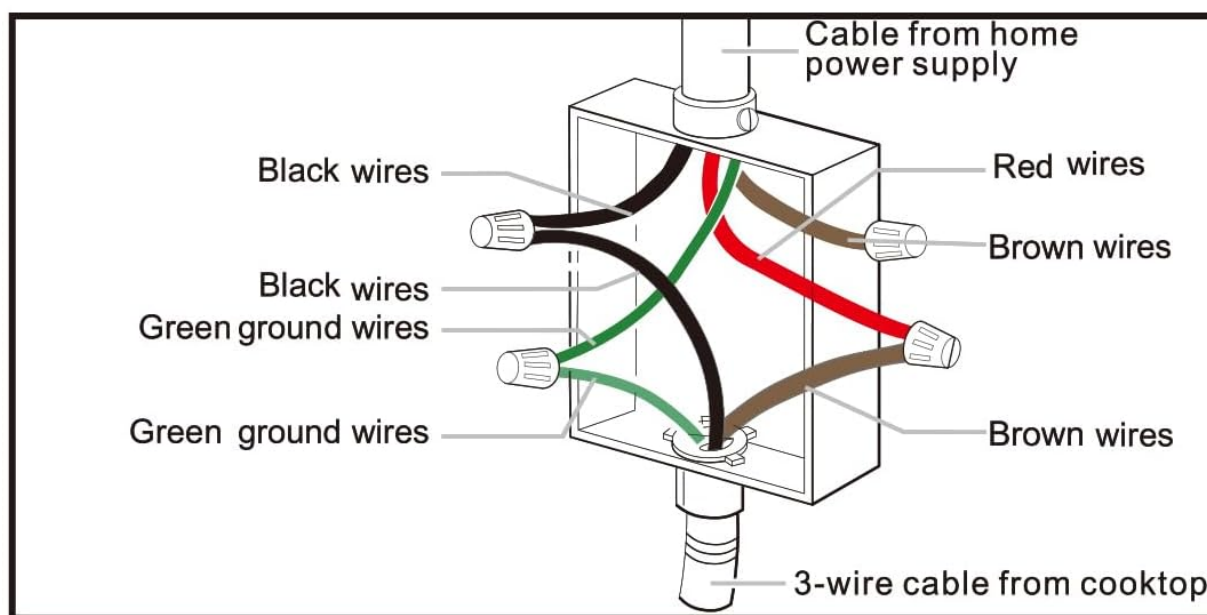


Figure 8: Cleaning the Vitro Ceramic Glass. The surface is easy to clean and comes with a scraper for tough spots.

Your browser does not support the video tag.

Video 3: Cleaning Demonstration. This video shows the ease of cleaning the black smooth ceramic glass surface using a scraper and a cloth.

TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common troubleshooting tips. For more complex problems, contact customer support.

Problem	Possible Cause	Solution
Cooktop not turning on.	No power supply, child lock activated.	Check circuit breaker. Deactivate child lock by pressing and holding the lock button for 3 seconds.
Burner not heating.	Incorrect power level selected, incompatible cookware.	Increase power level. Ensure cookware has a flat bottom and is suitable for ceramic cooktops.
"H" displayed after use.	Residual heat indicator.	This is normal. The surface is still hot. Do not touch until "H" disappears.
Cooktop unexpectedly shuts off.	Overheating protection, timer activated.	Allow cooktop to cool. Check if timer was set.

SPECIFICATIONS

- Brand:** Karinear
- Model:** KNC-D58404
- Installation Type:** Drop-In
- Burner Type:** Ceramic
- Heating Elements:** 5
- Power Output:** 8400W (1200W+1200W+1800W+1100W/2000W(Dual)+1200W/2200W(Dual))
- Voltage:** 220-240V
- Product Dimensions:** 19.5 x 29.13 x 2.13 inches (49.5 x 74 x 5.4 cm)
- Item Weight:** 22.3 pounds (10.1 kg)
- Material Type:** Vitroceramic Glass
- Special Features:** Child Lock, 99-minute Timer, Pause Function, Residual Heat Indicator, Overheating Protection, Auto Shutdown.
- Included Components:** Manual, Scraper

WARRANTY INFORMATION

Karinear products come with a 5-year warranty. If you encounter any quality problems with the product, please contact customer support for a full refund or replacement.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please visit the official Karinear store on Amazon or contact their customer service directly.

[Visit the Karinear Store](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B093C3CGNY>

More documents and user manuals: **<https://manuals.plus/>**