

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AMENKER](#) /

› [AMENKER Handheld & Portable Mini Fan User Manual](#)

AMENKER F30

AMENKER Handheld & Portable Mini Fan User Manual

Model: F30

INTRODUCTION

Thank you for choosing the AMENKER Handheld & Portable Mini Fan. This versatile device combines a powerful personal fan with a 3000mAh power bank and a cell phone stand, offering convenience and comfort wherever you go. Its foldable design allows for use as a handheld fan, neck fan, or desktop fan, providing strong airflow and quiet operation for up to 12 hours.

PRODUCT FEATURES

- **Multi-functional Design:** Can be used as a handheld fan, neck fan, or desktop fan. Features a dual-clip design for waist attachment.
- **Integrated Power Bank:** Built-in 3000mAh battery allows you to charge your cell phone on the go.
- **Cell Phone Stand:** Conveniently holds your smartphone for hands-free viewing while enjoying the fan's airflow.
- **Three Adjustable Speeds:** Choose from low, mid, or high speed settings for customized airflow.
- **Long Working Hours:** Provides up to 12 hours of continuous operation on low speed, 7 hours on mid speed, and 4 hours on high speed.
- **Quiet Operation:** Designed for low noise (less than 36dB), ensuring minimal disturbance.
- **Portable & Foldable:** Compact and lightweight design (5.3 ounces) makes it easy to carry in a bag or pocket. Features 180° tilting for adjustable airflow.
- **USB Rechargeable:** Easily recharges in approximately 2 hours using any USB power source (laptop, power bank, car charger, wall socket).

WHAT'S IN THE Box

- AMENKER Handheld & Portable Mini Fan (Model: F30)
- USB Type-C Charging Cable
- Neck Lanyard
- User Manual (this document)

SETUP

Charging the Fan

Before first use, fully charge the fan. The fan has a built-in 3000mAh battery.

1. Locate the USB Type-C charging port on the side of the fan (near the USB output port).
2. Connect the provided USB Type-C cable to the fan's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall adapter, power bank).
4. The indicator lights near the power button will illuminate to show charging status. Once fully charged (approximately 2 hours), all indicator lights will be solid.



Figure 1: Charging the fan and using it as a power bank. The image shows the fan's USB output port and a phone being charged by the fan.

Attaching the Neck Lanyard

To use the fan as a neck fan, attach the provided lanyard:

1. Locate the hanging hole on the bottom of the fan's handle.

2. Thread the loop of the neck lanyard through the hanging hole.
3. Pass the rest of the lanyard through the loop and pull to secure.



Figure 2: The AMENKER mini fan in various configurations: handheld, worn around the neck, and standing on a desk.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment

The fan features a single power button for all controls.

- **Power On (Low Speed):** Press the power button once to turn on the fan at low speed.
- **Medium Speed:** Press the power button a second time to switch to medium speed.
- **High Speed:** Press the power button a third time to switch to high speed.
- **Power Off:** Press the power button a fourth time to turn off the fan.

THREE SPEED MODE



Low speed



12 H

Mid speed



7 H

High speed



4 H



Figure 3: Fan speed settings and approximate battery life: Low (12H), Mid (7H), High (4H).

Using as a Handheld Fan

Hold the fan by its handle. The fan head can be adjusted 180 degrees to direct airflow as needed.

Upgrade Design Mini Fan



Figure 4: The fan's versatile design allows for use as a neck fan, desktop fan, or handheld fan.

Using as a Neck Fan

With the lanyard attached, hang the fan around your neck. Adjust the fan head to provide airflow towards your face or chest. The fan can be folded to point upwards for neck cooling.



Portable Neck Fan

Realize freedom of hands

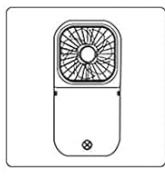


Figure 5: The portable neck fan allows for hands-free cooling, easily carried in a bag or worn.


Using as a Desktop Fan / Cell Phone Stand

Fold the fan to create a stable base. The fan head can be angled to provide airflow while the base acts as a stand for your cell phone.

Neck Fan with Cell Phone Stand



Closed

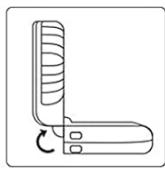

Folding



Open



Using a state



Enjoy the coolness while doing your own thing.



Figure 6: The fan's integrated stand supports a cell phone, ideal for video calls or media consumption.

Using as a Power Bank

The fan can provide emergency power to your mobile devices.

1. Ensure the fan is charged.
2. Connect your device's charging cable to the USB output port on the fan.
3. Your device should begin charging.

3000mAh Power Bank

Bring it, you can charge your phone any time.



Figure 7: The fan can act as a power bank to charge your phone via its USB output port.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to wipe the fan's exterior. Do not use harsh chemicals or abrasive cleaners. Do not immerse the fan in water.
- Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight. Ensure the battery is partially charged (around 50%) before storage to prolong battery life.
- Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the fan regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using the provided USB Type-C cable.
Weak airflow.	Fan is on low speed; Fan blades are obstructed.	Increase the fan speed. Ensure nothing is blocking the fan blades or air intake.
Phone not charging from fan.	Fan battery is low; Incorrect cable or connection.	Ensure the fan is sufficiently charged. Use a compatible USB cable and ensure it's securely connected to the fan's USB output port and your phone.
Fan makes unusual noise.	Obstruction in fan blades; Internal issue.	Turn off the fan and check for any foreign objects obstructing the blades. If the noise persists, discontinue use and contact customer support.

SPECIFICATIONS

Brand: AMENKER

Model Name: F30

Color: Green

Electric Fan Design: Wearable Fan

Power Source: USB

Product Dimensions: 0.79"D x 3.15"W x 6.54"H

Special Feature: Portable, Lightweight, Foldable

Noise Level: 30 dB

Wattage: 5 watts

Voltage: 5 Volts

Switch Type: Push Button

Item Weight: 5.3 ounces (150 Grams)

Included Components: Cord

Indoor/Outdoor Usage: Indoor

Control Method: Touch

Blade Material: Plastic

Reusability: Rechargeable

Number of Power Levels: 3

Battery: 1 Lithium Ion battery required (included)

OFFICIAL PRODUCT VIDEO



Video: Demonstrates the features and various uses of the AMENKER Portable Neck Fan, including its foldable design, hands-free operation, and power bank functionality.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact AMENKER customer service through the retailer where the

product was purchased or visit the official AMENKER website. Please retain your proof of purchase for warranty claims.

Contact Information: Refer to your purchase receipt or the AMENKER brand store on Amazon for the most current support details.

Online Resources: For additional information and FAQs, please visit the AMENKER store page:[AMENKER Store](#)

© 2025 AMENKER. All rights reserved.