

[Manuals.plus](#) /

› [Auertech](#) /

› Auertech Portable Washing Machine Instruction Manual

Auertech AU8575

Auertech Portable Washing Machine Instruction Manual

Model: AU8575

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- Always ensure the washing machine is placed on a stable, level surface to prevent tipping or excessive vibration during operation.
- Do not operate the machine with a damaged power cord or plug. If damaged, contact customer support for repair.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical components in water or other liquids.
- Unplug the machine from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Ensure proper drainage. The drain hose must be positioned correctly to allow water to flow freely.
- Do not overload the machine. Adhere to the specified capacities for washing and spinning.
- Avoid storing the machine in excessively damp environments, such as directly inside a shower, as this can affect its longevity.
- It is normal for the washing machine to contain residual water from factory testing. This does not indicate a used product.

2. PRODUCT OVERVIEW AND FEATURES

The Auertech Portable Washing Machine is designed for compact living spaces, offering efficient laundry solutions with its twin tub design.



Figure 2.1: Front view of the Auortech Portable Washing Machine.

Key Features:

- **Twin Tub Design:** Separate washing and spinning tubs allow for simultaneous operation.
- **Large Capacity:** 18 lbs washing capacity and 10 lbs spinning capacity.
- **Powerful Motor:** Equipped with a 1300 RPM motor for efficient cleaning.
- **Time Control:** Independent timers for wash (up to 15 minutes) and spin (up to 5 minutes).
- **User-Friendly Controls:** Three control switches for wash time, wash mode, and spin time.

- **Durable Construction:** High-quality PP (Polypropylene) body, resistant to deformation and rust.
- **Compact & Portable:** Dimensions of 27" (W) x 15" (D) x 32" (H) make it suitable for dorms, apartments, and RVs.
- **Integrated Lint Filter:** Effectively collects lint during the wash cycle.
- **Dual Water Inlets:** Convenient for connecting the water supply hose.
- **Low Noise Operation:** Designed with a stable base and integrated molding for reduced shaking and noise.

Large Washing & Spinning Capacity Brilliant Cleaning Performance

						
SHEETS	Or	T-SHIRTS	Or	COATS	Or	PANTS
2 SETS		20 PCS		3 PCS		8 PAIRS



Figure 2.2: Illustration of the washing (18 lbs) and spinning (10 lbs) capacities.

SEPARATE TIMER

0-15 MINS WASHING | 0-5 MINS DRYING



Figure 2.3: Dimensions of the portable washing machine: 32 inches high, 27 inches wide, and 15 inches deep.



Figure 2.4: Close-up views of the drain hose, transport lid, dual water inlet, and lint filter.

3. SETUP GUIDE

The Auertech Portable Washing Machine requires no complex installation. Follow these steps for initial setup.

3.1 Unpacking

1. Carefully remove the washing machine from its packaging.
2. Check for any visible damage during transit. If damage is found, do not operate the machine and contact customer support.
3. Ensure all included components are present: the washing machine unit, drain hose, and draining basket.

3.2 Placement

1. Choose a flat, stable, and dry surface for the washing machine. Uneven surfaces can cause excessive vibration and noise.
2. Ensure there is sufficient space around the machine for ventilation and access to the water source and drain.
3. Place the machine near a water faucet and a drain point (e.g., sink, bathtub).

Compact & Portable Design Fit in More Places



Figure 3.1: The compact design allows placement in various locations such as bathrooms, living rooms, or balconies.

3.3 Connecting Water and Drain Hoses

1. **Water Inlet:** Connect the water supply hose (not included, typically a standard garden hose or faucet adapter) to one of the dual water inlets on the top panel of the machine. Ensure a secure connection to prevent leaks.
2. **Drain Hose:** Attach the provided drain hose to the drain outlet on the side of the machine. Position the other end of the drain hose into a sink, bathtub, or other suitable drainage area. Ensure the drain hose is not kinked or blocked, and that it is positioned lower than the machine's drain outlet for gravity drainage.

4. OPERATING INSTRUCTIONS

Operating your Auertech Portable Washing Machine is straightforward with its intuitive controls.



Figure 4.1: Close-up of the control panel with knobs for wash timer, wash/drain selector, and spin timer.

4.1 Washing Clothes

1. **Load Clothes:** Open the lid of the washing tub (left side) and place your clothes inside. Do not exceed the 18 lbs capacity.
2. **Add Water:** Connect the water supply hose to one of the water inlets and fill the washing tub with the desired amount of water. You can also manually add water using a bucket.
3. **Add Detergent:** Add your preferred laundry detergent directly into the washing tub.
4. **Set Wash Mode:** Turn the middle knob (Wash/Drain Selector) to the desired wash mode (e.g., Standard, Gentle, or Strong, depending on the model's specific settings, or simply 'Wash').
5. **Set Wash Time:** Turn the left knob (Wash Timer) to set the washing duration, up to 15 minutes. The machine will start washing automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the middle knob (Wash/Drain Selector) to 'Drain' to empty the water from the washing tub. Ensure the drain hose is properly positioned.

4.2 Spinning Clothes

1. **Transfer Clothes:** After draining the wash water, transfer the washed clothes from the washing tub to the spin tub (right side). Ensure clothes are evenly distributed to prevent imbalance during spinning. You may use the included draining basket for delicate items or to help contain clothes in the spin tub.
2. **Secure Lid:** Close the lid of the spin tub securely.
3. **Set Spin Time:** Turn the right knob (Spin Timer) to set the spinning duration, up to 5 minutes. The machine will begin spinning.
4. **Remove Clothes:** Once the spin cycle is complete, open the lid and carefully remove your spun clothes.

For rinsing, you can either run a short wash cycle with clean water after the initial wash and drain, or rinse clothes manually before spinning.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Lint Filter

The lint filter, located inside the washing tub, collects lint and debris during the wash cycle. It should be cleaned regularly, ideally after every few washes, to maintain washing efficiency.

- Locate the lint filter inside the washing tub.
- Carefully remove the filter.
- Remove any accumulated lint and debris. You can rinse it under running water.
- Reinsert the clean lint filter back into its position.



Figure 5.1: Detail of the removable lint filter for easy cleaning.

5.2 General Cleaning and Storage

- After each use, ensure all water is drained from both tubs. You may need to tilt the machine slightly to drain any residual water that might collect at the bottom.
- Wipe down the interior and exterior surfaces of the machine with a soft, damp cloth. For stubborn stains, a mild, non-abrasive cleaner can be used.
- Keep the lids open for a short period after use to allow the tubs to air dry and prevent mildew or odors.
- Store the machine in a dry, well-ventilated area, away from direct sunlight or extreme temperatures.

6. TROUBLESHOOTING

If you encounter any issues with your Auertech Portable Washing Machine, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; Power outage; Timer not set.	Ensure power cord is securely plugged in; Check household power supply; Set the wash or spin timer.
Water not draining.	Drain hose kinked or blocked; Drain selector not set to 'Drain'; Drain hose positioned too high.	Straighten the drain hose and clear any blockages; Turn the middle knob to 'Drain'; Ensure the drain hose is lower than the machine's drain outlet.

Problem	Possible Cause	Solution
Excessive vibration or noise during operation.	Machine not on a level surface; Clothes unevenly distributed in the tub; Overloaded tub.	Adjust the machine's position to a level surface; Redistribute clothes evenly, especially in the spin tub; Reduce the load to within capacity limits.
Poor washing performance.	Insufficient water; Too much detergent (excessive suds); Overloaded tub; Dirty lint filter.	Add more water; Use appropriate amount of detergent; Reduce load size; Clean the lint filter.
Spin cycle not effective.	Clothes unevenly distributed; Overloaded spin tub; Spin lid not closed properly.	Rearrange clothes evenly in the spin tub; Do not exceed 10 lbs capacity for spinning; Ensure the spin tub lid is fully closed.

If the problem persists after trying these solutions, please contact Auertech customer support for further assistance.

7. SPECIFICATIONS

Brand	Auertech
Model Number	AU8575
Type	Portable Twin Tub Washing Machine
Washing Capacity	18 lbs
Spinning Capacity	10 lbs
Max Spin Speed	1300 RPM
Product Dimensions (L x W x H)	15"D x 27"W x 32"H (38.1 cm D x 68.6 cm W x 81.3 cm H)
Item Weight	28 pounds (12.7 kg)
Voltage	110 Volts
Material	High-quality PP (Polypropylene) body, Stainless Steel internal components
Color	White
Control Type	Knob
Access Location	Top Load
Included Components	Drain Hose, Draining Basket

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for the Auertech Portable Washing Machine (Model AU8575) may vary. Please refer to the product packaging, the warranty card included with your purchase, or the official Auertech website for the most accurate and up-to-date warranty terms and conditions.

8.2 Customer Support

For any questions, concerns, or technical assistance regarding your Auertech Portable Washing Machine, please contact our customer support team. We are committed to providing prompt and helpful service.

Contact information can typically be found on the Auertech official website or on the product packaging. Our team aims to respond to inquiries within 24 hours to resolve any issues you may encounter.

© 2023 Auertech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B093D8GRG1>

More documents and user manuals: <https://manuals.plus/>