

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Soundnova](#) /
- › [Soundnova K9 Pro Portable Bluetooth Speaker Instruction Manual](#)

## Soundnova USK9

# Soundnova K9 Pro Portable Bluetooth Speaker Instruction Manual

Model: USK9 | Brand: Soundnova

## 1. INTRODUCTION

Thank you for choosing the Soundnova K9 Pro Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference. The K9 Pro is a versatile multimedia speaker designed for various indoor and outdoor events, featuring powerful audio output, multiple connectivity options, and a long-lasting battery.

## 2. SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Use only the specified charging cable and power adapter to prevent damage or fire.
- Keep the speaker away from heat sources, direct sunlight, and flammable materials.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a comfortable level.

## 3. PACKAGE CONTENTS

Please check the package for the following items:

- Soundnova K9 Pro Portable Bluetooth Speaker
- Remote Control
- AUX Audio Cable
- USB-C Charging Cable

- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Soundnova K9 Pro speaker.



Figure 4.1: Front and Side View of Soundnova K9 Pro with labeled components.

### Front Panel Controls:

- **LED Display Screen:** Shows current mode, battery status, and track information.
- **Number Buttons (0-9):** For direct track selection or radio frequency input.
- **Mode Button (M):** Switches between Bluetooth, TF Card, U Disk, and AUX modes.
- **Previous Button (KK):** Skips to the previous track or navigates menus.
- **Play/Pause Button (||):** Plays or pauses audio playback.
- **Next Button (>>):** Skips to the next track or navigates menus.
- **Volume Knob:** Rotates to adjust the master volume.

### Side Panel Ports:

- **Mic Input:** 6.35mm jack for connecting a microphone.
- **Mic Volume Knob:** Adjusts the microphone volume.
- **AUX Input:** 3.5mm jack for connecting external audio devices.
- **USB-C Port:** For charging the speaker.
- **TF/SD Card Slot:** For inserting a TF (Micro SD) card.
- **USB Flash Disk Slot:** For inserting a USB flash drive.
- **ON/OFF Switch:** Powers the speaker on or off.

# Multi-functional Speaker

Super Easy Operate Music



Figure 4.2: Multi-functional capabilities of the Soundnova K9 Pro speaker.

## 5. SETUP

### 5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB-C charging cable to the USB-C port on the speaker and the other end to a compatible USB power adapter (not included) or a computer USB port. The LED display will indicate charging status. A full charge takes approximately 4-5 hours and provides up to 15 hours of playtime at 60% volume.

# 15 Hours Playtime

## 8000 mAh battery



Figure 5.1: Speaker charging via USB-C and internal battery illustration.

## 5.2 Powering On/Off

To power on the speaker, slide the ON/OFF switch located on the side panel to the 'ON' position. The LED display will light up. To power off, slide the switch to the 'OFF' position.

## 6. OPERATING INSTRUCTIONS

### 6.1 Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'BLUE' on the LED display.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth device.
3. Search for 'Soundnova K9 Pro' in the list of available devices and select it to connect.
4. Once successfully paired, the speaker will emit a confirmation tone, and 'BLUE' on the LED display will stop flashing.

5. You can now play audio from your device through the speaker. The Bluetooth range is up to 66 feet (20.11 meters).



Figure 6.1: Speaker compatibility with various operating systems.

## 6.2 TF Card / U Disk Playback

1. Insert a TF (Micro SD) card or a USB flash drive into the corresponding slot on the side panel.
2. The speaker will automatically switch to TF Card or U Disk mode and begin playing audio files. If it does not switch automatically, press the 'M' (Mode) button to select the correct mode.
3. Use the Previous (KK) and Next (>>) buttons to navigate tracks.
4. Press the Play/Pause (||) button to pause or resume playback.

## 6.3 AUX Input

1. Connect one end of the supplied 3.5mm AUX audio cable to the AUX input port on the speaker.
2. Connect the other end of the cable to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the 'M' (Mode) button until the speaker enters AUX mode.
4. Audio from your external device will now play through the speaker. Control playback from your external device.

## 6.4 Microphone Usage and Digital Recording

1. Connect a microphone (not included) to the Mic Input jack on the side panel.
2. Adjust the microphone volume using the Mic Volume knob.
3. To record, ensure a TF card or USB flash drive is inserted. While in TF Card or U Disk mode, press and hold the 'Mode' button or a designated recording button (if available on the remote) to start recording. Press again to stop. Refer to the remote control section for specific recording button functions.

## 6.5 Remote Control Functions

The included remote control allows convenient operation from a distance.



Figure 6.2: Remote control for the speaker.

- **Power Button:** Turns the speaker on/off.
- **Mode Button:** Cycles through input modes (Bluetooth, TF Card, U Disk, AUX).
- **Volume Up/Down:** Adjusts the master volume.
- **Play/Pause:** Plays or pauses audio.
- **Previous/Next:** Skips tracks.
- **Number Buttons (0-9):** For direct track selection or radio frequency input.
- **EQ Button:** Cycles through equalizer presets (if available).
- **Mute Button:** Mutes or unmutes audio.

## 6.6 LED Lights

The speaker features integrated LED lights that enhance the listening experience. These lights typically synchronize with the audio playback. There may be a dedicated button on the remote control or speaker to cycle through light modes or turn them off.



Figure 6.3: Speaker with active LED lighting.

## 7. MAINTENANCE

- **Cleaning:** Wipe the speaker's surface with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the supplied USB-C cable.
No sound from speaker.	Volume is too low or muted. Incorrect input mode. Device not connected properly.	Increase volume, check mute status. Press 'M' button to select correct input mode. Reconnect Bluetooth device or AUX cable.
Bluetooth pairing fails.	Speaker is not in pairing mode. Device Bluetooth is off. Speaker is too far from device. Interference.	Ensure speaker is in Bluetooth mode (flashing 'BLUE'). Turn device Bluetooth off and on. Move speaker closer to device. Avoid strong electromagnetic interference.
Remote control not working.	Remote battery is low or dead. Obstruction between remote and speaker.	Replace remote control battery. Ensure clear line of sight between remote and speaker.
TF Card/U Disk not playing.	Card/Disk not inserted correctly. Incompatible file format.	Reinsert the TF card/U Disk. Ensure audio files are in a compatible format (e.g., MP3).

## 9. SPECIFICATIONS

# BASS SPEAKERS

High-density wooden cavity for stronger bass playback



Figure 9.1: Speaker dimensions and internal structure.

Feature	Detail
Model Number	USK9
Speaker Type	Portable Bluetooth Speaker with Subwoofer
Output Power	35W (50W Peak)
Subwoofer Driver	15W, 3.5 Inches Diameter
Tweeters	2 x 10W, 2.25 Inches Diameter
Battery Capacity	8000mAh Lithium Polymer
Playtime	Up to 15 hours (at 60% volume)
Charging Port	USB-C
Bluetooth Version	5.0

Feature	Detail
Bluetooth Range	Up to 66 feet (20.11 meters)
Connectivity	Bluetooth, TF Card, U Disk, AUX, Microphone
Control Method	Manual Buttons, Remote Control
Product Dimensions (D x W x H)	5.8" x 9" x 8.5" (14.7cm x 22.9cm x 21.6cm)
Item Weight	4.55 pounds (2.07 kg)
Material	High-density wooden cavity
Special Features	LCD Display, LED Lights, Digital Song Recording, Bass Boost

## 10. WARRANTY AND SUPPORT

The Soundnova K9 Pro Portable Bluetooth Speaker comes with a **3-Year Warranty** and a **30-Day Return Policy**. For warranty claims, technical support, or any inquiries regarding your product, please contact Soundnova customer service through the retailer's platform or the official Soundnova website. Please have your purchase receipt and model number (USK9) ready when contacting support.