

Deerma 6955578034558

Deerma DEM-HX10W Shoe Dryer User Manual

Model: 6955578034558

1. INTRODUCTION

Thank you for choosing the Deerma DEM-HX10W Shoe Dryer. This device is designed to efficiently dry and deodorize various types of footwear, helping to maintain hygiene and extend the life of your shoes. Please read this manual thoroughly before operation to ensure safe and optimal use of the product.

2. SAFETY PRECAUTIONS

- Always ensure the power cord and plug are in good condition before use. Do not use if damaged.
- Do not immerse the main unit in water or any other liquid.
- Keep the device away from flammable materials and heat sources.
- Ensure proper ventilation during operation. Do not cover the air vents.
- Unplug the device from the power outlet when not in use or before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not attempt to repair or modify the device yourself. Contact authorized service personnel for any repairs.
- Use the device only for its intended purpose of drying shoes.

3. SETUP

3.1 Unpacking and Inspection

Carefully remove all components from the packaging. Inspect the device for any signs of damage during transit. If any damage is found, do not use the product and contact customer support.

3.2 Component Identification

- Main Unit with Control Panel
- Drying Nozzles (x2)
- Power Cord

3.3 Initial Setup

1. Place the main unit on a stable, flat, and heat-resistant surface.
2. Insert the drying nozzles into the designated ports on the main unit. Ensure they are securely attached.
3. Plug the power cord into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the **Power Button** on the control panel to turn the device on. Press it again to turn off.

4.2 Selecting Drying Modes

The Deerma DEM-HX10W offers multiple drying modes:

- **Standard Drying:** For general drying of most shoe types.
- **Gentle Drying:** Lower heat setting for delicate materials like leather or silk.
- **Ozone Sterilization:** Activates ozone to help eliminate odors and bacteria. Use in a well-ventilated area.

Press the **Mode Button** repeatedly to cycle through the available drying modes. The selected mode will be indicated on the display.

4.3 Setting the Timer

Press the **Timer Button** to set the desired drying duration. Each press will increase the time in increments (e.g., 30 minutes, 60 minutes, 90 minutes, etc.). The maximum drying time is typically 120 minutes. The device will automatically shut off once the set time has elapsed.

4.4 Using the Drying Nozzles

Place your shoes onto the drying nozzles, ensuring the nozzles extend fully into the shoe interior. For optimal drying, ensure the shoe opening is positioned to allow air circulation. You can dry one or two pairs of shoes simultaneously depending on the model's design.

5. MAINTENANCE

5.1 Cleaning the Device

1. Always unplug the device before cleaning.
2. Wipe the exterior of the main unit and drying nozzles with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Ensure all parts are completely dry before plugging the device back in.

5.2 Filter Maintenance

The Deerma DEM-HX10W may include an air filter to prevent dust from entering the unit or to assist with deodorization. Refer to the specific product diagram for filter location. If present, regularly check and clean the filter according to the following steps:

1. Locate the filter cover, usually on the back or bottom of the unit.
2. Remove the filter and gently tap it to remove loose dust. If washable, rinse under running water and allow to air dry completely before reinserting.
3. Replace the filter and secure the cover.

5.3 Storage

When not in use, store the shoe dryer in a cool, dry place, away from direct sunlight and moisture. Ensure the power cord is neatly coiled and not kinked.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on	Not plugged in; Power outlet issue; Device malfunction	Check power connection; Try a different outlet; Contact customer support
Shoes not drying effectively	Incorrect mode selected; Insufficient drying time; Poor shoe placement; Overly wet shoes	Select appropriate mode; Increase drying time; Ensure nozzles are fully inserted; Pre-dry excessively wet shoes
Unusual odor during operation	First-time use (normal); Filter needs cleaning; Ozone mode active	Odor should dissipate after initial uses; Clean or replace filter; Ensure ventilation when using ozone mode
Device overheating	Blocked air vents; Prolonged use; Malfunction	Ensure vents are clear; Allow device to cool down; Unplug and contact customer support

7. SPECIFICATIONS

Feature	Detail
Brand	Deerma
Color	black
Model Number	6955578034558
ASIN	B093HC9G2D
Manufacturer	deerma
Language	English
Batteries Required	1 Lithium-ion (not included, for remote if applicable)
Software Updates Guaranteed Until	Information not available
Spare Parts Availability	Information not available

8. WARRANTY INFORMATION

Deerma products are manufactured to high-quality standards. This product comes with a limited warranty against defects in materials and workmanship. The specific terms and duration of your warranty may vary based on your region and point of purchase. Please refer to the warranty card included with your product or your purchase documentation for detailed information. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact Deerma customer service. Contact information can typically be found on the product packaging, the official Deerma website, or through your retailer. Please have your model number (DEM-HX10W) and proof of purchase ready when contacting support.

Thank you for choosing Deerma.