

[Manuals.plus](#) /

› [Sylvania](#) /

› Sylvania SP917 Rechargeable Dual 6.5-Inch 100-Watt Bluetooth Light-up Speaker User Manual

Sylvania SP917

Sylvania SP917 Rechargeable Dual 6.5-Inch 100-Watt Bluetooth Light-up Speaker User Manual

MODEL: SP917

Brand: Sylvania

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Sylvania SP917 Rechargeable Dual 6.5-Inch 100-Watt Bluetooth Light-up Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The Sylvania SP917 is a versatile portable speaker designed for various audio needs, featuring Bluetooth connectivity, USB/microSD playback, FM radio, and a microphone input for karaoke or announcements. Its rechargeable battery makes it ideal for both indoor and outdoor use.

Key Features:

- 100 watts of peak power output for robust sound.
- Dual 6.5-inch woofers and a 1-inch balanced tweeter for clear audio reproduction.
- Integrated 3-band equalizer (bass, mid, treble) for sound customization.
- Bluetooth wireless streaming for seamless connection with smart devices.
- USB and microSD card slots for digital audio file playback.
- Built-in FM radio tuner.
- Dynamic light-up effects for an enhanced audio-visual experience.
- Rechargeable battery for portable use.
- Includes a wired microphone and remote control.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid placing the speaker near heat sources such as radiators, stoves, or other heat-producing appliances.

- Use only the provided charging cable and power adapter.
- Do not attempt to disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from children and pets.
- Ensure proper ventilation around the speaker during operation.
- Do not block any ventilation openings.
- Avoid listening at excessively high volumes for prolonged periods to prevent hearing damage.

PACKAGE CONTENTS

Please check the package for the following items:

- Sylvania SP917 Bluetooth Light-up Speaker
- Wired Microphone
- Remote Control
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Sylvania SP917 speaker, remote control, and wired microphone.

This image displays the main components included with the Sylvania SP917 speaker system. The large black speaker unit is shown alongside its compact silver remote control and the black wired microphone with its cable.





Figure 2: Front and top panel of the Sylvania SP917 speaker.

This image provides a closer look at the speaker's front grille covering the dual woofers, and the top control panel featuring the digital display, various buttons, and light-up elements.

Control Panel (Top View):

- **Digital Display:** Shows current mode, track number, FM frequency, etc.
- **Power Button:** Turns the speaker on/off.
- **Mode Button:** Switches between Bluetooth, USB, MicroSD, FM Radio, and AUX modes.
- **Play/Pause Button:** Controls playback.
- **Previous/Next Track Buttons:** Navigates through tracks or FM stations.
- **Volume Knobs/Buttons:** Adjusts master volume.
- **Microphone Input:** 6.35mm jack for the wired microphone.
- **USB Port:** For USB flash drives.
- **MicroSD Card Slot:** For microSD memory cards.
- **AUX Input:** 3.5mm jack for external audio devices.
- **Charging Port:** For connecting the USB charging cable.



Figure 3: Remote Control for Sylvania SP917 speaker.

This image shows the compact remote control with various buttons for power, mode selection, volume, track navigation, equalizer settings, and numerical input.



Figure 4: Wired Microphone included with Sylvania SP917 speaker.

This image displays the black wired microphone with its attached cable and 6.35mm jack, featuring an ON/OFF switch.

SETUP

1. Charging the Speaker

1. Locate the charging port on the speaker's control panel.
2. Connect the provided USB charging cable to the speaker's charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a powered USB port.
4. The charging indicator light will illuminate, typically red, while charging. It will turn off or change color (e.g., blue/green) when fully charged.
5. Allow approximately 4-6 hours for a full charge before first use.

2. Powering On/Off

- To power on, press and hold the **Power** button on the control panel or remote control until the digital display lights up.
- To power off, press and hold the **Power** button again until the display turns off.

3. Connecting the Microphone

- Insert the 6.35mm jack of the wired microphone into the "MIC IN" port on the speaker's control panel.
- Ensure the microphone's ON/OFF switch is in the "ON" position when in use.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the **Mode** button on the speaker or remote control to cycle through available input modes: Bluetooth, USB, MicroSD, FM Radio, and AUX.

2. Bluetooth Mode

1. Switch the speaker to Bluetooth mode. The digital display will show "BLUE" or a similar indicator, and the speaker will emit a pairing tone.
2. Enable Bluetooth on your smart device (smartphone, tablet, etc.).
3. Search for "SYLVANIA SP917" or a similar name in your device's Bluetooth settings.
4. Select the speaker to pair. Once connected, the speaker will confirm with an audible tone.
5. You can now play audio from your device through the speaker. Use your device's controls or the speaker's/remote's playback buttons (**Play/Pause**, **Previous/Next**) to control playback.

3. USB/MicroSD Card Mode

1. Insert a USB flash drive or a MicroSD card (with pre-loaded MP3/WMA audio files) into the respective port/slot on the speaker.
2. The speaker will automatically switch to USB or MicroSD mode and begin playing the first compatible audio file. If not, press the **Mode** button to select the correct input.
3. Use the **Play/Pause**, **Previous/Next** buttons on the speaker or remote to control playback.
4. The **RPT** (Repeat) button on the remote can be used to cycle through repeat modes (e.g., repeat one, repeat all).

4. FM Radio Mode

1. Switch the speaker to FM Radio mode using the **Mode** button.
2. To auto-scan and save available stations, press and hold the **Play/Pause** button. The speaker will scan and store stations automatically.
3. Use the **Previous/Next** buttons to navigate through the saved FM stations.
4. For manual tuning, short press the **Previous/Next** buttons to fine-tune the frequency.

5. AUX Input Mode

- Connect an external audio device (e.g., MP3 player, laptop) to the speaker's 3.5mm AUX input port using a 3.5mm audio cable (not included).
- Switch the speaker to AUX mode using the **Mode** button.
- Audio will now play from your connected device. Control playback and volume primarily from the external device.

6. Microphone Usage

- Ensure the microphone is connected to the "MIC IN" port and its switch is "ON".
- Adjust the microphone volume using the dedicated microphone volume control (if available) or the main volume control.
- You can sing along to music playing from any source (Bluetooth, USB, FM, AUX).

7. Equalizer (EQ) and Volume Control

- Use the **VOL-** and **VOL+** buttons on the remote control or the volume knob on the speaker to adjust the master volume.
- Press the **EQ** button on the remote control to cycle through preset equalizer modes (e.g., Pop, Rock, Jazz, Classic, Flat) to optimize sound for different music genres.
- The speaker also features a 3-band equalizer board (Bass, Mid, Treble) for manual sound adjustment. These

controls are typically physical knobs on the top panel. Adjust them to fine-tune the audio output to your preference.

8. Light Effects

- The speaker features dynamic light-up effects. These lights typically synchronize with the music or can be set to a specific pattern.
- Refer to the speaker's control panel or remote for a dedicated light control button (if available) to turn the lights on/off or change patterns.

MAINTENANCE

Cleaning:

- Always power off and unplug the speaker before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces of the speaker.
- For stubborn marks, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, benzene, or other volatile solvents, as they may damage the finish.
- Avoid spraying liquids directly onto the speaker.

Storage:

- When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to fully charge the battery every 3-6 months to maintain its lifespan, even if not in use.

Battery Care:

- The speaker uses a built-in rechargeable Lithium-Ion battery.
- Do not expose the battery to excessive heat, direct sunlight, or fire.
- If the speaker will not be used for a long time, charge it periodically to prevent deep discharge, which can reduce battery life.
- Dispose of batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable.
No sound from speaker.	Volume is too low or muted. Incorrect mode selected. Audio cable not connected properly (AUX).	Increase volume. Press the Mode button to select the correct input. Ensure audio cables are fully inserted.
Bluetooth device cannot pair.	Speaker not in pairing mode. Device too far from speaker. Bluetooth disabled on device.	Ensure speaker is in Bluetooth mode. Move device closer to speaker (within 10m/33ft). Enable Bluetooth on your device. Forget "SYLVANIA SP917" on your device and try pairing again.
USB/MicroSD playback not working.	Unsupported file format. Corrupt files. Drive/card not inserted correctly.	Ensure files are MP3/WMA format. Try different files. Reinsert the USB drive/MicroSD card.

Problem	Possible Cause	Solution
FM radio reception is poor.	Weak signal. Interference.	Reposition the speaker. Extend the antenna (if applicable). Try auto-scanning again.
Microphone not working.	Microphone switch is OFF. Cable not connected properly.	Ensure microphone switch is ON. Check microphone cable connection.

SPECIFICATIONS

Model Name	Rechargeable Dual 6.5-Inch 100-Watt Bluetooth Light-up Speaker with Digital Display, Microphone, and FM Radio
Brand	Sylvania
Output Power	100 Watts
Speaker Configuration	Dual 6.5-inch Woofers, 1-inch Balanced Tweeter
Connectivity Technology	Bluetooth, USB, MicroSD, AUX (3.5mm), FM Radio
Audio Input	USB, Microphone, AUX
Special Features	Bluetooth, Digital Display, Light-up Effects, 3-band Equalizer
Power Source	Battery Powered, Corded Electric
Battery Type	Lithium Ion (Rechargeable, included)
Color	Black
Dimensions (L x W x H)	67.06 x 28.19 x 27.94 cm (approx. 26.4 x 11.1 x 11 inches)
Weight	4.92 kg (approx. 10.85 lbs)
UPC	058465812911

WARRANTY AND SUPPORT

Sylvania products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Sylvania website.

For technical support, troubleshooting assistance, or service inquiries, please contact Sylvania customer support. Contact details can typically be found on the product packaging, the official Sylvania website, or by searching for "Sylvania customer support" online.

When contacting support, please have your product model number (SP917) and purchase information readily available.

Online Resources:

- Sylvania Official Website: www.sylvania.com (Please note: This is a generic placeholder URL, actual URL may vary. Refer to product packaging for precise information.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

If I purchase a second Sylvania SP917 speaker, can it be paired with the first one for stereo sound?

Based on the available manual for the Sylvania SP917, there is no mention of TWS (True Wireless Stereo) or a multi-speaker pairing feature. The instructions focus on pairing a single speaker to a smart...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B093JG82RG>

More documents and user manuals: <https://manuals.plus/>