

[Manuals.plus](#) /

> [ZdalaMit](#) /

> RC-406 Replacement Remote Commander User Manual

ZdalaMit RC-406

RC-406 Replacement Remote Commander User Manual

For Kenwood CD Receivers

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your ZdalaMit RC-406 Replacement Remote Commander. This remote is designed to be a direct replacement for various Kenwood CD Receiver models, offering seamless control without the need for complex programming.

SETUP

Battery Installation

The RC-406 remote requires two (2) AAA batteries for operation. To install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.

Initial Setup

No programming is required for the RC-406 Replacement Remote Commander. Once batteries are installed, the remote is ready for immediate use with compatible Kenwood CD Receivers. Simply point the remote towards your receiver and begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions on the RC-406 remote control:



REMOTE CONTROL UNIT
RC-406

^
v

SRC

VOL

OFF

↶

ATT

▲
ENT
▶ ||
▼

DIRECT
/OK

AUD

*AM-

#FM+

1

2

3

4

5

6

7

8

9

📞

0

📞



Image: Front view of the RC-406 Replacement Remote Commander, showing all buttons and their labels for Kenwood CD Receivers.

Button Functions:

- **VOL (Volume Up/Down):** Adjusts the audio volume level. The up arrow increases volume, the down arrow decreases it.
- **SRC (Source):** Cycles through available audio sources such as CD, Radio, USB, Bluetooth, and AUX input.
- **OFF:** Turns the Kenwood CD Receiver power off.
- **ATT (Attenuate):** Mutes or temporarily reduces the audio volume. Press again to restore volume.
- **AUD (Audio):** Accesses audio settings, equalizer controls, or sound adjustments.
- **DIRECT / OK:** Confirms selections in menus or enters direct input mode for certain functions.
- **Navigation Buttons (Up, Down, Left, Right):** Used for menu navigation, browsing tracks, or tuning radio stations.
- **ENT (Enter/Play/Pause):** Confirms selections, plays media, or pauses playback.
- **Skip/Seek Buttons (Previous/Next Track):** Skips to the previous or next track, chapter, or radio station.
- ***AM-:** Selects the AM radio band or may decrease a numerical setting.
- **#FM+:** Selects the FM radio band or may increase a numerical setting.
- **Number Buttons (0-9):** Used for direct input of radio presets, track numbers, or other numerical entries.
- **Green Call Button:** Initiates a call or answers an incoming call when connected to a compatible Bluetooth device.
- **Red End Call Button:** Ends an active call or rejects an incoming call.

MAINTENANCE

To ensure the longevity and optimal performance of your RC-406 remote commander, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as they may damage the surface or internal components.
- **Battery Care:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact or dropping, which can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your RC-406 remote, consult the table below for common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote range is poor or intermittent.	Obstruction between remote and receiver; low batteries; remote too far from receiver.	Ensure a clear line of sight to the receiver's IR sensor; replace batteries; move closer to the receiver.
Certain functions not working.	Remote not compatible with specific receiver model features; receiver not in correct mode.	Verify your Kenwood receiver model is listed as compatible. Ensure the receiver is in the appropriate mode (e.g., CD mode for CD functions).
Buttons feel sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote surface with a soft, dry cloth. Avoid spills.

SPECIFICATIONS

Model Number: RC-406

Product Dimensions: 4 x 2 x 0.5 inches (approximately)

Item Weight: 1.02 ounces (without batteries)

Batteries Required: 2 x AAA batteries (not included)

Connectivity Technology: Infrared (IR)

Compatible Devices: Various Kenwood CD Receivers (refer to product description for full list of compatible models)

Special Feature: Ergonomic design

SUPPORT

Should you have any questions or require further assistance with your ZdalaMit RC-406 Replacement Remote Commander, please do not hesitate to contact our customer support. We are committed to providing prompt and helpful service.

For support inquiries, please refer to the contact information provided with your purchase or visit the ZdalaMit official support channels.