

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GUESS](#) /

› [GUESS Digital Watch GW0271G2 User Manual](#)

GUESS GW0271G2

GUESS Digital Watch GW0271G2 User Manual

Model: GW0271G2

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your GUESS Digital Watch, model GW0271G2. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch. This timepiece features a digital display, a durable stainless steel case, and is water-resistant up to 50 meters.

PRODUCT OVERVIEW

The GUESS Digital Watch GW0271G2 combines a classic design with modern digital functionality. Familiarize yourself with the watch's components:



Figure 1: Front View of GUESS Digital Watch GW0271G2. This image displays the watch face, highlighting the digital display and the four control buttons located on the sides of the case.

Watch Components:

- **Digital Display:** Shows time, date, and other functions.
- **Light Button:** Activates the backlight for visibility in low light conditions.
- **Mode Button:** Cycles through different display modes (e.g., time, alarm, stopwatch).
- **ST./STP Button:** Used for starting/stopping functions like the stopwatch.
- **Set Button:** Used to enter and confirm settings adjustments.
- **Stainless Steel Case and Bracelet:** Provides durability and a secure fit.



Figure 2: Angled View of Watch Display. This image provides a closer look at the digital display and the texture of the gold-toned stainless steel bracelet.



Figure 3: Side View with Clasp Open. This image illustrates the watch's profile and the design of the stainless steel bracelet and clasp mechanism.

SETUP

Initial Power On and Battery

Your watch comes with a pre-installed C battery. If the display is blank or dim, the battery may need to be activated or replaced. It is recommended to have battery replacement performed by a qualified watch technician.

Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Press the **SET** button to select the digit you wish to adjust (e.g., hours, minutes).
3. Use the **ST./STP** button to increase the value. The **LIGHT** button may be used to decrease the value on some models.
4. Continue pressing **SET** to move to the next setting (minutes, year, month, day).
5. Adjust each value using the **ST./STP** (and potentially **LIGHT**) button.
6. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

Note: Specific button functions for increasing/decreasing values may vary slightly. Refer to the on-screen prompts if

available.

OPERATING INSTRUCTIONS

Basic Time Display

In normal mode, the watch displays the current time (hours, minutes, seconds), day of the week, and date (month, day).

Using the Backlight

Press the **LIGHT** button to illuminate the display for a few seconds, improving visibility in dark environments.

Cycling Through Modes (MODE Button)

Press the **MODE** button to cycle through the available functions, which typically include:

- Normal Time Display
- Alarm Setting
- Stopwatch
- Date Display (if not shown in normal mode)

Using the Stopwatch

1. Press the **MODE** button until the stopwatch function is displayed (usually showing "00:00:00").
2. Press the **ST./STP** button to start the stopwatch.
3. Press **ST./STP** again to pause the stopwatch.
4. To reset the stopwatch, press the **SET** button while the stopwatch is paused.
5. Press the **MODE** button to return to the normal time display.

Setting the Alarm

1. Press the **MODE** button until the alarm setting mode is displayed.
2. Press the **SET** button to select the hour digit.
3. Use the **ST./STP** button to adjust the hour.
4. Press **SET** again to select the minute digit.
5. Use the **ST./STP** button to adjust the minutes.
6. Press **SET** to confirm and activate/deactivate the alarm (an alarm icon usually appears when active).
7. Press the **MODE** button to exit the alarm setting mode.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your GUESS watch, wipe it regularly with a soft, dry cloth. For the stainless steel bracelet, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.

Water Resistance (50m)

Your watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational

swimming, showering, or washing hands. It is **not** suitable for diving, snorkeling, or high-impact water sports. Avoid operating buttons while the watch is wet or submerged, as this can compromise the water seal.

Battery Replacement

The watch is powered by one C battery. When the display becomes dim or stops functioning, the battery may need replacement. It is strongly recommended to have battery replacement performed by an authorized GUESS service center or a professional watchmaker to ensure the water resistance is maintained.

Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid placing it near magnetic fields, which can affect timekeeping accuracy.

TROUBLESHOOTING

If you encounter issues with your GUESS Digital Watch GW0271G2, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery. It is recommended to seek professional service.
Time is incorrect.	Time settings need adjustment.	Refer to the "Setting Time and Date" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If unresponsive, the battery may be too low. If problem persists after battery replacement, contact customer support.
Condensation inside the watch.	Water resistance compromised.	Stop using the watch immediately and take it to an authorized service center for inspection and repair.

If the problem persists after attempting these solutions, please contact GUESS customer support or an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	GW0271G2
Brand	GUESS
Movement Type	Digital (Quartz)
Case Material	Stainless Steel
Case Diameter	44.5 Millimetres
Band Material	Stainless Steel
Band Color	Gold

Feature	Detail
Water Resistance	50 Meters (5 ATM)
Battery	1 C battery (included)
Item Weight	185 Grams
Product Dimensions	17.78 x 12.7 x 17.78 cm

WARRANTY AND SUPPORT

Manufacturer's Warranty

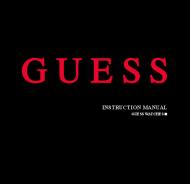
Your GUESS Digital Watch GW0271G2 comes with a one-year manufacturer's warranty. This warranty covers manufacturing defects from the date of purchase. It does not cover damage resulting from improper use, accidents, unauthorized repairs, normal wear and tear, or battery replacement.

Customer Support

For warranty claims, technical assistance, or service inquiries, please contact GUESS customer support. Refer to the official GUESS website or your purchase documentation for the most current contact information.

Please retain your proof of purchase for warranty validation.

Related Documents - GW0271G2

	<p>GUESS Watch User Guide</p> <p>Comprehensive user guide for GUESS watches, covering setup, care, warranty, and various movement functionalities. Learn how to operate and maintain your GUESS timepiece.</p>
	<p>Guess Watches Instruction Manual - Features, Operation, and Setup</p> <p>Comprehensive instruction manual for Guess watches, covering operation, features, chronograph functions, analog-digital models, and setup procedures for various watch types. Includes guidance on time, date, day, alarm, timer, and stopwatch functions.</p>
	<p>Guess BT 4G PU Leather Case with Metal Logo - Blue User Manual</p> <p>Official user manual for the Guess BT 4G PU Leather case with metal logo in blue. Learn about product features, safety guidelines, usage instructions, care, and warranty.</p>

	<p>Guess Script Metal Logo Headphones: User Manual and Specifications</p> <p>Comprehensive guide for Guess Script Metal Logo headphones, covering first use, controls, LED indicators, and technical specifications. Includes instructions for pairing, playback, calls, and voice assistant activation.</p>
	<p>GUESS Wireless Headphones OF-V27 User Manual</p> <p>User manual for GUESS Wireless Headphones, model OF-V27, providing instructions on Bluetooth pairing, operation, charging, and specifications.</p>
	<p>GUESS Connect iOS User Manual: A Complete Overview</p> <p>This user manual provides a comprehensive guide to setting up and using the GUESS Connect iOS smartwatch, covering features, controls, app integration, and troubleshooting.</p>