

## LaView LV-D01-R

# LaView LV-D01-R Electronic Deadbolt Lock User Manual

Model: LV-D01-R | Brand: LaView

### 1. INTRODUCTION

This manual provides detailed instructions for the installation, programming, operation, and maintenance of your LaView LV-D01-R Electronic Deadbolt Lock. Please read this guide thoroughly before installation and use to ensure proper function and security.



Figure 1: LaView LV-D01-R Electronic Deadbolt Lock (Exterior and Interior Units)

## 2. PRE-INSTALLATION CHECKLIST

Before beginning installation, ensure your door meets the following specifications:

- **Door Hole Diameter:** 2-1/8 inches (54 mm).
- **Backset:** Adjustable to either 2-3/8 inches (60 mm) or 2-3/4 inches (70 mm).
- **Door Edge Hole Diameter:** 1 inch (25 mm).
- **Door Thickness:** 1-3/8 inches to 2 inches (35 mm to 50 mm).

If drilling is required, refer to the provided cutout template in your product packaging.



Figure 2: Door Measurement and Component Diagram

### 3. INSTALLATION GUIDE

Follow these steps for a successful installation:

1. **Adjust Latch (if necessary):** The latch can be adjusted for 2-3/8" (60mm) or 2-3/4" (70mm) backsets. Rotate and pull the backset as instructed to extend the latch if needed.
2. **Install Latch:** Insert the latch into the door edge hole. Ensure the latch plate is flush with the door edge and secure with screws.
3. **Install Exterior Assembly:** Place the exterior keypad assembly onto the door, aligning the spindle through the latch.
4. **Install Mounting Plate:** Secure the interior mounting plate to the exterior assembly using the provided screws.
5. **Connect Cables:** Carefully connect the cable from the exterior assembly to the interior assembly.
6. **Install Interior Assembly:** Attach the interior assembly to the mounting plate, ensuring the thumb turn spindle engages correctly. Secure with screws.

7. **Install Batteries:** Insert 4 AA batteries into the battery compartment.
8. **Test Operation:** Test the lock with the default master code and the physical key to ensure smooth operation.

## 4. PROGRAMMING AND OPERATION

---

The default master PIN code is **12345678**. For security, you will be prompted to change this code before adding any other user codes.

### 4.1 Change Master Code

To change the master code:

1. Press **\*\***.
2. Enter the current master code (default: 12345678).
3. Press **#**.
4. Press **1**.
5. Press **#**.
6. Enter your new master code (4-10 digits).
7. Press **#**.
8. Re-enter your new master code to verify.
9. Press **#** to store the new master code.

A green indicator light confirms successful setting; a red light indicates failure.

### 4.2 Add User Codes

You can program up to 20 unique user codes (4-10 digits) for family and friends.

1. Press **\*\***.
2. Enter the master code.
3. Press **#**.
4. Press **2**.
5. Press **#**.
6. Enter a new user code (4-10 digits).
7. Press **#**.
8. Re-enter the new user code to verify.
9. Press **#** to store the user code.

### 4.3 Add One-Time Codes

One-time codes are useful for temporary access and expire after a single use.

1. Press **\*\***.
2. Enter the master code.
3. Press **#**.
4. Press **7**.
5. Press **#**.
6. Enter a new one-time code (4-10 digits).
7. Press **#**.
8. Re-enter the new one-time code to verify.

9. Press **#** to add the one-time code.

The one-time code will expire after unlocking the lock once.

#### 4.4 Enable/Disable Auto-Lock

The Auto-Lock function automatically locks the door after 30 seconds of inactivity. It is disabled by default.

- **To Enable Auto-Lock:** Press **\*\*** + Master Code + **#** + **51** + **#**.
- **To Disable Auto-Lock:** Press **\*\*** + Master Code + **#** + **52** + **#**.

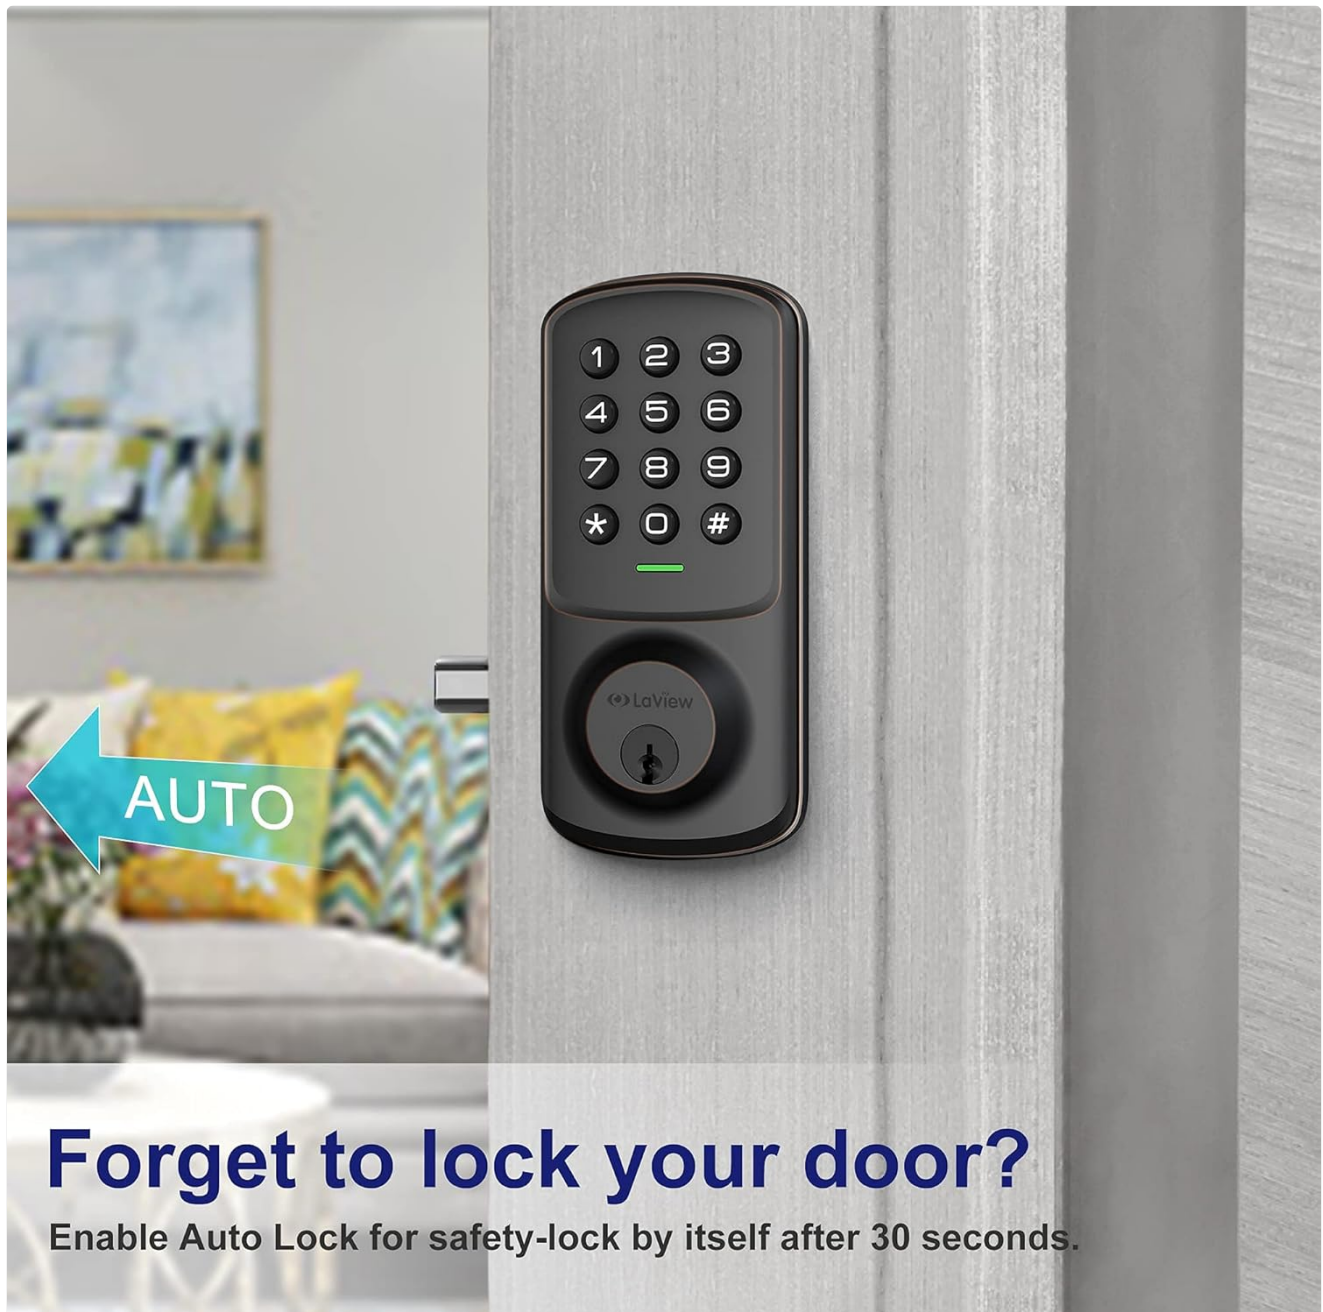


Figure 3: Auto-Lock Feature

#### 4.5 Enable Vacation Mode

Vacation mode provides enhanced security when you are away. If the lock is unlocked by key or thumb turn in this mode, it will beep for 1 minute.

1. Press **\*\***.
2. Enter the master code.
3. Press **#**.



4. Press **6**.
5. Press **#** to enable Vacation Mode.

To disable Vacation Mode, repeat the same steps.

## 4.6 Key Override

The lock includes a physical key override for manual access, especially useful if batteries are depleted.



Figure 4: Key Override for Manual Access

## 5. MAINTENANCE

### 5.1 Battery Replacement

The lock is powered by 4 AA batteries. A low battery indicator will alert you when replacement is needed.



Figure 5: Low Battery Alert

To replace batteries, remove the interior cover, replace the old batteries with new ones, and reattach the cover.

## 5.2 Cleaning

Clean the lock's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

## 6. SPECIFICATIONS

| Feature            | Detail                  |
|--------------------|-------------------------|
| Manufacturer       | LaView                  |
| Model Number       | LV-D01-R                |
| Product Dimensions | 17.78 x 12.7 x 10.16 cm |

|                     |  |
|---------------------|--|
| Item Weight         | 454 g  |
| Colour              | Bronze   |
| Material            | Metal  |
| Lock Type           | Keypad   |
| Special Features    | Keyless Entry, Auto Lock, 20 User Codes, 1-Touch Motorized Locking                               |
| Batteries Required  | Yes (4 AA batteries)   |
| Included Components | Backup Key*1, Deadbolt/Latch*1, Exterior Assembly*1, Mounting Plate*1, Strike Screws*2, Strike*1 |

## 7. TROUBLESHOOTING

- **Lock Not Responding:** Check battery levels. Replace batteries if the low battery indicator is active.
- **Incorrect Code Entry:** Ensure you are pressing the correct sequence and the '#' key after each code entry.
- **Setting Failure:** If the indicator light flashes red after attempting a setting change, the operation was unsuccessful. Re-attempt the steps carefully.
- **Physical Key Not Working:** Ensure the key is fully inserted and turned correctly. Check for any obstructions in the keyway.
- **Auto-Lock Malfunction:** Verify that the Auto-Lock function is enabled (refer to section 4.4).

## 8. WARRANTY AND SUPPORT

LaView offers lifetime technical support from the date of purchase. For any concerns or assistance, please contact their customer service team:

- **Online Phone Calls:** Monday to Friday, 9 am to 5 pm PDT.
- **24/7 Online After-Sales Email Service.**


Refer to your product packaging or the official LaView website for specific contact details.





[LaView R3 Indoor Security Camera User Manual](#)

Comprehensive user manual for the LaView R3 Indoor Security Camera, covering setup, installation, features like motion detection, troubleshooting, and FCC compliance.

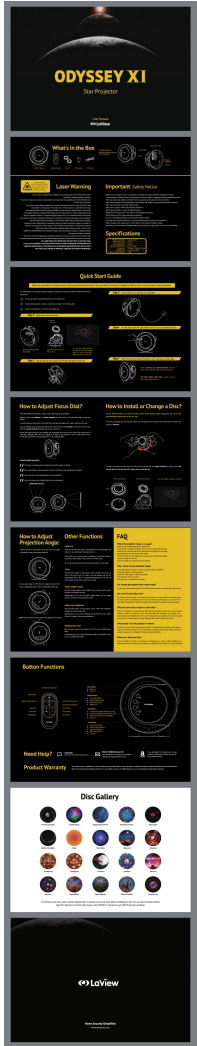

[LaView Odyssey XI Star Projector User Manual](#)

User manual for the LaView Odyssey XI Star Projector, covering setup, operation, safety, and troubleshooting for immersive celestial displays.





[LaView F1 Indoor Security Camera User Manual and Setup Guide](#)

Comprehensive guide for setting up and using the LaView F1 Indoor Security Camera, including installation, troubleshooting, and product specifications.



[LaView B9 Outdoor Security Camera Quick Start Guide](#)

Get started with your LaView B9 Outdoor Security Camera. This guide provides step-by-step instructions for app setup, Wi-Fi connection, pairing, and integrating with Alexa for smart home security.

|   |  |
|---|--|
|   | <p><a href="#">LaView LV-N9916C6E 16-Channel H.264 IP Network Video Recorder Specifications</a></p> <p>Detailed specifications for the LaView LV-N9916C6E, a 16-channel H.264 IP Network Video Recorder supporting up to 6MP resolution, featuring 16 PoE interfaces, multiple video outputs, and extensive storage options.</p> |
|  | <p><a href="#">LaView L2 Light Bulb Camera Quick Start Guide</a></p> <p>A quick start guide for setting up the LaView L2 Light Bulb Camera, including app setup, live view, playback, and optional Alexa integration.</p>  |