

[Manuals.plus](#) /

› [MohMus](#) /

› MohMus 5-Pack Multi-Layer Paper Vacuum Cleaner Bags for Kärcher and Swirl K 223 Models

MohMus Kärcher 2501, 2501 TE, 2501TE, 2601, 2601 Plus, 3001 Plus, Hot, SE 2001, SE 3001, 3001 Hot, Swirl K 223, K223

MohMus Multi-Layer Paper Vacuum Cleaner Bags Instruction Manual

For Kärcher and Swirl K 223 Compatible Models

1. PRODUCT OVERVIEW

This manual provides instructions for the MohMus 5-pack of multi-layer paper vacuum cleaner bags. These bags are designed to offer high suction power and optimal fine dust filtration, ensuring efficient cleaning performance for compatible vacuum cleaner models.



Image 1.1: MohMus multi-layer paper vacuum cleaner bags. These bags are constructed from durable, multi-layered paper for effective dust retention.

2. COMPATIBILITY

These MohMus vacuum cleaner bags are compatible with a range of Kärcher vacuum cleaner models and Swirl K 223. Please verify your vacuum cleaner model against the list below:

- **Kärcher Models:** 2501, 2501 TE, 2501TE, 2601, 2601 Plus, 3001 Plus, Hot, SE 2001, SE 3001, 3001 Hot, A 2120 ME
- **Other Compatible Models:** Swirl K 223, K223, Karcher 6.904-143, 6904143, NT181, Puzzi 90, WD2500M

Note: Manufacturer names and references are used solely for compatibility reference. These parts are not associated with the original manufacturer's parts.

3. SETUP AND INSTALLATION

Follow these general steps to install a new vacuum cleaner bag. Specific steps may vary slightly depending on your vacuum cleaner model. Always refer to your vacuum cleaner's original instruction manual for detailed instructions.

1. **Power Off and Unplug:** Before attempting any installation or maintenance, ensure your vacuum cleaner is turned off and unplugged from the power outlet to prevent electrical hazards.
2. **Locate Bag Compartment:** Open the vacuum cleaner's bag compartment. This is typically secured by clips or latches.
3. **Remove Old Bag (if applicable):** Carefully remove the full or old dust bag. Be cautious to avoid spilling dust. Dispose of the old bag according to local waste disposal guidelines.
4. **Insert New Bag:** Take a new MohMus paper dust bag. Align the bag's cardboard collar or opening with the vacuum cleaner's bag inlet. Push firmly until the bag is securely seated. Ensure there are no gaps where dust could escape.
5. **Close Compartment:** Close the bag compartment cover securely until it latches into place.

4. OPERATING INSTRUCTIONS

Once the new dust bag is installed, your vacuum cleaner is ready for operation. The primary function of these bags is to collect dust and debris during vacuuming.

- **Regular Use:** Operate your vacuum cleaner as usual. The multi-layer paper construction of these bags ensures efficient capture of fine dust particles.
- **Bag Replacement:** Replace the dust bag when it is approximately two-thirds full, or when you notice a decrease in suction power. Overfilling the bag can reduce vacuum efficiency and potentially damage the motor.

5. MAINTENANCE

Proper maintenance of your vacuum cleaner bags ensures optimal performance and longevity of your appliance.

- **Storage:** Store unused vacuum cleaner bags in a cool, dry place, away from direct sunlight and moisture. Keep them in their original packaging until ready for use.
- **Disposal:** Dispose of used dust bags responsibly according to your local waste management regulations. Ensure the bag opening is sealed before disposal to prevent dust from escaping.

6. TROUBLESHOOTING

If you encounter issues related to the vacuum cleaner bags, consider the following:

- **Reduced Suction Power:**
 - Check if the dust bag is full. Replace it if necessary.
 - Ensure the bag is correctly installed and sealed within the compartment.
 - Inspect the vacuum cleaner's hose and attachments for blockages.
- **Dust Escaping from Vacuum:**
 - Verify that the dust bag is properly seated and the compartment lid is fully closed.
 - Check the bag for any tears or damage. Replace if damaged.
 - Ensure all filters in your vacuum cleaner are clean and correctly installed.

7. SPECIFICATIONS

Brand	MohMus
Material	Multi-layer Paper
Quantity	5 bags per set
Special Features	Optimal fine dust filtration, High suction power
Compatible Models	Kärcher 2501, 2501 TE, 2501TE, 2601, 2601 Plus, 3001 Plus, Hot, SE 2001, SE 3001, 3001 Hot, A 2120 ME, Swirl K 223, K223, Karcher 6.904-143, 6904143, NT181, Puzzi 90, WD2500M

8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the seller or your purchase documentation. MohMus aims to provide high-quality replacement parts for your cleaning needs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question