

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TFA-Dostmann](#) /
- › [TFA-Dostmann 60.4519.01 Digital Wall Radio Controlled Clock User Manual](#)

TFA-Dostmann 60.4519.01

TFA-Dostmann 60.4519.01 Digital Wall Radio Controlled Clock User Manual

Model: 60.4519.01

1. INTRODUCTION

Thank you for choosing the TFA-Dostmann 60.4519.01 Digital Wall Radio Controlled Clock. This manual provides detailed instructions for the setup, operation, and maintenance of your new clock. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image 1.1: The TFA-Dostmann 60.4519.01 clock displayed in a typical office environment, showcasing its clear digital display and wall-mount capability.

2. SAFETY INFORMATION

- Keep this instruction manual for future reference.
- Do not expose the device to extreme temperatures, vibrations, or shocks.
- Avoid direct sunlight.
- Do not immerse the device in water or other liquids.
- Use only the specified battery type (2 x AA 1.5V). Ensure correct polarity when inserting batteries.
- Remove depleted batteries promptly to prevent leakage and damage.
- Do not attempt to repair the device yourself. Contact qualified personnel for service.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- TFA-Dostmann 60.4519.01 Digital Wall Radio Controlled Clock
- Instruction Manual

4. PRODUCT OVERVIEW

The TFA-Dostmann 60.4519.01 clock features a large, clear digital display showing time, date, day of the week, and indoor temperature. It is radio-controlled for accurate timekeeping and includes an alarm with snooze function.



Image 4.1: Front display of the clock, indicating time, date, day of the week, and indoor temperature.

4.1 Display Elements

- **Time Display:** Large digits for hours and minutes.
- **Radio Signal Indicator:** Icon indicating successful reception of the radio time signal.
- **Date Display:** Day and month.
- **Day of the Week:** Displayed in one of 8 selectable languages.
- **Temperature Display:** Current indoor temperature.
- **Alarm Icon:** Indicates if the alarm is active.

4.2 Control Buttons (Rear Panel)



Image 4.2: Rear panel of the clock, highlighting the battery compartment and control buttons.

- **MODE:** Used to switch between display modes and enter setting mode.
- **WAVE:** Initiates manual radio signal search.
- **ALARM:** Activates/deactivates the alarm and enters alarm setting mode.
- **UP:** Increases values during setting, changes display options.
- **DOWN:** Decreases values during setting, changes display options.

5. SETUP

5.1 Battery Installation

1. Open the battery compartment cover on the back of the clock.
2. Insert two (2) new AA 1.5V batteries, observing the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

5.2 Initial Radio Signal Reception

After battery insertion, the clock will automatically begin searching for the DCF radio time signal. This process can take several minutes. During this time, the radio signal icon will flash. Once the signal is successfully received, the icon will appear solid, and the correct time, date, and day of the week will be displayed.

- For best reception, place the clock near a window and away from electronic devices that may cause interference.
- If the signal is not received within 10 minutes, press the **WAVE** button to initiate a manual search.
- If reception is consistently poor, you may need to manually set the time.

5.3 Placement

The clock can be placed on a flat surface using its integrated stand or mounted on a wall using the hanging hole on the back. Ensure the chosen location allows for optimal radio signal reception.

6. OPERATING

6.1 Manual Time and Date Setting

If the radio signal is unavailable or you prefer manual setting:

1. Press and hold the **MODE** button for approximately 3 seconds to enter setting mode. The digit to be set will flash.
2. Use the **UP** or **DOWN** buttons to adjust the value.
3. Press the **MODE** button again to confirm the setting and move to the next parameter (e.g., hours, minutes, year, month, day).
4. Repeat steps 2 and 3 until all desired settings are configured.
5. Press **MODE** one last time or wait for 15 seconds for the clock to exit setting mode automatically.

6.2 Time Zone Setting

To adjust for different time zones:

1. In normal time display mode, press and hold the **MODE** button until the time zone offset flashes.
2. Use the **UP** or **DOWN** buttons to set the desired time zone offset (e.g., +1 for one hour ahead, -1 for one hour behind).
3. Press the **MODE** button to confirm and exit.

6.3 Day of the Week Language

The day of the week can be displayed in 8 different languages:

1. In normal time display mode, press the **DOWN** button repeatedly.
2. Cycle through the available languages until your preferred language is displayed.

6.4 Alarm Function

To set the alarm:

1. Press the **ALARM** button once to display the current alarm time.
2. Press and hold the **ALARM** button for approximately 3 seconds. The alarm hour will flash.
3. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
4. Press **ALARM** again to set the alarm minute, then adjust with **UP** or **DOWN**.

5. Press **ALARM** one last time to confirm and exit alarm setting mode.

To activate/deactivate the alarm:

- In normal time display mode, press the **ALARM** button briefly. The alarm icon will appear/disappear on the display, indicating its status.

Snooze Function: When the alarm sounds, press any button (except **ALARM**) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (duration may vary, typically 5-10 minutes).

6.5 Display Modes (Seconds/Calendar Week)

The clock allows you to toggle between displaying seconds or the calendar week:

- In normal time display mode, press the **UP** button repeatedly to cycle through the available display options for the lower right segment (e.g., seconds, calendar week).

7. MAINTENANCE

7.1 Cleaning

Clean the clock with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing.

7.2 Battery Replacement

When the display becomes dim or the clock stops functioning, it is time to replace the batteries. Follow the instructions in Section 5.1 for battery installation. Always replace both batteries at the same time with new ones of the same type.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are depleted or incorrectly inserted.	Replace batteries with new AA 1.5V batteries, ensuring correct polarity.
Clock does not receive radio signal.	Interference, poor location, or signal not available.	Move the clock to a different location (e.g., near a window). Press WAVE button for manual search. If persistent, set time manually.
Incorrect time displayed.	Radio signal not received, or time zone incorrect.	Check radio signal reception. Adjust time zone setting if necessary. Set time manually if radio signal is not reliable.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm icon is visible on the display. Verify alarm time settings.

9. SPECIFICATIONS

- **Model:** 60.4519.01
 - **Brand:** TFA-Dostmann
 - **Display Type:** Digital
 - **Power Source:** Battery Powered (2 x AA 1.5V, not included)
 - **Material:** Plastic
 - **Mounting Type:** Wall Mount / Tabletop
 - **Functions:** Radio-controlled time, Indoor Temperature, Date, Day of the Week (8 languages), Time Zone Setting, Alarm with Snooze Function, Seconds/Calendar Week display.
 - **Product Dimensions:** 21.5 x 16 x 2.6 cm (L x W x H)
 - **Weight:** 313 g
-

10. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support or service inquiries, please contact your retailer or the TFA-Dostmann customer service department.
