

Brightever 9033-BK

Brightever 2-Pack Dusk to Dawn Outdoor Wall Lantern Instruction Manual

Model: 9033-BK

1. INTRODUCTION

Thank you for choosing the Brightever 2-Pack Dusk to Dawn Outdoor Wall Lantern. This manual provides essential information for the safe installation, operation, and maintenance of your new outdoor lighting fixtures. Please read these instructions thoroughly before installation and retain them for future reference.

These outdoor wall lanterns feature a sophisticated photocell sensor for automatic dusk-to-dawn operation, durable construction, and a unique waterfall glass design, suitable for various outdoor applications.



Image: The Brightever 2-Pack Dusk to Dawn Outdoor Wall Lanterns, showcasing their design and integrated sensors.

2. PRODUCT OVERVIEW

Key Features:

- **Dusk to Dawn Photocell Sensor:** Automatically turns the light on at dusk and off at dawn, optimizing energy efficiency.
- **Durable Construction:** Features sturdy, thick waterfall glass and an anti-corrosion pure aluminum framework with a black alloy finish.
- **Weather Resistant:** Designed to withstand various weather conditions including rain, snow, and extreme temperatures.
- **Open Bottom Design:** Facilitates easy bulb replacement and maintenance.
- **Standard E26 Base:** Compatible with a variety of E26 Edison bulbs (LED, CFL, Incandescent). Bulbs are not included.



Image: Key features including unique waterfall glass, upgraded photocell sensor, E26 standard base, and corrosion-resistant aluminum construction.



Image: Illustration of the fixture's weather resistance, including sunproof, windproof, snowproof, and waterproof capabilities.

What's in the Box:

- 2 x Brightever Outdoor Wall Lanterns
- 1 x Instruction Manual
- Mounting Hardware (including 3x 10AWG Wire Connectors, 2x M4-25 Phillips' Head Screws per fixture)

Product, Details



Upgraded IC Sensor

Accessories Pack x 2



Image: Product dimensions and included mounting hardware. Each fixture includes wire connectors and screws.

3. SAFETY INFORMATION

WARNING: To avoid the risk of fire, electric shock, or personal injury, always follow these safety guidelines:

- Always turn off the power at the main circuit breaker or fuse box before beginning installation, maintenance, or bulb replacement.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes and ordinances.
- Use only bulbs of the specified type and wattage. Refer to the "Specifications" section for details.
- Do not install on a dimmer switch if using the dusk-to-dawn feature, as it may interfere with the sensor's operation.
- Handle glass components with care to prevent breakage.

4. INSTALLATION INSTRUCTIONS

This fixture is designed for wall-mount installation. All necessary mounting hardware is included.

Tools Required (Not Included):

- Phillips head screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

Installation Steps:

1. **Turn Off Power:** Before starting, ensure the power supply to the junction box is turned off at the circuit breaker.
2. **Prepare Mounting Plate:** Attach the mounting plate (pre-assembled with the fixture) to the junction box using the provided screws. Ensure it is securely fastened.
3. **Make Electrical Connections:**
 - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box using a wire connector.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire connector.
 - Connect the **ground** wire from the fixture to the **ground** wire from the junction box (or to the green ground screw on the mounting plate) using a wire connector.
 - Ensure all connections are tight and secure. Wrap connections with electrical tape if desired for added insulation.
4. **Mount the Fixture:** Carefully align the fixture with the mounting plate and secure it with the provided screws.
5. **Install Bulb:** Insert an E26 base bulb (not included) into the socket. Do not exceed the maximum wattage specified in the "Specifications" section.
6. **Restore Power:** Turn the power back on at the circuit breaker.



Image: Product dimensions for reference during installation. Height: 12.6 inches, Width: 8.07 inches, Depth from wall: 8.07 inches.

5. OPERATION

The Brightever Outdoor Wall Lantern is equipped with a built-in dusk-to-dawn photocell sensor for automatic operation.

- **Automatic On/Off:** The sensor detects ambient light levels. The fixture will automatically turn on when it gets dark (dusk) and turn off when it becomes light (dawn).
- **Sensor Placement:** Ensure the photocell sensor (located on the top of the fixture) is not obstructed by

eaves, trees, or other objects that could block natural light. Avoid installing the fixture near other light sources (e.g., streetlights, floodlights) that could interfere with the sensor's ability to detect darkness, causing it to turn off prematurely.



Image: Illustration of the light turning off automatically during the day and turning on automatically at night due to the photocell sensor.

6. MAINTENANCE

Bulb Replacement:

1. **Turn Off Power:** Always turn off the power to the fixture at the circuit breaker before replacing the bulb.
2. **Access Bulb:** The fixture features an open bottom design. Simply reach into the bottom of the lantern to unscrew the old bulb.
3. **Install New Bulb:** Screw in a new E26 base bulb. Ensure the new bulb's wattage does not exceed the maximum specified (refer to "Specifications").
4. **Restore Power:** Turn the power back on at the circuit breaker.

Cleaning:

- Ensure the power is off and the fixture is cool before cleaning.
- Wipe the fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or glass.
- Regularly clean the photocell sensor to ensure optimal performance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on at night.	Power is off. Bulb is faulty or loose. Photocell sensor is obstructed or detecting too much light. Wiring issue.	Check circuit breaker. Replace or tighten bulb. Clear obstructions from the sensor. Relocate if near other light sources. Consult a qualified electrician.

Problem	Possible Cause	Solution
Light stays on during the day.	Photocell sensor is obstructed or not detecting enough light. Sensor is faulty.	Clear obstructions from the sensor. Ensure it receives direct daylight. Contact customer support.
Light flickers.	Loose bulb or wiring. Incompatible bulb type.	Tighten bulb or check wiring connections. Ensure bulb is compatible with E26 base and fixture specifications. Ensure the bulb is not on a dimmer switch if the dusk-to-dawn feature is active.

8. SPECIFICATIONS

Feature	Detail
Brand	Brightever
Model Number	9033-BK
Color	Black
Material	Metal (Aluminum), Waterfall Glass
Product Dimensions (L x W x H)	8.07" x 8.07" x 12.6"
Item Weight	5.7 Pounds (per 2-pack)
Power Source	Corded Electric
Voltage	120 Volts
Bulb Base	E26 (Bulb not included)
Max Wattage (LED)	14W
Max Wattage (Incandescent)	100W
Special Features	Dusk to Dawn Sensor, Waterproof, Anti-Rust, Energy Efficient
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes



Compatible with Variety E26 Edison Bulbs

(LED, CFL, Incandescent)

Bulbs are not included



Image: Various E26 base bulb types compatible with the fixture. Bulbs are not included.

9. WARRANTY AND SUPPORT

Brightever stands behind the quality of its products. While specific warranty details are not provided in this manual, we encourage customers to contact us directly for any product-related inquiries or support needs.

For assistance, please refer to the contact information provided on the product packaging or visit the official Brightever store online. Your satisfaction is our top concern.

Optional protection plans may be available for purchase separately to extend coverage beyond the manufacturer's standard policy.

© 2025 Brightever. All rights reserved.

Heath Zenith Model 4300 Diecast Motion Sensing Porch Light: Installation and Operation Guide

This guide provides comprehensive instructions for installing and operating the Heath Zenith Model 4300 Diecast Motion Sensing Porch Light. It covers features, requirements, operation modes, installation steps, wiring diagrams, troubleshooting, specifications, and warranty information.

[Savoy House 5-2020-BK/5-2021-BK/5-2022-BK Wall Lantern Assembly Instructions](#)

Step-by-step assembly instructions for Savoy House outdoor hardwired wall lanterns (models 5-2020-BK, 5-2021-BK, 5-2022-BK), including parts identification and installation guidance.

Z-Lite 522S-BK/522M-BK Outdoor Wall Sconce Assembly and Installation Instructions

Comprehensive guide for assembling and installing the Z-Lite 522S-BK and 522M-BK outdoor wall sconce. Includes safety warnings, step-by-step instructions, and parts identification.

Superior Decor F14501-BK Outdoor Wall Light Installation Guide

Step-by-step assembly and installation instructions for the Superior Decor F14501-BK outdoor wall light. Includes required tools, hardware, and wiring guidance.

[Project Source 11-Inch Outdoor Wall Light with Motion Sensor - Model JEL1691A Installation and Operation Manual](#)

Comprehensive guide for the Project Source 11-inch outdoor wall light (Model JEL1691A), covering installation, operation, troubleshooting, and warranty. Features motion sensing and dusk-to-dawn functionality.

[Kuna Camera Porch Light \(KNA-CP03-BK-01\) Installation and User Manual](#)

Comprehensive guide for installing and setting up the Kuna Camera Porch Light (KNA-CP03-BK-01), featuring package contents, safety warnings, step-by-step installation instructions, and WiFi setup.