

[Manuals.plus](#) /

> [Panasonic](#) /

> Panasonic 4K Ultra HD Smart Android LED TV TH-55JX750DX User Manual

Panasonic TH-55JX750DX

Panasonic 4K Ultra HD Smart Android LED TV

Model: TH-55JX750DX

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting
Support](#)

[Specifications](#)

[Warranty &](#)

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Panasonic 139 cm (55 Inches) 4K Ultra HD Smart Android LED TV, Model TH-55JX750DX. Please read this manual thoroughly before using the product to ensure safe and optimal performance.



Figure 1: Front view of the Panasonic TH-55JX750DX TV.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury to persons. Keep this manual for future reference.

- Do not expose this apparatus to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

SETUP

1. Unpacking and Assembly

Carefully remove the TV and all accessories from the packaging. Ensure all components listed in the "Included Components" section are present.

Attaching the Base Stands

1. Place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the two base stands with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws.



Figure 2: Rear view of the TV, indicating stand attachment points.

Wall Mounting (Optional)

If you intend to wall-mount the TV, refer to the instructions provided with your wall-mount bracket. Ensure the bracket is compatible with VESA standards for a 55-inch television.

2. Connecting External Devices

The TV features multiple ports for connecting various devices.

- **HDMI Ports (3):** Connect set-top boxes, Blu-ray players, gaming consoles.
- **USB Ports (2):** Connect hard drives, USB flash drives for media playback.
- **VGA Slot (1):** Connect a laptop or PC.
- **Headphone Jack (1):** Connect headphones for private listening.
- **AV Input/Output Slots (1 each):** Connect older devices using composite video and stereo audio cables.
- **RF Slot (1):** Connect an antenna for terrestrial broadcast reception.



Figure 3: Detailed view of TV connectivity ports.

3. Powering On

1. Connect the power cord to the TV and then to a power outlet.
2. Insert the two AAA batteries into the remote control, observing polarity.
3. Press the Power button on the remote control or on the TV to turn it on.



Figure 4: Panasonic TV Remote Control.

4. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes:

- Language selection.
- Network connection (Wi-Fi or Ethernet).
- Google account sign-in (for Android TV features).
- Channel scanning.

OPERATION

1. Remote Control Functions

The provided remote control allows full navigation and control of your TV. Key buttons include:

- **Power:** Turns the TV on or off.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Home:** Returns to the Android TV home screen.
- **Back:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts audio volume.
- **Mute:** Mutes or unmutes audio.
- **Google Assistant:** Activates voice command functionality.
- **Dedicated App Buttons:** Quick access to Netflix, Prime Video, YouTube, Google Play.

2. Smart TV Features (Android TV 10)

Your TV runs on Android TV 10, offering a wide range of smart functionalities.

Accessing Apps

From the Home screen, you can access pre-installed applications like Prime Video, YouTube, and Netflix. Additional apps can be downloaded from the Google Play Store.



Figure 5: Android TV Home Screen with applications.

Google Assistant

Use the Google Assistant button on your remote to issue voice commands for searching content, controlling smart home devices, or getting information.



Figure 6: Google Assistant functionality.

Chromecast Built-in

The TV includes Chromecast built-in, allowing you to cast content from compatible mobile devices or computers directly to your TV screen.

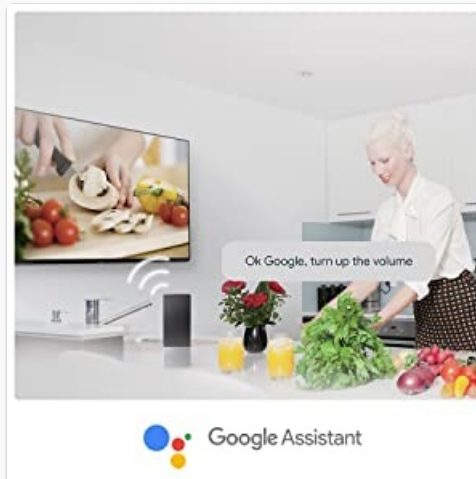


Figure 7: Chromecast built-in feature.

3. Display and Audio Settings

Access the TV's settings menu to customize picture and sound preferences. Options include:

- **Picture Modes:** Standard, Vivid, Movie, Game, Custom.
- **Sound Modes:** Standard, Music, Movie, Speech, Custom.
- **HDR Settings:** Adjust High Dynamic Range display.
- **Dolby Audio/DTS Studio Sound:** Enable or disable advanced audio processing.

MAINTENANCE

1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using abrasive cloths, waxes, or solvents.

2. Remote Control Care

- Replace batteries when the remote control's range decreases or it becomes unresponsive.
- Remove batteries if the remote control will not be used for an extended period.

TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
No power	Power cord disconnected; Power outlet not working.	Ensure power cord is securely connected. Test the outlet with another device.
No picture, but sound is present	Incorrect input source selected; Loose HDMI/AV cable.	Press the Source button on the remote to select the correct input. Check cable connections.
No sound, but picture is present	Volume muted or too low; External audio system issue.	Press the Volume Up button or Mute button. Check connections to external audio devices.
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and TV.	Replace batteries. Ensure correct polarity. Remove any obstructions.
Wi-Fi connection issues	Incorrect password; Router issues; TV too far from router.	Verify Wi-Fi password. Restart router. Move TV closer or use an Ethernet cable.
Smart TV apps not loading	Internet connection unstable; App cache full.	Check internet connection. Clear app cache in TV settings. Restart TV.

If the problem persists after attempting these solutions, please contact Panasonic customer support.

SPECIFICATIONS

Feature	Detail
Model Name	TH-55JX750DX
Display Size	139 cm (55 Inches)
Display Type	LED, IPS Grade Panel
Resolution	4K Ultra HD (3840 x 2160 pixels)
Refresh Rate	60 Hertz
Viewing Angle	178 Degrees
Operating System	Android TV 10
RAM	2 GB

Feature	Detail
Storage (ROM)	8 GB
Sound Output	20 Watts
Audio Technology	Dolby Audio, DTS Studio Sound
HDMI Ports	3
USB Ports	2
Other Connectivity	Wi-Fi, Bluetooth, VGA, Headphone Jack, AV In/Out, RF Slot
Product Dimensions (LxWxH)	122 x 7.5 x 71.5 cm
Item Weight	10.6 kg
Power Source	AC
Included Accessories	Remote Controller (with 2 AAA batteries), 2 Base Stands, User Manual, Warranty Card

WARRANTY AND SUPPORT

1. Warranty Information

This Panasonic TV comes with a **1 Year Standard Manufacturer Warranty** from Panasonic, covering manufacturing defects and issues arising from normal use. Please retain your purchase receipt and the warranty card for any warranty claims.

For detailed terms and conditions, refer to the warranty card included with your product.

2. Customer Support

For technical assistance, service requests, or further inquiries, please contact Panasonic customer support through their official website or the contact information provided in your warranty documentation.

You can visit the official Panasonic India website for support: www.panasonic.com/in/

© 2020 Panasonic. All rights reserved.

Model: TH-55JX750DX